



Keys Explained

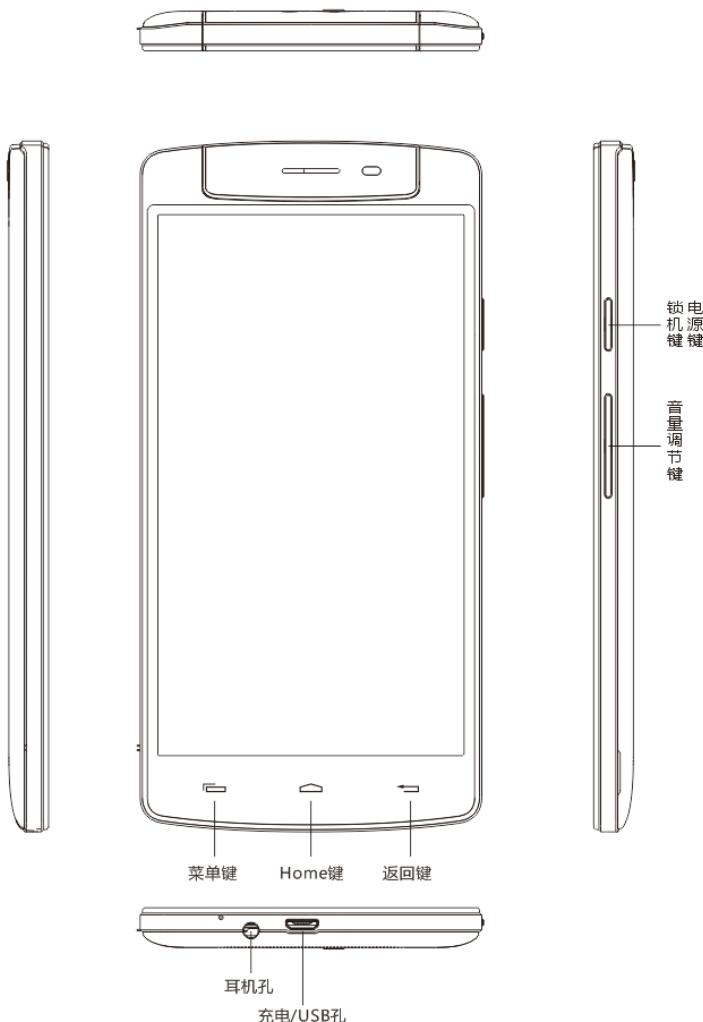

Key	Function
Power Key	<ul style="list-style-type: none">Hold to switch audio profiles, or to turn on or off Airplane mode, or to power off.Press to switch your phone to Sleep mode.Press to wake up your phone.
Home Key	<ul style="list-style-type: none">Press to return to the Home Screen from any application or screen.Hold to see recently used applications.
Menu Key	Press to get the options for the current screen.

Key	Function
Back Key	Press to go to the previous screen.
Volume Keys	Press or hold to turn the volume up or down.

Open the rear cover

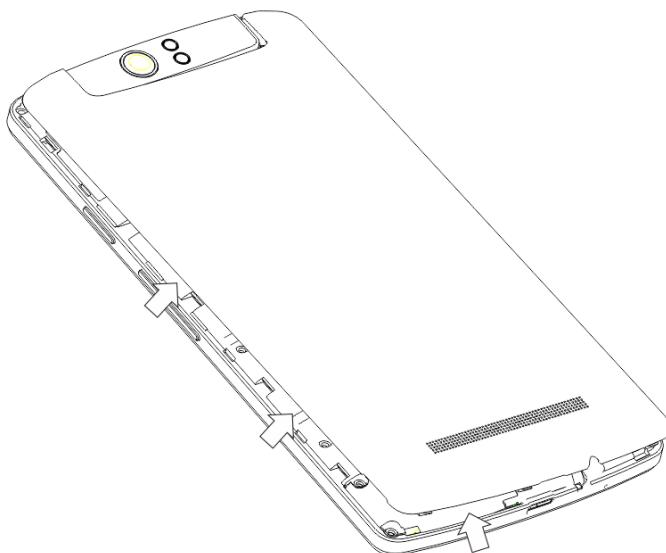

打开后盖凹口处，沿夹缝向两侧轻抠即可


(Hint : be careful not to hurt your fingers!)

Installing the SIM/SD Card and Battery


Switch off your phone before installing or replacing the battery, SIM, or memory card.

1. Remove the back cover.
2. Hold the SIM card with the cut corner oriented as shown and slip it into the card holder.
3. Insert the memory card into the card slot with the metal contacts facing down until it inserts to the right position.
4. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery until it clicks into place.
5. Press the cover gently back into place until you hear a click.


Inserting Sim card & SD card:

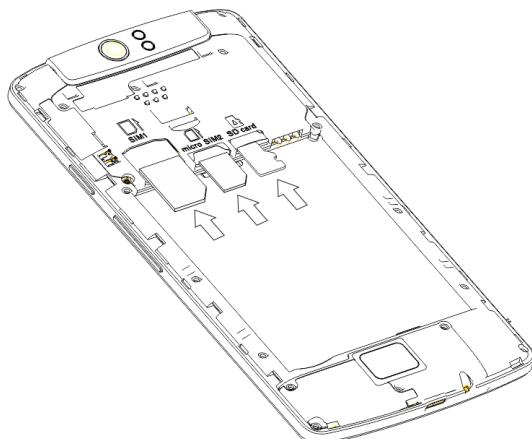

Inserting Battery:

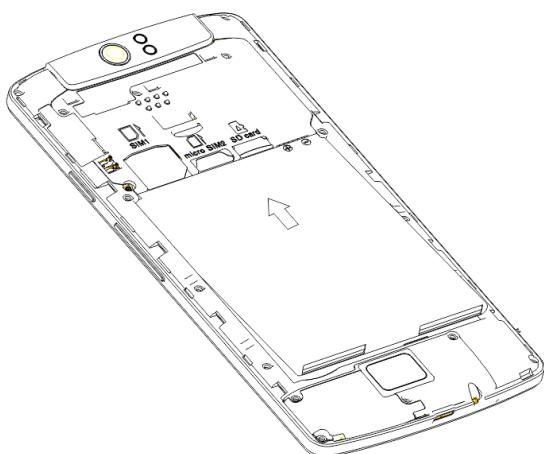


Rotatable camera

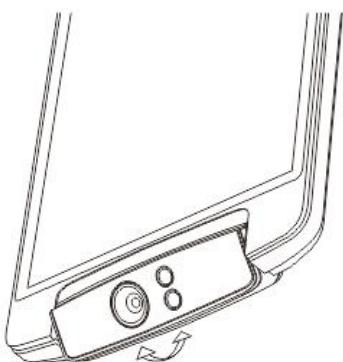

Rear touch

No all models have this function, please check if the model you got is supporting this function! (Tap System settings > Rear touch to open this function.)

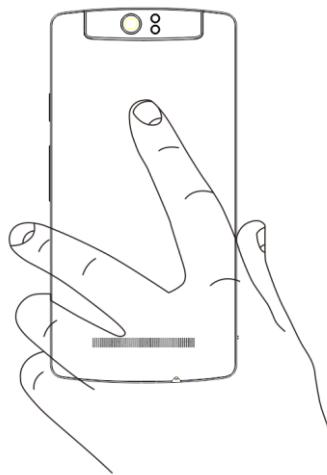

Setting Up Your Phone for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see chapter *Sorting out Your Phone Settings – Privacy: Reset to Factory Settings*), you need to do some settings before using it.

Tap **Menu Key** in the standby mode, then select **System settings > Language & input > Language** to change the language you want to use, if needed.

Getting Around Your Phone

Touch Control

You can use finger gestures to control your phone. The controls on your touch-screen change dynamically depending on the tasks you're performing.

1. Tap the buttons, icons, or applications to select items or to open applications.
2. Flick the screen to scroll up, down, left or right.
3. Point, drag and drop to move particular items across the screen.
4. Double-tap the screen to zoom in/out an image.

NOTE: You can view the phone screen in portrait or landscape orientation simply by holding it upright or turning it on its side. Not all screens are

viewable in landscape.

Home Screen

In the Home screen, besides the shortcut icon is displayed, you can also set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.

Status and Notification Icons

Your phone will tell you exactly what's going on by showing you simple icons. Here's what they mean.

	USB connected		Missed call
	Airplane mode		Signal strength
	Battery charge		New message
	Meeting mode		Wi-Fi network
	Alarm set		Earphone insert
	Silent mode		Signal searching
	Bluetooth icon		USB debugging connected
	Data Conn off		New Wi-Fi network detected

Open an Application

Tap  , then select an application icon to open.

Open Recently-Used Applications

Hold Home Key from any screen. The phone will display the applications you used recently, tap the application you want to open.

Phone Calls

Making Calls

There are many ways to make a call with your phone. And they're all easy to do.

Calling from the Phone

1. Press **Home key** > tap  > **Phone** or tap  on the Home Screen.
2. Enter the phone number using the on-screen keypad.
3. Tap the dial icon.

TIPS: To make international calls, hold  to enter the “+”.

Calling from Your Contacts

1. Press Home key > tap  > **People**.
2. Slide your finger to scroll the contacts list and tap the contact name you want to call, when the contact details appear, click on the number, choose the SIM card to dial.

You can search for a contact by tapping  on the screen.

Calling from Your Call Log

1. If you have opened the dialer, touch the call log tab to open the call records, respectively touch all, dialed, received, missed call button to display a list of the corresponding call records.
2. Tap dial icon on the right side of the current record.

Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

1. Press **Home key** > tap  > **Messaging**.
2. Tap the conversation and then find the message that contains the phone number you need.
3. Tap the message, the phone will list the options.

Receiving Calls

Answering a Call

Tap the  icon, drag to right to answer the call.

Rejecting a Call

Tap the  icon, drag to left to reject the call.

Ending a Call

Tap  to finish a call.

Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, Press **Home key** > tap  > **People**.

Creating a Contact

1. Tap  from the Contacts Screen.
2. Choose the storage location to save the contact.
3. Enter the contact name, phone numbers, and other information, and then save it.

Searching for a Contact

1. Tap  on the Contacts Screen.
2. Input the contact name you want to search for.

The contacts matched will be listed.

Messaging

Your SMS (text message) and MMS (multimedia messaging service) are combined into one menu in **Home Key** >  > **Messaging**.

Getting Connected to the Internet

Your phone's impressive networking capabilities allow you to access the Internet or your corporate network with ease.

You can use default connection settings to connect to the Internet via your mobile network, or Wi-Fi.

The network connection can be enabled /disabled manually. Just press

Home key > tap  > **Settings** > **SIM management** > **Data connection**.

Adding a New Network Connection

To get connected via your mobile network you need a data plan with your service provider. Also if the networks settings are not pre-configured on your phone, please contact your provider to get the necessary information.

You can view settings by pressing **Home key** > tap  > **Settings** > **More (WIRELESS & NETWORKS)** > **Mobile networks** > **Access Point Names**.

Turning On Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to about 300 feet.

1. Press **Home key** > tap  > **Settings**.
2. Click  next to the Wi-Fi menu to turn it on, click  you can turn off the Wi-Fi function.

Connecting to a Wi-Fi Network

1. Press **Home key** > tap  > **Settings** > **Wi-Fi**.

When the Wi-Fi is on, the Wi-Fi access points, or “hotspots”, that your phone has detected are displayed with their names and security settings.

2. Tap an access point to connect to it.

NOTE: If security features are implemented, you'll need to enter a password.

Checking the Wi-Fi Network Status

You can check the Wi-Fi network by looking at the  icon in the status bar.

Enabling the Wi-Fi Hotspot

You can use the phone as a portable WLAN router, to share your phone's internet connection with one or more PC or other devices.

NOTE:

- When the portable Wi-Fi hotspot function is enabled, you can't use your phone's applications to access the internet via its Wi-Fi connection.
- You can configure the Wi-Fi hotspot as follows:

1. Press **Home Key** > tap **Menu Key** > **System settings** > **More (WIRELESS & NETWORKS)** , click  next to the Wi-Fi hotspot to turn it on.
2. Tap **Wi-Fi hotspot** to set up & manage portable Wi-Fi hotspot. Now you can find the hotspot on other devices and connect to it.

Disabling the Wi-Fi Hotspot

Press **Home Key** > tap **Menu Key** > **System settings** > **More (WIRELESS & NETWORKS)** > **Tethering & portable hotspot** and click  next to the Wi-Fi hotspot to turn it off.

Browsing the Internet

You can use your phone to get on the Internet via a network or Wi-Fi connection.

Press **Home Key** > tap  > **Browser**.

There are different ways to open web pages:

- Tap the address bar to enter the website you want to browse. Then tap  on the touch keyboard.
- Tap **Menu Key** > **Bookmarks/History** and select a bookmark or history to open.

Taking Pictures with Your Camera

Your phone has camera function. Open it by pressing **Home Key** > tap  > **Camera**.

Tap  to take a picture. To view it, just tap the picture in the right corner of the screen.

Playing Your Music

You can play digital audio files from your phone's memory card in **Music**.

Before playing music, you need to copy music files to memory card location.

1. Press **Home Key** > tap  > **Music** to open the Music Screen.
2. Click the Music category label > music files to start playing.
3. Adjust the volume with **Volume Keys**.

Opening Your Gallery

Press **Home Key** > tap  > **Gallery**. You can use **Gallery** to view pictures and play videos. You can also do some basic editing of your pictures – such as setting them as wallpaper or contact photo, and sharing with friends.

Playing Your Videos

Press **Home Key** > tap  > **Video Player**. You can use Video Player to play videos on the phone and memory card.

Sorting out Your Phone Settings

Setting Date and Time

1. Press **Home key** > tap  > **Settings** > **Date & time**.
2. Tap **Automatic Date & time** and select **Off** if you want to set the time and date by yourself.
3. Set date, time and change the other options.

Display Settings

Press **Home key** > tap  > **Settings** > **Display**, you can adjust the display settings as you like:

- **Brightness**: Adjust brightness of the screen.
- **Auto-rotate screen**: Rotate the screen display as you rotate the phone.
- **Screen timeout**: Set the delay for the screen to automatically turn off.
- **Wallpaper**: Set the wallpaper of the phone
- **Theme**: Set the theme of the phone.

Audio Profiles Settings

By pressing **Home Key** > tap  > **Settings** > **Audio profiles**. When you choose the General mode, you can adjust the sound settings, such as ringtones, volume and vibrate.

Language Settings

You can change the language of your phone system in two simple steps.

1. Press **Home key** > tap  > **Settings** > **Language & input** > **Language**.
2. Select a language from the list given.

Security Settings

Here's how to protect your phone and SIM card from unauthorized use.

Protecting Your Phone with a Pattern

Creating Your Screen Unlock Pattern Press **Home key** > tap  > **Settings** > **Security** > **Screen lock** > **Pattern**.

1. Read the instructions on-screen and watch the example pattern, and select **Next**.
2. Drag your finger to connect at least four dots, draw the pattern.

3. Touch **Continue**.
4. Redraw your pattern to confirm.

Unlocking the Screen with Your Pattern

1. Press **Power Key** to wake up the screen.
2. Draw the pattern you set to unlock the screen.

If you make a mistake, your phone will ask you to try again.

Applications

Press **Home Key** > tap  > **Settings** > **Apps**.

Installing an Application

You can install a non-Marketing application if you have allowed the installation of it. Make sure that you select an application developed for your device and processor type before installing it.

1. Copy the application file to the SD card and install the card on your phone.
2. Press **Home key** > tap  > **File Manager**, and open the folder where the application file is.
3. Tap the file to start installation.
4. Read the installation instructions that come with the application and follow it to complete the setup.

NOTE: please take your handset as the standard.

Removing an Application

1. Press **Home key** > tap  > **Settings** > **Apps**.
2. Select the application you want to delete.
3. Tap **Uninstall** and **OK** to confirm.

Moving an Application

You can move the applications downloaded or installed on your phone to the memory card when the phone memory is full. You can also move applications to your phone if the memory card is getting full.

NOTE: Not all applications can be move to your phone or memory card.

1. Press **Home key** > tap  > **Settings** > **Apps**.
2. Click the application you want to move on the **Downloaded** tab.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific

studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.276W/Kg and when worn on the body, as described in this user guide, is 0.765W/Kg(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is 0.765W/Kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

FCC ID: 2ACI4-V8 Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.