





Charging _

Full charge your tablet for 6 hours before the first use.



Use the included 5V wall charger

The battery indicator will show that your device is charging.



Screen Basics



Connecting to Wi-Fi®_





Enter the settings app Tap the switch for Wi-Fi. Choose your network and enter your password using the on-screen keyboard.

Google™ Account _

The first time you use the Google Play^{III} Store app you will be prompted to create a Google account. If you already have a Gmail^{IIII} account, you have the option to use your Gmail address and password to sign in. If you do not have a Gmail account, follow the

At the end of the setup you will be asked to setup a credit card with Google Wallet™. You can skip this step and enter your information when you want to make a purchase.

Adding other accounts

If your primary email account is not gmail you can add your email account to receive. You can also add acounts from other social networking and messaging apps you have installed. Go to Settings and tap the + under Accounts.





You will now be

able to drag and

your computer on to your tablet just

as you would with

a USB flash drive,

drop files from





check with retailer for all customer support needs

Factory Restore Select Backup & reset in the settings app to restore factory settings, This will erase all data on the tablet.

Operational Steps For BLAST Tablet

Turning on BLAST Tablet:

- 1. Make sure that your BLAST is fully charged before using. (Green light indicates full charge, unplug once green illuminates not to overcharge and reduce battery life.)
- Avoid using BLAST while charging to avoid damage to charging pin or charging port.
- 3. Turn BLAST on by using button on the top right side of the
- 4. After turning on BLAST, allow a few moments for the device to load.

Accessing Applications:

- Touch and slide the lock icon to the right on the opening screen to view home screen
- Touch the circled dots to view the home screen and to access the applications.
- 3. Scroll from right to left to see more applications.

Accessing the Internet:

- Touch the "Settings" icon.
- 2. Turn "Wi-Fi" to the on setting.
- 3. Find and select your desired internet. 4. Enter your pass word and select connect.

Adding an Email Account:

- Once connected to the internet select "+ Add Account."
- 2. Select the type of e-mail account you want to add.
- 3. Continue working through the e-mail setup until setup is complete.

Navigation Buttons:

At the bottom of every BLAST screen, you'll find the navigation bar with these huttons:

Volume

Tap to lower or raise the volume.

Recent Apps

Opens a list of thumbnail images of apps you've worked with recently. To open an app, touch it. To remove a thumbnail from the list, swipe it left or right.

<u>Home</u>

Opens the central Home Screen.

Opens the previous screen you were working in, even if it was in a different app. Once you back up to the Home screen, you can't go back any further.

From All Apps, You Can:

- Move between screens. Swipe left or right.
- Open an app. Touch its icon.
- Place an app icon on a Home Screen. Touch and hold the app icon, slide your finger, and lift your finger to drop the icon in place.
- Browse widgets. Touch the Widgets tab at the top of any All Apps
- Get more apps. Touch the Google Play icon in the list of app icons.

Tablet Registration

Be sure to register your tablet to receive Android updates and product information.

FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF warning statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.