 



SHARPER
IMAGE®

Wireless Sound Bar

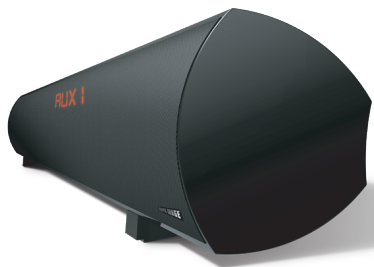


User Guide
SBT2012

 In the Box

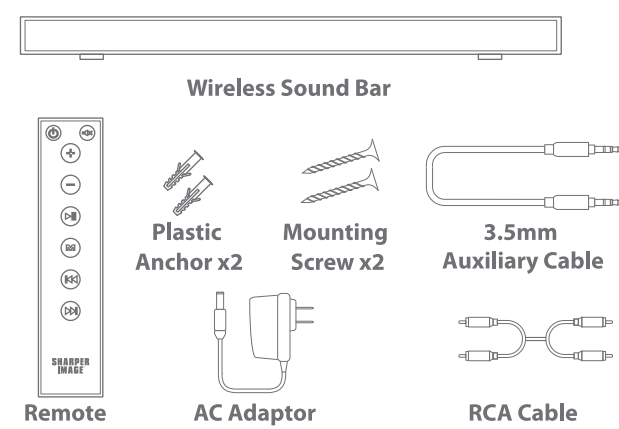

Location of Controls

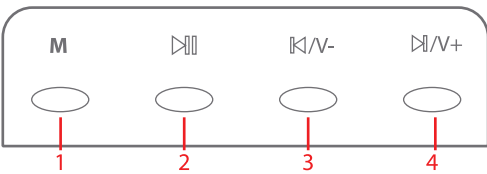 


(Control Panel - Above)

1. [M] Button: Switch mode
2. [▶/⏸] Button: Play/pause
3. [◀/V-] Button: Long - Decrease volume
Quick - Skip to previous
4. [▶/V+] Button: Long - Increase volume
Quick - Skip to next

(Input Panel - Below)

 5. Optical Audio Port
6. L – R Input Jacks (AUX 1)
7. DC 9V Power Jack
8. AUX-In Jack (AUX 2)
9. [POWER] Switch

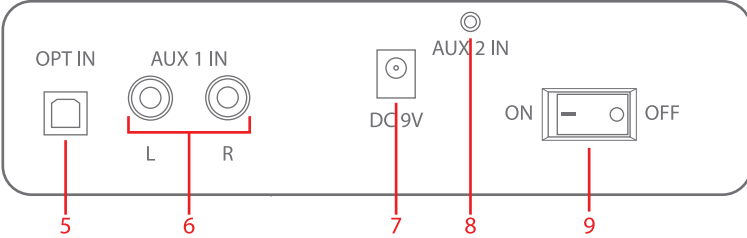

(Remote - Right)


10. [⏻] Button: Standby mode
11. [⏸] Button: Mute/unmute
12. [+] Button: Vol increase
13. [-] Button: Vol decrease
14. [▶/⏸] Button: Play/pause
15. [⏮] Button: Switch mode
16. [▶] Button: Skip to next
17. [◀] Button: Skip to previous



The screenshots above are typical of many Bluetooth-enabled devices in the market today, and are used to assist in the explanation of the pairing process. Your Bluetooth-enabled device's interface and interaction with the speaker may differ slightly from the illustrations above.

On an iOS or Android Device

 - Go to **SETTINGS > BLUETOOTH** (Make sure Bluetooth is turned ON)

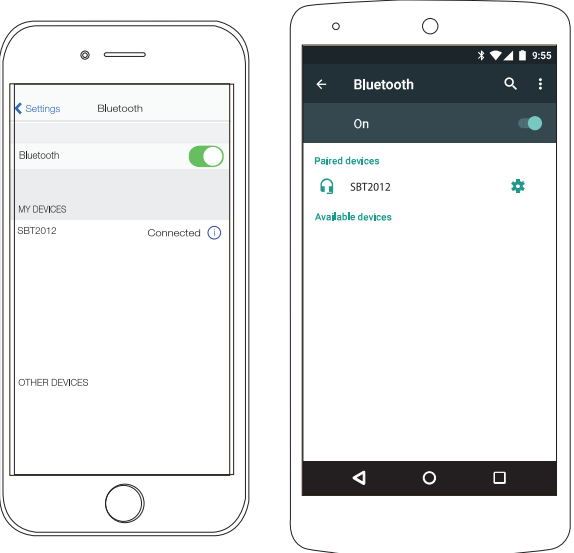

If a previously paired device is in range when the speaker are turned on, the speaker will connect to it automatically.

 
Pairing the Speaker

1. Turn the Speaker ON by switching the [POWER] switch to the ON position. A tone will be heard indicating that the speaker has power and the LED panel (front) will turn on, reading “bBLUE.”
2. Set your Bluetooth-enabled device to search for Bluetooth devices. When the Bluetooth-enabled device finds the speaker, select “SBT2012” from the list of found devices.
3. After a successful pairing, several tones will be heard.

Setting Up the Speaker

Installing the Remote Battery

1. To install/remove the remote battery, pinch the side of the battery pack and slide it out of the remote.
2. Remove the old CR2025 battery and/or place a new one inside the battery pack, contact (negative end) facing down.
3. Slide the battery pack back in so that it clicks and locks into place.

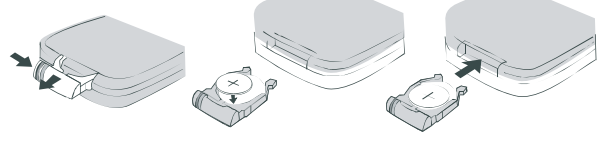


Mounting the Speaker

The speaker can be placed on long, narrow spaces or it can be mounted on a wall with the two mounting screws. The speaker is 37 inches long.

1. Drill two guide holes into the area on a wall you would like to hang your speaker. These holes should be 26.25 inches apart and will be used for anchors, so they are just smaller than the anchors themselves.

 Always drill a smaller hole than the anchor and slightly increase the size if necessary.

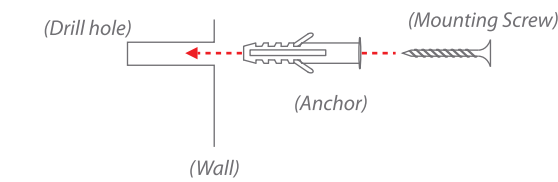

2. Push or gently hammer an anchor into each guide hole so that they are secure and won't move.
3. Screw or drill the two mounting screws into the anchors, and hang the speaker on the two screws by inserting the screws into the mounting holes on the speaker and gently sliding down to secure.

NOTE: The speaker should not move in any direction while mounted.

 
Connecting the Speaker

Connecting via Optical Audio Cable

Attach the optical audio cable (not included) to the optical audio port on the input panel of the speaker. Attach the other end to the optical audio output port to your media device. Press the [M] button on the control panel or remote control to switch to the OP input, the LED panel will read “-OP-.”

Connecting via RCA Cable

Attach the white end of the supplied RCA cable to the left RCA port on the input panel of the speaker and attach the red end of the cable to the right RCA port. Attach the other end to the audio output on your media device. Press the [M] button on the control panel or remote control to switch to the AUX 1 input, the LED panel will read “AUX 1.”

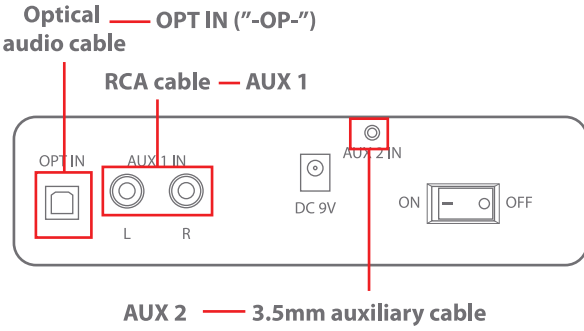

Connecting via 3.5mm Auxiliary Cable

Attach the 3.5mm auxiliary cable to the AUX-in jack on the input panel of the speaker. Attach the other end to the 3.5mm or headphone jack of your media device. Press the [M] button on the control panel or remote control to switch to the AUX 2 input, the LED panel will read “AUX 2.”

Using the Speaker

Powering ON/OFF

- To turn the speaker ON, flip the [POWER] switch on the input panel to the ON position.
- To turn the speaker OFF, flip the [POWER] switch on the input panel to the OFF position.
- To put the speaker into standby mode, press the [⏻] button on the remote.

Volume Adjustment

- To increase the volume, long press the [▶/V+] button on the input panel or the [+] button on the remote. The volume will gradually rise and the LED panel will display the volume level.
- To decrease the volume, long press the [◀/V-] button on the input panel or the [-] button on the remote. The volume will gradually lower and the LED panel will display the volume level.
- Press the [⏸] button on the remote to mute the speaker.

Switching Modes

- To change between Bluetooth, AUX 1, and AUX 2 modes, quick press the [M] button on the control panel or the [⏮] button on the remote control. The current mode will be displayed on the LED panel.

Playing Music

To enjoy music wirelessly on your speaker, make sure you are paired to a Bluetooth-enabled device. Once paired, you can control the media playback and volume adjustment with the controls on your paired device or use the controls on the control panel on the speaker or remote.

Playing/Pausing Music

- To pause media playback, press the [▶/⏸] button on the speaker's control panel or remote.
- To resume media playback, press the [▶] button again, on the speaker's control panel or remote.

Skipping Tracks

- To skip to the next track, quick press the [▶/⏮] button on the speaker's control panel or press the [▶] button on the remote.
- To skip to a previous track, quick press the [◀/V+] button on the speaker's control panel or press the [◀] button on the remote.

Questions and Customer Support

For further assistance or troubleshooting, please call our customer support line:

- ☎ Phone: 1-877-768-8481
Monday-Friday 8AM-10PM (EST)
- 🌐 www.southerntelecom.com
Click on “Product Support”

Legal Information

READ CAREFULLY AND KEEP THIS MANUAL

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Limited Warranty

90 Days Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Call the Customer Support number located below, or go to our website portal to receive an SRO number.
- Provide proof of the date of purchase within the package (dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:
📍 **Southern Telecom, Inc.**
Attention: Customer Service (2nd Floor)
14-C 53rd Street
Brooklyn, NY 11232
Should you have any questions or problems concerning this product, please contact our customer service department at:
Customer Support:
☎ Phone: 1-877-768-8481
Monday-Friday 8AM-10PM(EST)
🌐 www.southerntelecom.com
Click on “Product Support”

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:

• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY AIT, INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

• REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AIT, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations on exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.



Sharper Image® name and logo are registered trademarks. Manufactured and marketed by Southern Telecom under license. © Sharper Image. All Rights Reserved.

SHARPER IMAGE®