

To Users:

Thank you for purchasing our DSR Pro Two Way Radio.

Notice to users

Before using the radio, please read this manual carefully.

Do not use the radio in a highly flammable environment (Gas Stations, Fueling depots, refineries).

Do not let the radio sit in prolonged periods of direct sunlight or high heat.

Do not use the radio in very dusty, humid or do not drop in water.

If you find any unusual smells coming from the radio, please remove the battery and call 888-30-POWER for advice or troubleshooting.

Please do not dissemble the radio, if there is any problems contact customer support at 888-30-POWER.



DSR Pro®

DSR-590

Full-band multifunction wireless fm two way radio

Features:

- Frequency Mode + channel mode + Professional intercom mode
- Power-on password function
- High sensitivity Radio
- Flash light function
- 128 memory channels
- LCD screen
- Chinese and English voice prompt function
- Wire cloning function
- Manual / Computer frequency modulation
- VOX function
- Alarm function
- Group Function
- 50CTCSS & 104*2 DCS
- CTCSS/DCS Emission offset power transfer function

DSR Pro®

Contents (one)

Unpack and check device	01
Preparation before use	
Warning	02
When using lithium batteries	03
Li-ion Battery features	03
Charge the Lithium battery	03
Install / remove the battery pack.....	04
Install Antenna	05
Install hand tape	05
Install belt clip	05
Familiar with the machine	06
Instruction of LCD Chart	08
Operating Mode	
FR mode (frequency mode)	09
CH mode (channel mode)	09
Professional intercom mode	09

Basic operation

Switching Power Supply	10
Adjust the volume	10
Select the frequency	10
VOX Transmitting	10
Monitor	11
Alarm function	11
Call function	11
Flashlight function	11
Key lock switch	11

Functional operation

Squelch level setting	12
On Off voice features	12
On Off scrambling function	12
Set step frequency	12

DSR Pro®

Catalog (two)

Set-frequency	12
Enter the scan	13
Set receive and transmit signaling	13
Set transmit signaling	14
Enter menu option	14
Select Workgroup operation	15
Store new channel	15
Set high/low power output.....	15
Enter Numeric keys	15
Wire cloning	16
Delete channel	16
Channel programming settings ... (pages 17-19)	
Low-power detection and indication	19
FM Radio Function	(pages 20-21)


Menu operation (22-25 pages)

1, Ring settings	2, Backlight setting	3, Set Emission limit
4, Set frequency offset	5, Open the closed group	
6, Display current battery voltage	7, VOX grade setting	
8, VOX delay setting	9, Set receiver power-saving	
10, Set the scan mode	11, Scan the Add / Remove settings	
12, Key lock settings	13, Set the boot display	
14, Set the boot display information		
15, Set the channel display name		
16, Set FM Radio listening mode	17, Set the Width/narrow-band	
18, English Voice reporting function		
19, Set the power-on password		
20, The transmitter end sound settings		
Technical Specifications (Schedule I)	26	
Technical Specifications (Schedule II)	27	
Technical Specifications (Schedule III)	28	
Care and Maintenance	29	

Unpack and check device

Please carefully open the color box and check the accessories in below list.

Accessory	Item	Item No.	Quantity
	Antenna		1
	Hand tape		1
	Belt clip		1
	Bolt		1
	User manual		1

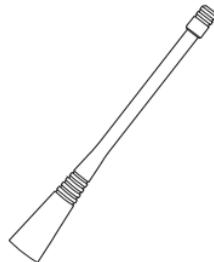

Antenna



Belt clip



Bolt



Hand tape

Preparation before use

Warning

- Please do not over charge the battery pack. The battery pack may overheat or burst. Please use the designated DSR Pro charger to charge the battery packs.
- Please do not allow the battery pack to rupture or leak. If the battery pack leaks (will give off a pungent odor), immediately dispose of the battery and replace.
- Please do not use any other battery outside of the designated DSR brand. If the battery is misshaped or is emitting an order, dispose and replace the battery.

Preparation before use

When using lithium batteries:

- Charge the battery before using
- To minimize battery discharge, please do not use the battery pack when the battery pack is removed from the device, remove the battery pack stored in a cool dry place.
- While storing the battery for a long time :
 - 1, remove the battery pack from the device.
 - 2, if possible, the battery will be discharged.
 - 3, the battery pack is stored in a cool (temperatures below 25 degrees Celsius) and dry place

Li-ion Battery features:

- The battery will gradually lose its original capacity after repeated charging and discharge cycles.
- The Battery will slowly lose its capacity (even while not in use).
- When storing batteries, it is recommended to top charge them every two months to achieve maximum performance and reduce sulfation during long storage periods.

Charge the Lithium Ion Battery:

When the charger is plugged in the green LED indicator will light up. When you insert the battery into the charger, the indicator will change to red during the charging process. When the battery has completed its charge, the indicator will change back to green.

Preparation before use


Install / remove the battery pack:

*Do not short circuit the battery terminals, or the battery will spark


*Do not attempt to remove the casing of the battery pack

*The battery pack can not be installed in hazardous environments, sparks will cause an explosion.

1, Insert the battery pack into the battery compartment on the back of the radio, press Battery Pack inward until the Battery Pack Latch locks it in place with a 'Click'.

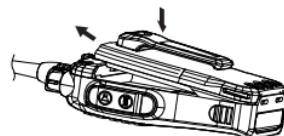

2, To remove the battery pack, turn off the radio then close the battery pack latch, battery pack will Prolapse from radio, then take off the battery

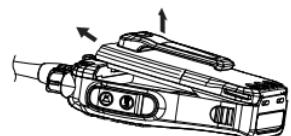

Preparation before use

Install Antenna:

Hold the antenna base, antenna clockwise screwed on top of the interface walkie-talkie until tighten up.



Install hand tape:

Strung the Hand Tape to the ring on the top of the radio back.




Install belt clip:


If necessary, use a random Annex 3 * 4 screws fix belt clip.



Familiar with the machine

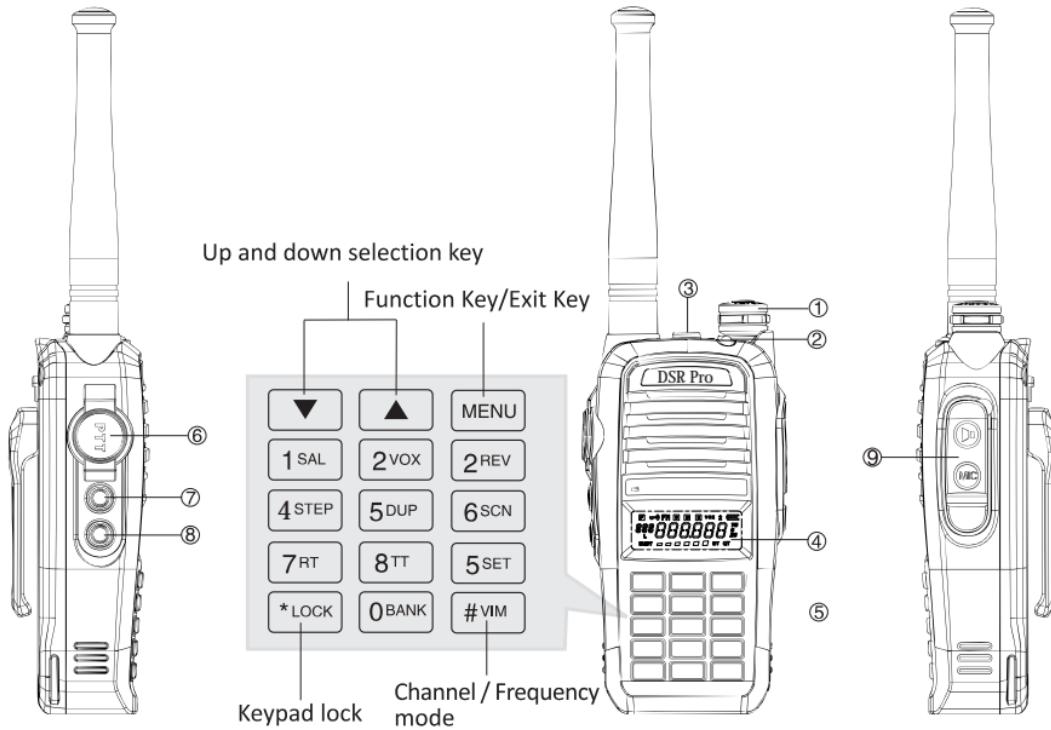

Familiar with the machine


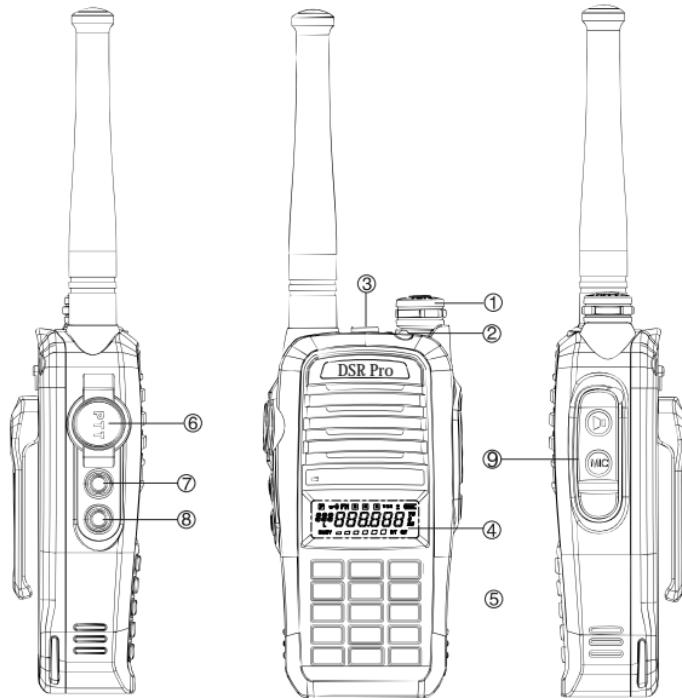


- ① Power switch / volume controller
- ② Working indicator light, red light when transmit, green light when receive.
- ③ Click the alarm key to turn on the light
- ④ LCD screen to show radio working condition.
- ⑤ Digit keyboard
- ⑥ PTT push to talk
- ⑦ Monitor key
- ⑧ Alarm Key keep press the key will
- ⑨ External microphone and earphone jack

Instruction of LCD Chart

1, F: The status to select function
2, Keyboard has locked
3, +: Add frequency
4, -: Reduce frequency
5, S: Power saving mode
6, N: narrow band mode
7, FM: FM radio mode
8, QT: Mark of CTCSS

9, DT: Mark of DCS
10, R: Reverse frequency mode
11, L:Low power
12, VOX: VOX function is launch
13, Receiving or transmitting
14, Channel No.
15, The battery power status.

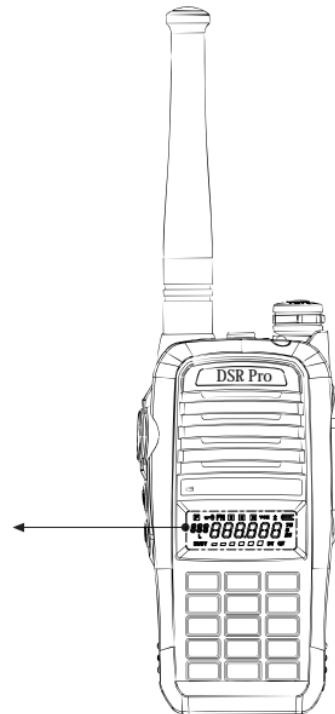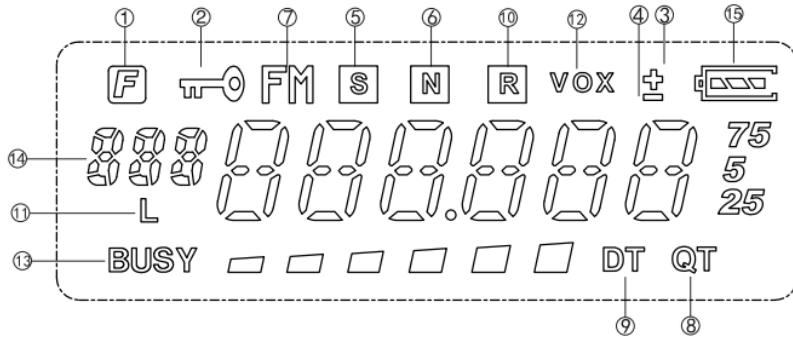

Operating mode

■ FR mode (Frequency mode)

Hold the  key on, switch to FR mode. In this mode can be switched by the  key to choose all frequencies or channel + frequency. Press 、 key to change the whole frequency or channel number ; Or press the number keys to enter the desired frequencies or full channel number (001-128 channels)

■ CH mode (Channel+ frequency)

Hold the  key to turn on, you can switch to CH mode. In this mode, you can use the 、 to change the channel number, Or press the number keys to enter the desired channel (001-128 channels). You at least want to program a memory channel, otherwise unable to enter this mode.

■ Professional intercom mode (Channel mode)

By programming software 'Professional intercom mode' setting. You can use the walkie-talkie set to professional intercom mode. In this mode, only to change the current channel by 、 keys, other keys invalid. Nor is converted to FR mode and CH mode.

Basic operation

■ Switching Power Supply

Screw clockwise the power/volume knob to turn on the power, screw anticlockwise to turn off

■ Adjust the volume

Press the volume control knob clockwise to increase the volume, counterclockwise rotation will decrease the volume.

■ Select the frequency

Press  to increase the frequency, press the  key to decrease the frequency. If you have not chosen a specific frequency, you need to change the frequency interval. See 'Set step frequency' (Page12), you can also use the number keys to enter the desired frequency directly see 'numeric keys to enter' (Page15)

■ PTT key launch

Press and hold the PTT button and speak in a normal tone of voice. (When transmitting red) at the end of speaking, release the PTT button, wait for the reception.

■ VOX Transmitting

1, Can set the vox gain level and the delay time length of VOX stop launch in Menu Setting. (VOX gain level: Grade one is the highest, need the maximum volume power to start transmitting. Grade nine is minimum.

2 Press  +2, open the VOX function.

3, insert the headset to the radio.

4, Talk to the microphone, if the sound intensity is enough can launch.

Basic operation

■ Monitor

Press the MONI key into Monitor mode (squelch will close at the same time), loosen the key to exit Monitor state.

■ Alarm function

- 1, Keep the press the **Alarm** key for 2 seconds, radio will enter alarm state.
- 2, In alarm state, if the current channel have set a transmitting frequency, radio will automatically to transmit.
- 3, In alarm state, radio sound alarm and transmit for 20 seconds, then stop for 10 seconds, continue in 20 seconds, so cycle three times and exit alarm state.
- 4, In alarm state, if radio receive any signal during the 10 second pause will exit alarm state.
- 5, Press PTT key also will exit alarm state.

■ Call function

Click the **MENU** Key then Click **▲** key, radio will enter call state, keep transmit call signal for 4 Seconds. When receive call, radio will sound a special ring to prompt.

■ Flashlight function

Click the **Alarm** key to open the LED light, click again to close.

■ Key lock switch

Standby state, press the ***** key for a second to lock the keyboard, press one second again to unlock.