



BLUETOOTH SPEAKER USER GUIDE

All rights reserved by SAM&ELLEN TECH. Pirated reserved.
All graphics in this manual can be used unauthorized and are strictly prohibited from reproduction in full or in part in any manner.
This manual may not be reproduced, distributed, or copied in any way or form.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits

for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

I To play music (pictures for reference only, subject to products availability)

1.Power-on speaker and by default, it enters Bluetooth mode. Press the M (mode) key to change to AUX mode and insert the audio cable to connect to auxiliary port on your mobile phone or other device for audio play. You can also use micro USB cable to connect speaker to a PC for

audio play and charging of battery (During connection of speaker to other devices, it is recommended to use the supplied matched audio cable and micro USB cable.). When AUX audio coexists with micro USB connection, the micro USB takes priority.

2.Inserting a TF card into speaker is automatically recognized and speaker goes into TF card mode. In TF card mode, by connecting the micro USB cable to a PC, you can read and write to the TF card at same time as playing songs on the TF card.

3. When micro USB cable is connected to PC and micro USB cable is disconnected, the speaker automatically switches to Bluetooth mode.

II Function keys on speaker

- 1.Micro USB charging port
- 2.AUX audio interface
- 3.TF card slot
- 4.Power switch
- 5.Mode switching (Bluetooth mode, AUX mode, TF card mode)
- 6.On the phone, pause play (press automatic callback key for few seconds)
- 7.Microphone (during call, please be close to the speaker's microphone so that it can enhance call quality)
- 8.Up (press volume down for few seconds)
- 9.Next (press volume up for few seconds)

III. Bluetooth connection method

1. Power on speaker or press the M (mode) key to switch to Bluetooth mode; LED lights flash at the same time.
2. Open sound source such as mobile devices (cell phones) or computer; Turn on Bluetooth function, search for Bluetooth devices "CURLING".
3. Manually select speaker or allow the device to automatically make a connection; the connection is successful when LED flashes slowly.
4. When you power up speaker and sound source next time, speaker will recognize any device that has been successfully paired automatically.

Note: The device will successfully pair with Bluetooth if turned on again in 10 seconds or changed to Bluetooth mode. After 10 seconds, you need to manually connect (need speaker in Bluetooth mode).

IV. Battery low

When the battery has low power, the system will automatically shut down. Please recharge battery. If you do not use this product for long time, charge the battery at least once a month to protect the batter's life.

V. Troubleshooting

- 1.On turning on speaker it automatically shuts down - due to lack of power or battery.
Solution: please plug into a power source for charging; a full charge can take up to two hours.
2. Speaker automatically shuts down or restarts - due to a lack of battery power.
Solution: please plug into a power source for charging; a full charge can take up to two hours.
3. Speaker battery not charging.
Solution: please use the supplied cable to charge battery and check that USB interface voltage is normal.
4. No sound from speaker
Solution: determine that the TF/ Bluetooth /AUX mode is the correct input source, speaker is in the state of play, and volume is adjusted to the appropriate level.
5. In AUX mode but no sound.
Solution: please use the supplied audio cable, and check that AUX mode is selected.
6. No sound when connected by Bluetooth to computer or mobile phone.
Solution: please confirm that Bluetooth is activated on computer or mobile

4

5

6

7

phone and that the speaker is in correct mode. This connection should be confirmed by an audio comment from the speaker.

7. The speaker has no function or function error.

Solution: restart speaker.

8. When connected to the computer and micro USB cable is pull out there is some residual sound.

Solution: please shutdown and restart speaker.

VI. Technical parameters

Bluetooth 3.0 / A2DPV1.2	Output: 3.0 W	SNR: ≥ 70dB
Frequency: 50HZ-20KHZ	Battery capacity: 500MAH	Charging voltage: 5V
Charging time: 1.5 hours	Usage time: 4 hours	SupportAUX input

VII. List of items and appearance parameters

List of items in box:	Speaker; 3.5-3.5mm audio line; Micro USB cable
Appearance parameters:	Speaker size: 90 * 90 * 46.9 mm Package size: 102* 102 * 93 mm

VIII. Important safety information

Please take care to prevent electric shock. In order to properly use the product, and ensure good playback performance, please carefully read and follow these guidelines:

1. Do not drop or cause a serious impact to the product.
2. Do not place product near or in water.
3. Do not use petroleum-based, thinners or other chemicals.
4. Please keep away from strong magnetic or electric field.
5. Please avoid placing in direct sunlight or near heating appliances.
6. Do not disassemble, repair, or make alteration in any way; it will void the warranty.
7. When cycling, driving a car or motorcycle, do not use the player and headphones in order to avoid danger.
8. Do not listen at high volume, so as to avoid adverse effects on hearing.
9. Any packaging, batteries, old electronics should be disposed of according to its classification and handled properly.

SAM&ELLEN TECH CO.,LTD
7 E47th STREET,3RD FL,NEW YORK NY 10017

6

7