

Somle®

SOUNDBAR

Silent 1220 / Silent1420

User Manual

The manual including all the operating instructions

Contents



Notice

- 02 Notice
- 03 Safety
- 04 Product information
- 04 Optional sizes



MONTAGE

- 05 Montage
- 06 What's in the box
- 06 The assembly



CONNECT

- 07 Connect
- 07 Your Home Audio
- 07 Overview of the main unit
- 08 How to connect



OPERATE

- 09 Operate
- 09 Your Home Audio
- 09 Overview of the main unit
- 10 Overview of the remote control
- 10 Play from TV/Bluetooth device/Aux
- 11 Play from COA/OPT/HDMI/DTS
- 11 Play/Adjust volume level
ECO , Standby mode



HELP

- 13 Troubleshooting
- 13 About Bluetooth device

Notice

Know these signs



EU Regulatory Conformance
Hereby, Ningbo Somle Audio-Visual Technology Co.,Ltd declares
that this device is in compliance with the essential requirements
and other relevant provisions of Directive 1999/5/EC.

CAUTION:

 
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations. When discarding the unit, comply with local rules or regulations. Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal. This product and the supplied accessories, excluding the batteries, constitute the applicable product according to the WEEE directive.

Safety

Important safety instructions

Read these instructions.

Keep these instructions.

Heed all warnings.

Follow all instructions.

Do not use this apparatus near water.

Clean only with dry cloth.

Do not block any ventilation openings.

Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Protect the power cord from being walked on or pinched, particularly at plugs, and the point where they exit from the apparatus.

Unplug this apparatus during lightning storms or when unused for long periods of time.

All repairs by qualified service personnel should be performed.

Battery usage CAUTION - To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit, the batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Apparatus shall not be exposed to dripping or splashing.

Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).

Turn off the power switch before plugging the apparatus into the power outlet.

Hearing safety

Listen at a moderate volume.

Set your volume control at a low setting.

Be sure to use your equipment reasonably and take appropriate breaks.



Never remove the casing of this apparatus.

Do not place any object under the subwoofer.

Keep this apparatus away from direct sunlight, naked flames or heat.

Make sure that you always have easy access to the power cord,

unplug the device from the power supply when necessary.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

English:

This device complies with Industry Canada RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

French:

Le présent appareil est conforme aux CNR d'Industrie Canada applicable aux appareils radio
Exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

Product information

Specifications

Amplifier

Rated Output Power	120W RMS
Frequency Response	40Hz-20KHz, $\pm 3\text{dB}$
Signal to Noise Ratio	$\geq 80\text{dB}$

Speakers


Speaker Impedance	2x(8+40mh)+80mh
Speaker Driver	1.5" Tweeter+4" Full range +8" Subwoofer
Output Power	2x15W+2x25W+50W RMS

General information


AC Power	100-240V~50-60Hz
Operation Power Consumption	150W
ECO Standby Power Consumption	$\leq 0.5\text{W}$

Bluetooth®

Frequency band	2.402-2.480 GHz
Range	8 meters(free space)
Standard	Bluetooth® 4.0

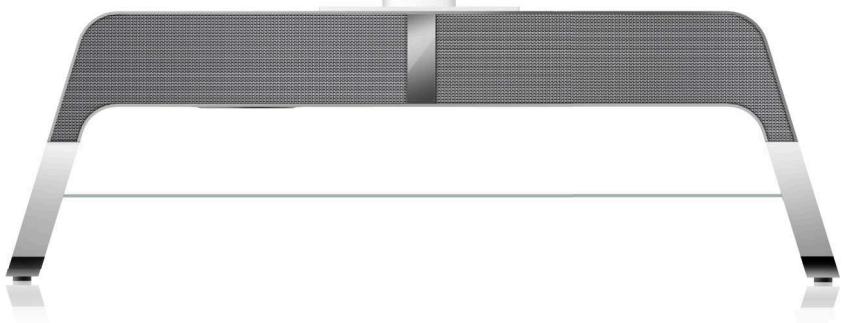

Size

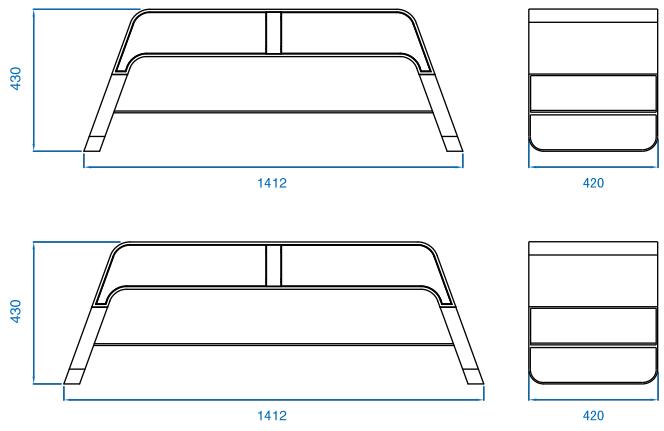









MONTAGE

What's in the box

Open the carton, take out all parts .


Including speaker*1, glass*1, foot*2, hex screws*6, washer*6, lock washer*6, screwdriver*1 and remote control*1.

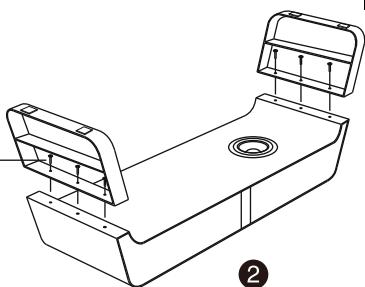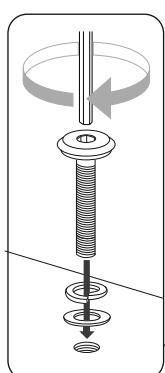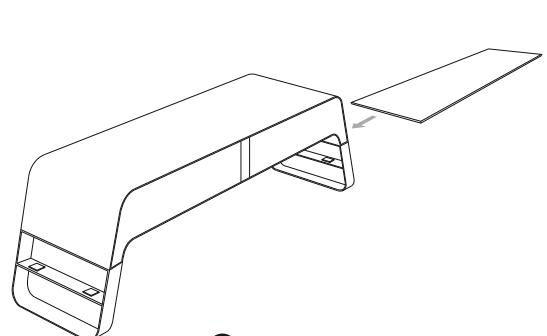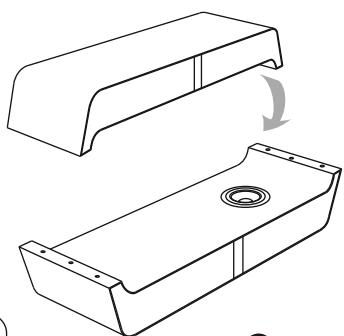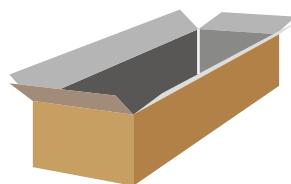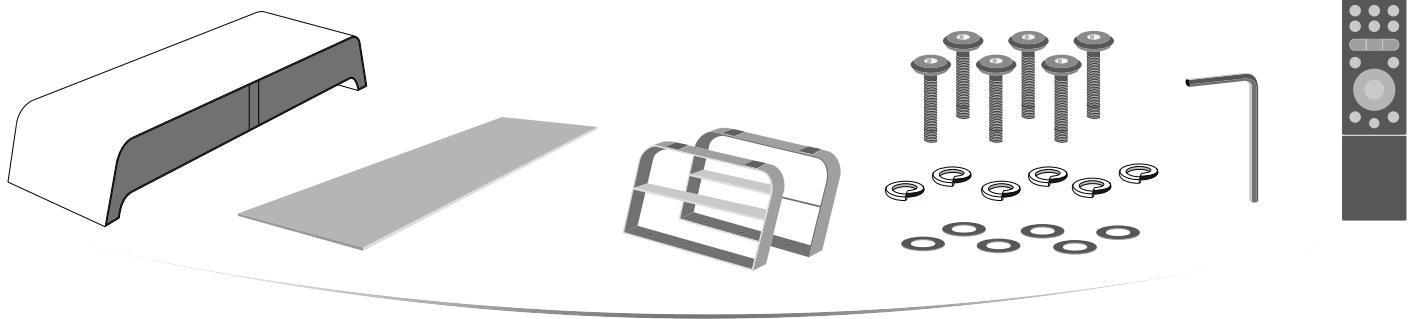


The assemble

- Please turn the table upside down and place it on a carpet or other soft surface.
- Fix the metal feet and table with screws.
- Put the glass on the metal support slightly.

4

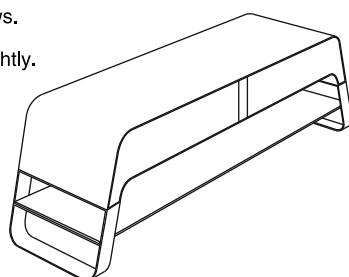

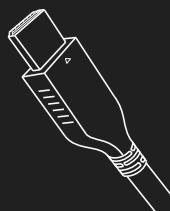


CONNECT

Your Home Audio




Introduction

With this unit, you can enjoy audio from TV/DVD/MP3 or mobile phone with Bluetooth®.

Overview of the main unit

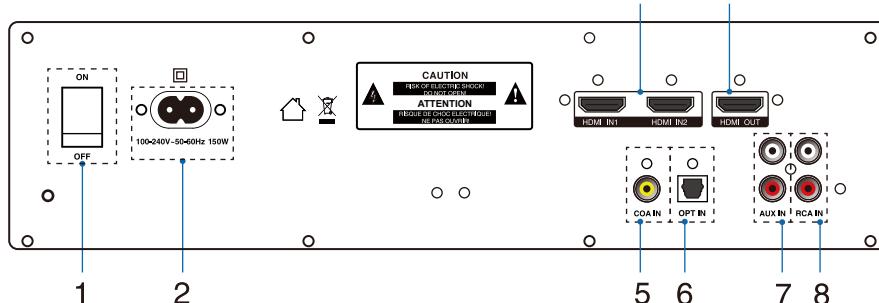

1	ON / OFF	【Turn on/off the unit】
2	100-240V~50-60Hz 150W	【AC Power Cord Input Jack】
3	HDMI IN1/2	【HDMI 1/2 input】
4	HDMI OUT	【HDMI output】
5	COA IN	【COA input】
6	OPT IN	【Optical input】
7	AUX IN	【AUX-in jack】
8	RCA IN	【TV signal input L/R】

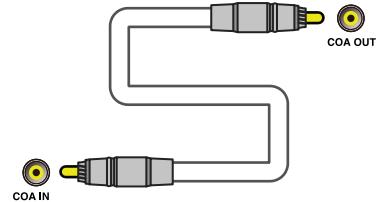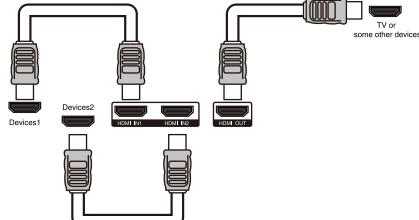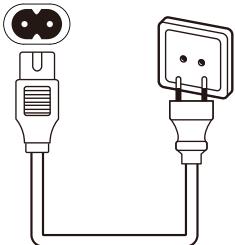

- Connect one end of the AC power cord to the device, the other end of the AC power cord to the wall outlet.



Note: Your power cord may look different from the one pictured here.

- Silent: There are 2 HDMI input port and 1 HDMI output interface, you can connect your DVD or the other devices

to HDMI IN1 or HDMI IN2 interface, by using an HDMI cable, connecting the TV or some other devices to the HDMI out interface.

Note: We suggest connecting with HDMI ARC interface of TV.

- Connect one end of the digital COA cable to the unit, the other end to an external device

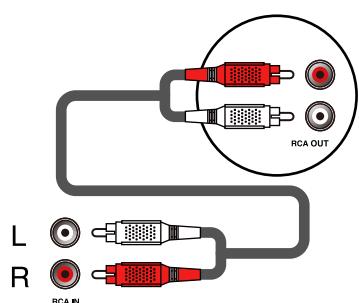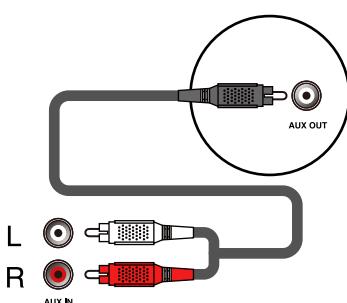


- Connect one end of the Aux-in link cable to AUX IN jack on the front of the unit, the other end to an external device.

Note: Red to red, white to white.

- Connect one end of the digital RCA cable to the unit, the other end to an external device

- Connect one end of the digital OPT cable to the unit, the other end to an external device

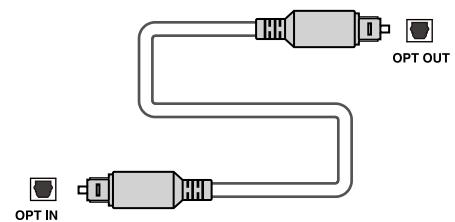




OPERATE


Your Home Audio

Introduction

With this unit, you can enjoy audio from TV/DVD/MP3 or mobile phone with Bluetooth®.

Overview of the main unit

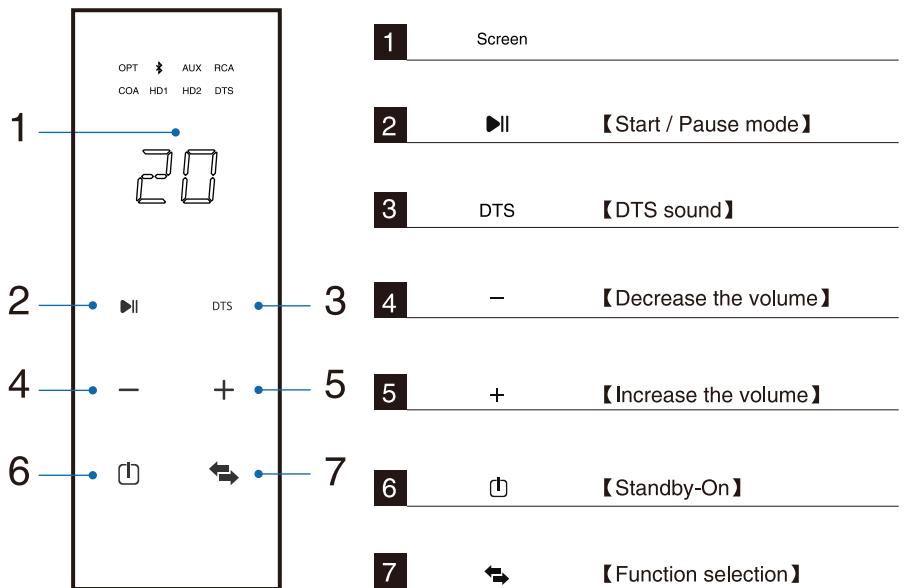

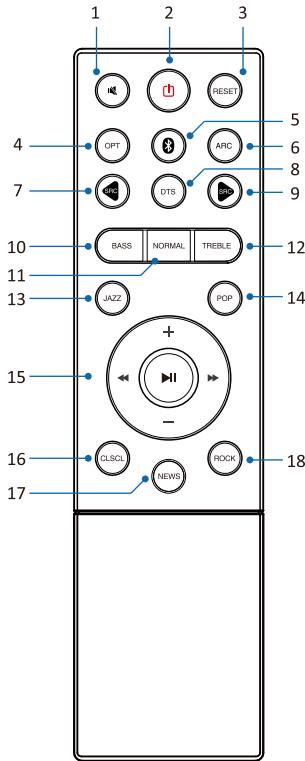

Overview of the remote control

1	🔇	【Mute mode】	11	NORMAL	【Normal sound】
2	⏻	【Standby-On】	12	TREBLE	【Adjust tweeter volume】
3	RESET	【Reset the unit】	13	JAZZ	【Jazz sound】
4	OPT	【Switch to OPT】	14	POP	【Pop sound】
5	Bluetooth	【Bluetooth】	15	⏮ / ⏺	【Previous track/Next track - depend on connected】
6	ARC	【Play HDMI-ARC】		▶	【Start or pause play】
7	SRC	【Audio mode】		+/-	【Adjust volume】
8	DTS	【DTS sound】	16	CLSCL	【Classical sound】
9	SRC	【Audio mode】	17	NEWS	【News sound】
10	BASS	【Adjust subwoofer volume】	18	ROCK	【Rock sound】


Turn on

- ① Open the switch button on the back of the unit,
- ② Press ⏻ on the main unit or the remote control.



Play from Bluetooth® device


Press ⏵ to select Bluetooth® source,
or press ⓧ button of the Remote control,
The display panel shows ⓧ, and the Bluetooth® indicator flashes,
Turn on Bluetooth® function on your device,
When " Silent " displays, select it to start connection,
Play audio files from Bluetooth® devices.

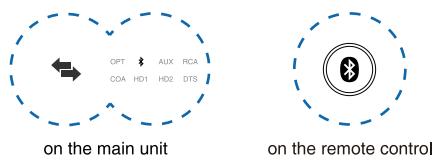

Play from RCA


Press ⏵ to select optical source,
or press ⓧ button of the remote control,
The display panel shows RCA.

Start to play the device.

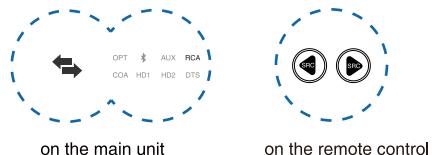


Play from AUX

Press ⏵ to select AUX source,
or press ⓧ button of the Remote control,
The display panel shows AUX ,
Start to play the device.

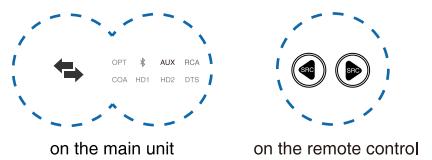

Play from COA

Press  to select optical source,
or press  button of the Remote control,
The display panel shows COA ,
Start to play the device.

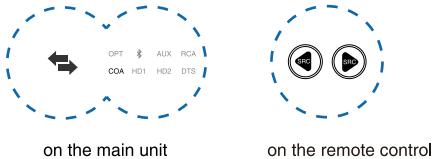


on the main unit

on the remote control

Play from HDMI

Press  to select optical source,
or press  button of the Remote control,
The display panel shows HD1 or HD2 ,
Start to play the device.

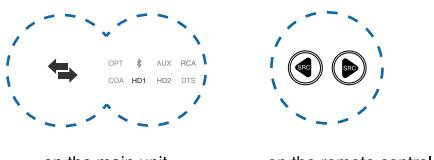


on the main unit

on the remote control

Play from OPT

Press  to select optical source,
or press  button of the Remote control,
The display panel shows OPT ,
Start to play the device.

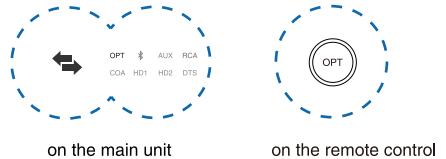


on the main unit

on the remote control

Play from HDMI ARC


Press  to select optical source,
or press  button of the Remote control,
The display panel shows HD1 and HD2 ,
Start to play the device.

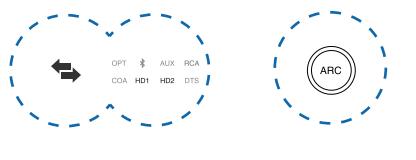

on the main unit

on the remote control

Play

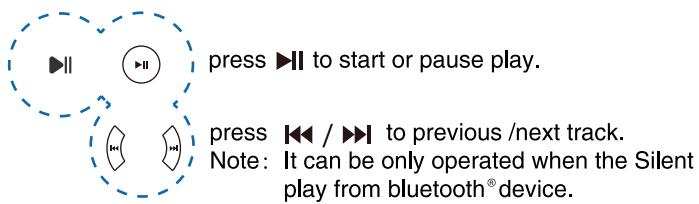

press  to start or pause play.

press  /  to previous /next track.

Note: It can be only operated when the Silent play from bluetooth® device.

ECO , Standby mode


ECO Mode (Power Saving Mode)

The screen will turn off automatically and enter power-saving mode
If no operation is performed for 3 minutes during playing, click
operation panel or any button of remote control to reactivate .

Standby Mode

The sound system will automatically turn off and go into standby mode
if no sound input within 15 minutes, click the operation panel or any key
of the remote control to reactivate.

Adjust volume level

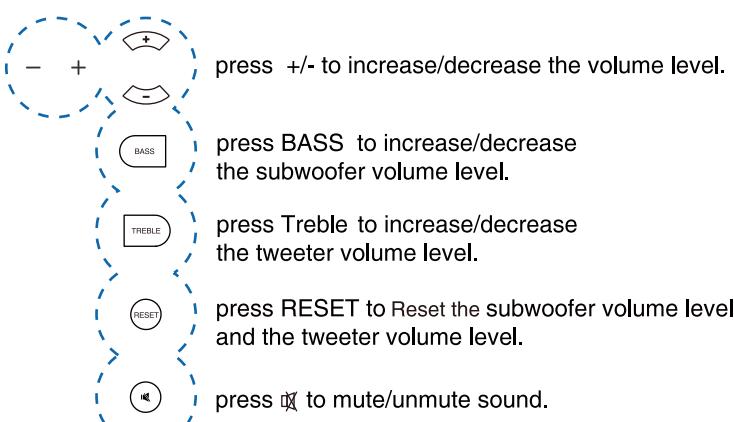

press  /  to increase/decrease the volume level.

press BASS to increase/decrease
the subwoofer volume level.

press Treble to increase/decrease
the tweeter volume level.

press RESET to Reset the subwoofer volume level
and the tweeter volume level.

press  to mute/unmute sound.

?

HELP

Troubleshooting

No sound

- Make sure the sound system is turned on and the power indicator is on .
- Make sure the sound system is not muted.
- Increase the volume.
- Make sure the audio cable connection is correct and secure on the sound system and the TV.
- Make sure the TV of your play devices is on and set to the correct input.
- If you are using a digital audio connection, check that the TV's digital audio output is enabled. See your TV owner's guide for information.
- If a digital audio connection is not possible, use an analog stereo audio connection.
- If the sound system is connected to a TV output labelled VARIABLE (VAR), make sure the TV's internal speakers are turned off, the TV volume is turned up, and the TV is not muted.

Remote control is inconsistent or does not work

- Check the battery to be sure it is installed properly or if it needs to be replaced.
- Point the remote control at the sound system when you press a button.
- Check that the power indicator on the sound system flashes when you press the remote volume or mute button.

Sound is distorted

- Make sure cable connections are secure on the sound system and TV.
- If the sound system is connected to a TV output labelled VARIABLE (VAR), reduce the TV volume.

Sound is coming from the TV

- Turn off your TV's internal speakers.
- Turn the TV volume all the way down.

Bluetooth®

A device cannot connect with the Surround Base.

- The device does not support the compatible profiles required for the Surround Base.
- You have not enabled the Bluetooth function of the device. See the user manual of the device on how to enable the function.
- The device is not correctly connected. Connect the device correctly.
- The Surround Base is already connected with another Bluetooth device. Disconnect the connected device, then try again.

Quality of audio play from a connected Bluetooth device is poor.

- The Bluetooth reception is poor. Move the device closer to the Surround Base, or remove any obstacle between the device and the Surround Base.

The connected Bluetooth device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to the Surround Base, or remove any obstacle between the device and the Surround Base.
- Turn off Wi-Fi function on the Bluetooth device to avoid interference.
- For some Bluetooth, the Bluetooth connection can be deactivated automatically to save power. This does not indicate any malfunction of the Surround Base.

Somle[®]

Ningbo Somle Audio-Visual Technology Co.,Ltd.
Add.:No.39,Lane 150,Behai Rd.,Jiangbei,Ningbo,China
www.somle.com
importer: XXXX, Address: XXXX.

Printed in China

DECLARATION OF CONFORMITY

We, **Ningbo Somle Audio-Visual Technology Co., Ltd**

(*manufacturer's name*)

of **No.39, Lane150, Beihai Road, Jiangbei, 513000 Ningbo, PEOPLE'S REPUBLIC OF CHINA**

(*address*)

declare under our sole responsibility that the product

Product: SOUNDBAR

Model: Silent 1220, Silent 1420

Trademark N/A

(*detailed description of product including name, type, model and supplementary information such as lot, batch or serial number, sources and number of items*)

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

Safety : EN 60065-1:2002 + A1:2006 + A11:2008 + A2:2010+A12:2011

Health : E62479:2010

EMC EN 301 489-1 V 1.9.2, EN 301 489-17 V2.2.1, EN 55013:2013, EN 55020:2007/A11:2011

RF EN 300 328 V1.8.1

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex [III] or [IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

TUV SUD BABT, Octagon House, Segensworth Road, Fareham, Hampshire, PO15 5RL , UK

Identification mark: **0168**

(*Notified Body number*)

The technical documentation relevant to the above equipment will be held at:

Ningbo Somle Audio-Visual Technology Co., Ltd

No.39, Lane150, Beihai Road, Jiangbei, 513000 Ningbo, PEOPLE'S REPUBLIC OF CHINA

(*name and address of EU representative*)

(*name*) **Yang chunyou**

(*title*) **Engineer**

2015-03-17

(*signature of authorised person*)

(*date*)

Yang chunyou

CE 0168