# User Manual Wireless Sporty Earbuds

Trade name:Jablue

Model: SH110


FCC ID:2ACQUSH110



# Introduction

Thank you for purchasing the Wireless Sporty Earbuds SH110. This product is an in-ear Wireless Sporty Earbuds, which is designed to provide stereo wireless sound for your iPad, iPhone, Smartphone, Computer or other Bluetooth audio device!

## **Overview of the Main Unit**

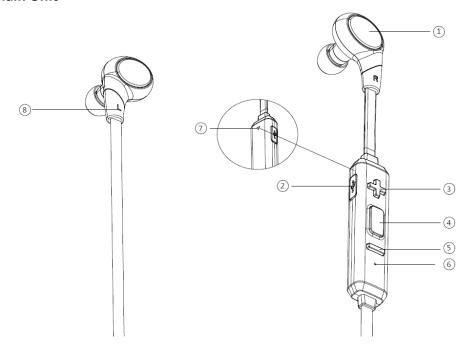

1	Right Channel	5	- Volume Down / Last Track
2	Micro USB charging jack	6	LED Indication Light
3	+ Volume Up / Next Track	7	Microphone
4	■ Multi-Function Button	8	Left Channel

#### Product Features:

Bluetooth Chipset: CSR 8635 Bluetooth Version: V4.1

Bluetooth Profiles: A2DP/HFP/HSP/AVRC

Transmit Power: Class 2

Frequency Range: 2.402 ~ 2.480GHz

Ambient Noise: ≤90dB

Transmission Distance: 10M

Talking Time: Around 4.5 hours

Music Time: Around 3.5 hours

Standby Time: Around 120 hours

Charging Time: About 2 hours

Dimension: 720 X 24.5 X 19.8mm

Net Weight: 15.8g

1

#### Accessories List

1 x 50cm USB charging cable

1 x User Manual

2 Pairs of Extra Eartips (medium/big)

1 x Pouch Bag

## Indication Light

Pairing Status: The red & blue lights flash alternately

Power On: Blue light quickly flashes 3 times Power Off: Red light quickly flashes 3 times

Standby Status: Blue light flashes twice in every 5 seconds


Incoming Calls Indication: Blue light quickly flashes 10 times continuously

Charging: Red indicator light remains on Low Battery: Red light flashes 2 times quickly

Battery Full Charged: The red light is off and blue light is on afterwards

#### Wearing the

Choose the suitable size eartips according to your ear and wear as following shown:

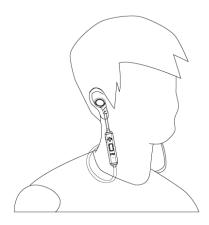

# Power on/off the Sporty Earbuds

To Power On: Press and hold the multi-function button for about 3 seconds, the voice will prompt *power on*, then the blue light will flash in the standby status

To Power Off: Press and hold the multi-function button for about 5 seconds, the voice will prompt *power off*, then the red indicator light goes off

# Using Bluetooth: Pairing/connecting

# Pair the Wireless Sporty Earbuds with one cell phone

1. Please kindly place your wireless Sporty Earbuds with your phone or other device within 1 meter when pairing, the closer the

better

- 2. Press and hold the multi-function button for 5 seconds to directly begin pairing the unit with your device. The voice will prompt *pairing*, and the red & blue light will flash alternately, that means the earbuds is in pair status now
- 3. Activate the Bluetooth Feature on your phone or other device to search the Earbuds, SH110 should appear on your device menu. Select "SH110" on the device to connect. If your device asks for a password, please enter 0000 on your device.
- 4. You will hear a confirmation tone *Connected* once paired with the device, and the blue indicator light will flash twice every 5 seconds, now you can listen to music or enjoy your call conversation by Bluetooth.

#### Note:

- 1) The pairing generally takes about 60 seconds. If the phone or other device is failed to pair with the Sporty Earbuds, the red indicator light will flash slowly, and you will need to repair (see steps 1 ~ 4).
- 2) If the Sporty Earbuds still fails to connect with the Bluetooth device more than 10 minutes, then the Sporty Earbuds will power off automatically.
- 3) Every time the Sporty Earbuds is turned on, it will connect to last connected device automatically. The Sporty Earbuds can remember 8 paired devices, when the number of paired devices exceeds 8, the first one will be replaced.
- 4) If you want to disconnect current device, please press and hold the "+" & "-" buttons until the blue light and red light flashing alternately. It will be ready for paring again.

#### **Pairing Sporty Earbuds with two devices**

- 1. Please follow the above pairing steps  $1 \sim 4$  to connect your first Bluetooth device with the Sporty Earbuds
- 2. Turn off the Bluetooth Feature of the first Bluetooth device
- 3. Repeat the same pairing steps 1 ~ 4 on the second Bluetooth device with the Sporty Earbuds
- 4. Then turn on the Bluetooth Feature of the first Bluetooth device, and connect with the Sporty Earbuds SH110. Now the Earbuds will be connected with two Bluetooth devices at the same time, and you can listen to music or enjoy your call conversation by Bluetooth

## **Playing Music**

Functions	Status of the	Operation	
Volume up	Playing music	Short press + button	
Volume down	Playing music	Short press - button	
Next Track	Playing music	Long press + button	
Last Track	Playing music	Long press - button	
Pause	Playing music	Short press ■ once	
Play	Pause	Short press ■ once	

# **Making Calls Operations**

#### 1) Basic operation

Functions	Status of Earbuds	Operation
Cancel a call	Calling	Short press ■ once

Answer a call	Incoming call ringing	Short press ■ once
Reject a call	Incoming call ringing	Press and hold ■ about 1 seconds
End a call	During a call	Short press ■ once
Volume up	During a call	Short press + button
Volume down	During a call	Short press - button
Voice dial	Standby mode & connected device	Long press ■ button about 1 seconds
Last number redial	Standby mode & connected device	Double click ■ button

Remark: As the Wireless Sporty Earbuds SH110 have the intelligent voice alert function, so if there is a call coming, you can also say "YES" to answer the call. And say "NO" to reject the call.

#### Note:

- 1) Not all the mobile phones support all the functions listed above. Different function and prompt tone according to different mobile phone. Please refer to your mobile phone user's manual
- 2) When the volume is adjusted to max or min, you will hear one prompt tone

## **Activating Voice Dialing**

Please make sure your mobile phone support the voice dialing function and come with the voice tag, in this way, you can use the voice dialing function. First of all, please press and hold the multifunction button for 1 second in standby status, then the voice dialing is activated. Then, you can speak out the voice tag, such as the name or number of the person you wish to call, or the music you would like to listen to, and the Bluetooth device will make the response accordingly.

Remark: Depending on your phone type, the actual voice dialing operation may be different.

## **Charging the SH110**

The Wireless Sporty Earbuds SH110 comes with the built-in rechargeable battery. Please kindly charge the battery fully before using the Sporty Earbuds for the first time.

- 1. Open the cover of USB charging jack, and plugging the charging cable in the USB charge port
- 2. The red indicator light remains on when charging
- 3. The fully charging takes around 2 hours
- 4. The red indicator light goes out and the blue indicator light remains on afterwards when full charged

# Remarks:

- 1) The battery is recyclable
- 2) Batteries (battery pack or batteries installed) shall not be exposed to excessive heat place, such as sunshine, fire and etc...

# **Trouble Shooting**

1. What does it mean when red LED flashes instead of blue LED?

Battery is low power, need to be recharged

- 2. Why is the red LED off when charging?
  - a) Please make sure the charging device connect with Sporty Earbuds well
  - b) The battery may dry up. Please charge the battery for 30 minutes, and then the red LED will be ON
- 3. Why my mobile phone can't search and find the Sporty Earbuds?

  Please make sure the Sporty Earbuds is under the pairing mode and in the effective working range, and then the Sporty Earbuds can be paired and connected
- 4. Why can't I hear the sound clearly on the Sporty Earbuds?
  - a) Make sure the mobile phone is in the strong signal area
  - b) Make sure the Sporty Earbuds is in the available range of this product
- 5. Why the pause/play, last/next song not function well when playing music?

  Make sure your Bluetooth Device and Music Player supports AVRCP (Audio/Video Remote Control profile)

## **Important and Noted:**

- 1. Water and Moisture The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- 2. Heat The unit can work at ~20℃ ~ 65℃, and it should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- 3. Power Sources The unit should be connected to a USB power supply only of the type described in the operating instructions or as marked on the appliance.
- 4. Cleaning The unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.
- 5. Objects and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
- **6.** The product shall not be exposed to dripping or splashing and should not be placed near objects filled with liquids such as vase to avoid any damage.
- 7. To prevent fire or electric shock, please check if the voltage of the power outlet is the same with the specified supply voltage of this unit.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.