

# User Manual

## FaceStamp QSG

## FRONT / REAR PANEL



Please note that the accessory kit and shipping box contain the following items

FaceStamp  
FaceStamp QSG  
Power Adaptor

MADE IN KOREA

Tel. 82-2-576-2205 / Fax. 82-2-576-2204 | www.pravis.co.kr



1	Display Panel	Display ID Input, Date and Time Information
2	Camera	Camera Lens
3	Number Touch Pad	Keypad to input ID
4	Mount Holes	Mount Holes
5	Video Output	Connect the FaceStamp's video output to any of the PVS
6	RS-485	Connect the FaceStamp to any PVS DVR via RS485 cables
7	Power	Power Input, DC12V, IA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.




## DIMENSION(mm)

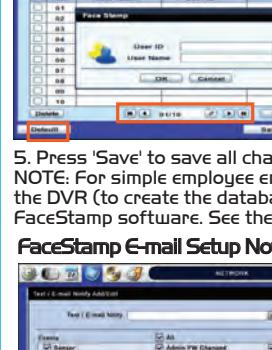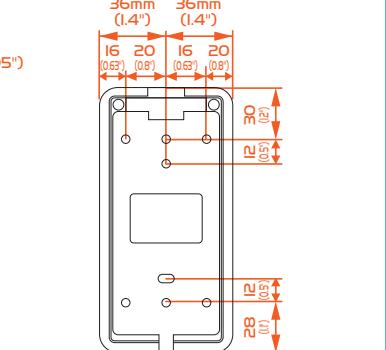



## INSTALLATION

The FaceStamp employee management solution is supported by PVS and QVS models.

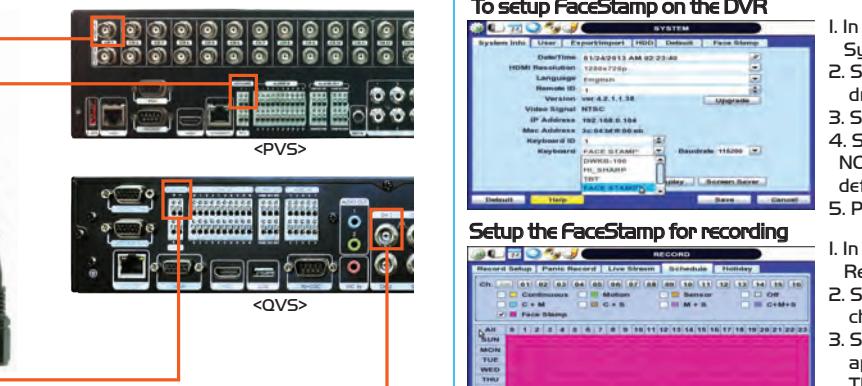

1. Connect the FaceStamp's RS485 connector to the DVR's keyboard port.
2. Connect the FaceStamp's video Output BNC to any of the DVR's video Input channels.
3. Connect the FaceStamp to an adequate power supply (see specifications table on the back for more information).

## DIMENSION(mm)

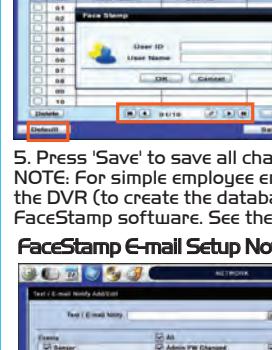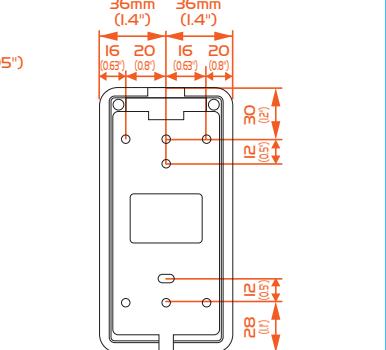

## SET-UP (DVR)

FaceStamp is supported by the PVS and QVS DVRs. To setup the FaceStamp

## To setup FaceStamp on the DVR

1. In the DVR, go to Setup Menu > System > System Info.
2. Select 'FaceStamp' from the Keyboard drop-down options.
3. Set the keyboard ID to '252'.
4. Set the baud rate to '38400'. NOTE: These are the FaceStamp's default settings and cannot be changed.
5. Press 'Save' to save the changes.

## Setup the FaceStamp for recording

1. In the DVR, go to System Setup > Record > Schedule.
2. Select the FaceStamp's camera channel.
3. Select FaceStamp recording mode and apply to the camera's schedule. The FaceStamp recording schedule operates as an event triggered recording schedule, with pre and post

recording based on when an employee clocks in or out.

4. Press 'Save' to save all changes.

## To Add a FaceStamp User

1. In the DVR, go to Setup Menu > System > FaceStamp.
2. Select the FaceStamp's channel from the drop down list.
3. Press 'Add' to register a new employee.
4. Enter the employee's name and USER ID. The USER ID can be up to 12 digits, and will be the code your employee uses to clock in or out.

## 5. Press 'Save' to save all changes.

NOTE: For simple employee entry, it is recommended to add one employee via the DVR (to create the database), and add all remaining employees via the FaceStamp software. See the back side of the QSG for more information.

## FaceStamp E-mail Setup Notifications

To receive e-mail notifications when your employees clock in or out:

1. In the DVR, go to System Setup > Network > Notifications
2. Press 'Add'
3. Enter an e-mail address to receive notifications.
4. From the Event list, select 'FaceStamp'
5. You can also select additional information to be included in the e-mail.
6. Press 'Save' to save all changes.

NOTE: For more information on setting the DVR's E-mail notifications, please see the DVR's full manual.

## OPERATION

Please note that users must be setup via the DVR or the FaceStamp management software prior to operation.

## Clock In / Out

Using the FaceStamp's keypad

1. Press the 'Enter' button to light up the touch pad.
2. Press the '\*' button, followed by your Employee ID
3. Press 'Enter'. The system will notify you if the login was successful.

- Using RF card

## Add RF Card

1. Press '#1 to assign an RF card to an employee.
2. Enter the Employee's ID and press 'Enter'
3. Scan the RF card in front of the FaceStamp hardware until the system beeps and notifies you that the RF card has been assigned to the Employee ID.
4. An RF card can be assigned only to one employee at a time.

## Remove RF Card

1. Press '#2 to delete an RF card.
2. Enter the Employee's ID and press 'Enter'
3. The system will notify you that the RF card has been deleted.

## Change RF Card


1. Press '#3 to change an RF card.
2. Enter the Employee's ID and press 'Enter'
3. Scan the RF card in front of the FaceStamp hardware until the system beeps and notifies you that the RF card has been assigned to the Employee ID.

NOTE: RF cards not included.

## FACESTAMP SOFTWARE



The FaceStamp comes with an advanced employee management FaceStamp software. The software can be downloaded from CD supported with 960H DR.

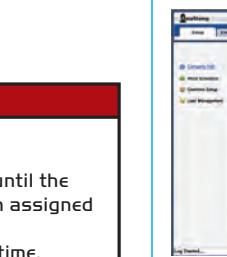


Once installed on a proper computer, you can use the software to manage your employee's database, search and create reports that can be exported to popular payroll software for salaries and payment.

To launch the FaceStamp Software:

1. Make sure the software is properly installed on your PC.
2. Double-click on the FaceStamp desktop icon or locate the installation location to launch the software.
3. Enter the software user name and password. By default, the user name and password are admin / no password.
4. Press 'Login' to launch the program.

Once installed on a proper computer,

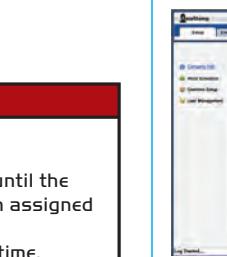

Whether you connect to the FaceStamp software for the first time, you will be asked to add your DVR's information. To do so:

1. The DVR Login page will appear automatically. You can also access it by clicking on the 'Login' button at the top right-hand corner of the screen.
2. To add a new DVR:
  - a. Press 'Add'
  - b. Enter the DVR's name, IP Address,

Port, and user name and password information.

- c. Press 'OK' to save.
3. To edit a DVR's information:
  - a. Select the DVR from the drop-down list and Press 'Edit'
  - b. Edit all necessary information.
  - c. Press 'OK' to save.

4. To delete a DVR's information:

- a. Select the DVR from the drop-down list and Press 'Delete'.
5. To connect to a VR, select the VR from the drop-down list and press 'Connect'. The system will start download all FaceStamp data from the DVR. This may take up to a few minutes.

NOTE: If you have already downloaded data from the DVR, you can check the box next to 'Log off' to access the data offline without having to connect to the DVR again.

