

瓦力光™
WALI-G

ET-4

使用说明书 Instructions



多功 能影 音播 放器

Multi-Functional Video Player



Catalog

Announcement.....	1
Caution.....	1
Accessory List.....	1
Range of Application.....	1
Mainframe Diagram.....	2
Key Port Presentation	2
Remote Control Diagram.....	3
Key Presentation	3
Basic Functional Characteristic of the Player	3
Support connecting function with PC	
System Configuration Requirement	4
USB Storage /HUB Functional Introduction.....	4
Basic Function of UI Interface Menu.....	5
Video Player Function and Basic Operation.....	5
Music Player Function and Basic Operation.....	6
iPhone Player Function and Basic Operation.....	7
Exterior Audio Input Function & Basic Operation.....	7
Photos Preview Function & Basic Operation.....	8
Browser Function & Basic Operation.....	10
Calendar Function & Basic Operation.....	11
EBook Function & Basic Operation.....	11
Alarm Function & Basic Operation.....	12
Setting Function and Basic Operation.....	13
FAQs	14

Announcement

1. Prohibiting any type of copying, sending, distributing and storing of this User Instruction before company's paperwork authorization.
2. It is struggling to ensure the correctness and completeness of the content during the writing process of this User Instructions, but it does not guarantee all the contents are accurate. Company does not take responsibility of any mistake in this User Instructions.
3. Observing the rule of continuous development, we reserve all the rights of editing or improving any product in this User Instructions without any Pre-notice.
4. We do not take any responsibility for all data loss or any indirect lose in any circumstance, no matter what the reasons of causing these loss are.
5. Please read the regulations above carefully, violating of these regulations may cause danger or infringes the laws.

Caution

For all users, please read and observe all the following rules, in order to ensure the appropriate usage of this player.

- ⚠ This device does not have water proof function, please keep it dry
- ⚠ Do not put this device above flame, such as candle.
- ⚠ Do not bump
- ⚠ Do not touch with chemicals such as: benzene and diluents
- ⚠ Do not put the device close to electric field or magnetic field
- ⚠ Please keep away from direct light or heat emitting facilities
- ⚠ Self disassemble, fix and rebuild is prohibited
- ⚠ In order to avoid serious injury, please do not use this player or headphone during driving or bicycling motorcycling
- ⚠ Do not turn the volume too high, or it could damage the auditory sense
- ⚠ Please categorize used packing, batteries and electronic products.
- ⚠ Must use authorized the accessories; do not connect with incompatible products.
- ⚠ Please unplug the product from power outlet if it is not be used for a long time.

Accessory List:

User Instruction X1, Remote Control X1, Power Adapter X1, USB Cable X1, LINE IN Cable X1, WALI-G TF Card X1


Range of Application:



This product can connect to desktop computer, laptop, tablet, cell phone, camera, and TF/SD card, etc., with USB wire, audio output port, data wire and SD/TF card slot.

Mainframe Diagram

Key Port Presentation

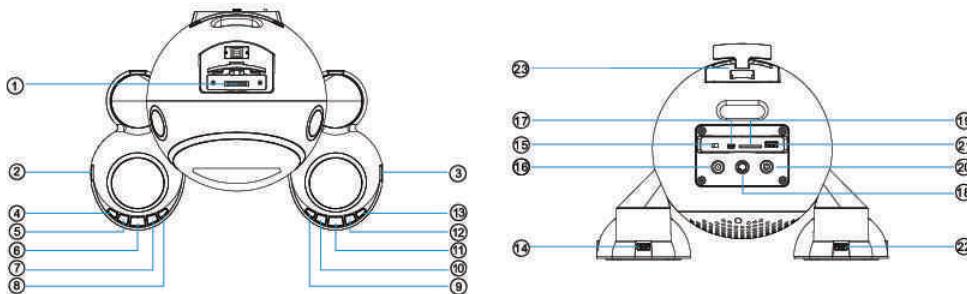


- ①. iPhone Connector: For iPhone external speakers and charging it.
- ②. TV/Earphone port: Earphone output and video output port
- ③. USB-HUB Port: When mainframe connecting to computer, computer can read the data with internal format from USB devices
- ④. Movie Key **MV** : Short press to enter into movie player mode
- ⑤. Setting Key **MUSIC** : press short directly into setting page
- ⑥. Power Switch  : press short directly turn the device on or off
- ⑦. Menu Key **MENU**: Short press to enter into menu
- ⑧. Return Key **ESC** : Short press to return to upper menu
- ⑨. Volume down **v-**: short press to turn the volume down slowly; long press to turn the volume down quickly
- ⑩. Previous Song Key : select previous menu or document, song; long press to quick playback
- ⑪. Play Key : short press, confirm/play/pause/exit menu
- ⑫. Next Song Key : select next menu or document, song; long press to quick forward
- ⑬. Volume up **v+** : short press to turn the volume up slowly, long press to turn the volume up quickly
- ⑭. USB-HUB Port: When this player is connecting to a computer, computer can read the data from USB devices by connecting this player with those USB devices
- ⑮. ON/OFF Switch: This switch controls the power of the mainframe when it connects to a DC15V power source
- ⑯. DC 15V Port: Power source of this player
- ⑰. MINI USB Port: It is able to read and erase the data in the internal storage and exterior storage when it connects to a PC
- ⑱. BASS button: rotate this button can turn the bass on or off
- ⑲. TF card slot: Plug in the TF card, then the player can read and play the documents such as audio documents, videos, pictures and TXT documents within the TF card.
- ⑳. LINE IN Port: Player can play the music from Line IN port by connecting CD, DVD, MP3, MP4, MP5, Mbphone, computer, etc., with a 3.5 audio wire
- ㉑. USB Port: This player can read and play the documents such as audio documents, videos, pictures and TXT documents with the USB devices when the USB devices are inserted.
- ㉒. USB-HUB Port: When this player is connecting to a computer, computer can read the data from USB devices by connecting this player with those USB devices
- ㉓. "Bluetooth" Key  : Short press this key could turn the Bluetooth function on or off. When the Bluetooth function is turned on, electronics devices with Bluetooth functions (such as mobile phone) could play the internal audio documents when the Bluetooth is searched and connected.

Remote Control Diagram

Key Presentation

- ①. Power Switch  : Turn the product on or off
- ②. Mute Key  : Mute or cancel Mute
- ③. Image Key  : Directly into picture browsing page
- ④. Music Key  : Directly into music page
- ⑤. Movie Key  : Directly into movie page
- ⑥. Play/Pause Key  : Confirm/play/pause/exit menu
- ⑦. Volume Up Key  : Volume Up
- ⑧. Volume Down Key  : Volume Down
- ⑨. Previous Song Key  : Select previous menu or document, song, long press: quick playback
- ⑩. Next Song Key  : Select next menu or document, song; long press: quick forward
- ⑪. Menu  : Enter the submenu under video and audio mode
- ⑫. Setting Key  : Enter setting frame
- ⑬. ESC  : Return to previous menu
- ⑭. iPhone Key  : Convert to iPhone player mode when connects to iPhone
- ⑮. Date Key  : Directly into Calendar
- ⑯. Video Output Key  : Press this key to convert video output.

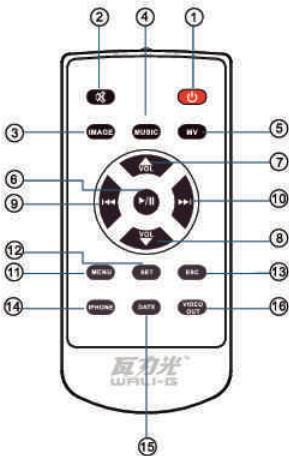

Basic Functional Characteristic of the Player

1. Support to read SD card and USB devices automatically
2. Music Player: Support MP3,WMA, OGG, APE,FLAC, WAV, AAC
3. Picture Browsing Support: Support JPEG, BMP, GIF,TIF,PNG
4. Video Playing Support: Support RM, RMVB, AVI, MKV, WMV, VOB, MOV, FLV, ASF, DAT, MP4, 3GP, MPG, MPEG etc., 720p video no need to convert, can play directly, H.264Hp high bit rate smooth decoding.
5. Text: TXT, JAR
6. Support calendar function
7. Setting Function: Support the display and setting of all functional properties
8. exFAT/TAT64 system support
9. Support multitask operation
10. Support data exchange (between the card and the internal storage)
11. Support exterior audio input for iPhone
12. Support music playing and charging for iPhone
 - a). This Product has a iPhone connecting port; it can use as a outside speaker and a charger
 - b). It is able to control: Volume Up/Down, Previous/Next Song and Play/Pause under iPhone mode.
13. Support USB 2.0,HUB Extension

- a). Support data transmission, full speed of 480Mbps, middle speed of 12Mbps, Low speed of 1.5Mbps.
- Compatible for USB1.1/1.0 as well
- b). Support hot plug, convenience to use
- c). System Support: Window 95/98/2000/2003/ME/XP/Vista/Win7, Mac OS 8.1 or higher (need to download drive for Windows95/98)
- d). Applicable to USB devices, digital cameras, MID, cell phones, digital video recorder, Input devices, etc.
- e). 4 Standard USB 2.0 ports, easy to use
- f). Please use the authorized wires from our company

Support connecting function with PC

System Configuration Requirement:

Operating System: Window 7/Vista/XP/2K/ME/98(drive needed)/Linux9 and higher/Mac OS 10

CPU: Minimum Pentium-133MHz

Memory: Minimum 32MB

Hard Drive: Minimum 100MB

Graphics Card: 640*480 or higher, minimum high color (16 bit)

USB Storage/HUB Function Introduction

I. USB Storage Function

 
- 1). Plug the WALI-G TF card into the card slot of mainframe (Key Port ⑯)
- 2). Plug in the specialized AC adapter and connect to a AC power source.
- 3). Connect this player to a PC using the USB cable; plug the double USB plug side into the USN port on PC, mini plug side into the MINI USB port of this player (key port ⑰)
- 4). Turn the power switch on, which is on the back of the mainframe, waiting for the boot animation to enter into USB storage and HUB function page, as illustrated in the figure below:



- 5). These figures will show up at the bottom of the screen:



Now, launch "My Computer",  and two additional disks will show up, then they could be written and read.

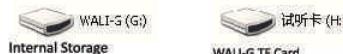


Caution:

If the TF card is inserted after connecting this player with a PC, this player will automatically recognize and load the audio documents in the TF card and transfer to the music player page. No audio output if the AC adapter is not connected. The player will not transfer to music player page if there is no audio document in the TF card.

II.HUB Function

 - 1). Plug in the specialized AC adapter and connect to a AC power source.
- 2). Connect this player with a PC by a specialized USB cable
- 3). Turn the power switch on, which is on the back of the mainframe, waiting for the boot animation to enter into USB storage and HUB function page, as illustrated in the figure below:
- 4). Plug in any USB device into the USB-HUB port ③, ⑯, ⑰
- 5). Click the bottom of PC screen as follow:

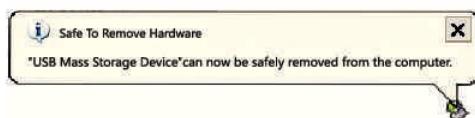

The player will transfer to UI page after unplugging the USB storage, at this time, music are played, HUB function can still be used when browsing pictures or videos.

Basic Function of UI Interface Menu



Movie Player Function and Basic Operation

Two music player mode are available for this player

1. Short press the **M/V** key to enter the Video playing mode directly
1. Select “**Video**” in the home page by pressing **◀▶**, then press **▶▶** key to enter the menu list. Short press **◀▶▶▶** or **▲/▼** to select “Now Playing” or “Dir list”, then press **▶▶** to confirm.

Now Playing: Continue to play from the previous point. It does not show if it was not played.

Dir List: Internal storage, card catalog. music, which is storage in the card are showed in the

Card Catalog. It shows nothing if there is no card inside.



Key Function and Basic Operations

- 1). **Play/Pause:** press **▶||** to start playing, press again to pause. Press any key to show up and down information and progress bar while playing to execute the relevant order.
- 2). **Fast Forward & Playback:** Long Press **◀◀/▶▶** Key could play fast forward or playback while playing or pausing.
- 3). **Documents switch:** Short Press **◀◀/▶▶** Key could switch up or down documents while playing or pausing.
- 4). **Volume Up/Down:** Press **<V+/>V-** Key to adjust the volume
Short Press **V+** to turn the volume up one unit
Long Press **V+:** to turn the volume up quickly
Short Press **V-** to turn the volume down one Unit
Long Press **V-:** to turn the volume down quickly

Caution:

For all the manipulations above, press **▶||** key to enter or confirm, press **ESC** key to return to upper menu or exit.

Sub Menu

Short Press **MENU** Key to enter the submenu in the playing frame, Options are :
[Playing mode], [Scanning Speed], [Display Mode], [Recover], [Delete], [Audio Track], [Subtitle] and [Detail Information]



Menu Operation Instructions


Short press **◀◀/▶▶** or **▲/▼** select up & down options, press **ESC** to return to the upper menu or exit, same manipulations for all menus.

- 1). **Playback Mode:** Press **▶||** key to enter the options: ordering play, single cycle, all cycle, random and random + repeat.
- 2). **Scan Speed:** press **◀◀/▶▶** Key to adjust the range 0-8.
- 3). **Screen Size :** Full screen, original size, actual size, etc.
- 4). **Resume:** Continuous playing function, turn on or off.
- 5). **Delete :** Delete the current documents.
- 6). **Track :** Support the switch of several audio tracks.
- 7). **Subtitle :** Support built-in subtitle/outside subtitle/turn off. Default setting is outside subtitle.
- 8). **Detail Information :** Show the relevant information of the current document.

Music Player Function & Basic Operation

Two music player mode are available for this player

1. Short press the **MUSIC** key on the mainframe or the **MUSIC** key on the remote control to quick enter into music player mode:
2. Select “” in the home page by pressing **◀◀ ▶▶**, then press **▶||** key to enter the menu list. Short press **◀◀/▶▶** or **▲/▼** to select “Now Playing” or “Dir list”, then press **▶||** to confirm.

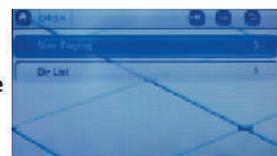

Borwser Function and Basic Operation

Select [**Borwser**] in homepage «  » to enter into the main menu




Key Function Operation

- 1) Press **▶||** key in home page to enter [**Borwser**], press **◀◀/▶▶** or **▲/▼** to select [Internal Uemory], [Card Directory]. The play will be show these options if no TF card or USB storage is inserted.
- 2) Select [Interior Uemory] to enter, and will see the menu list, including EBOOK, MUSIC, PICTURES, RECORD, SYSTEM, VIDEO and other user documents.
- 3) Select one folder; press **▶||** key to show all the documents in this folder. Select the document you want to browse, then press **▶||** key to open
- 4) The manipulations for the Card Catalog and Exterior Storage are similar.

Submenu


Long press **MENU** key to enter into the submenu, options are:[Search File], [Select /Cancel All], [Select], [Move], [Copy] and [Delete]

- 1). Search File: Enter keyboard to quick search document. See the character [MUCIS KEYBOARD MANIPULATION] for specific operation.
- 2). Select /Cancel All: Select all the documents and folders under the current catalog; documents and folder will show red **✓** after selecting. Press **MENU** key or select [Select all/Cancel] to cancel
- 3). Select: Select single document, the small icon in front of the folder will show the red **✓** after selecting; press **▶||** key to select or cancel single document
- 4). Move & Copy: Select the document/folder that need to move/copy, long press **MENU** key, select move/copy, then select the destination folder. At that time, long press **MENU** key to pop-up window, showing confirm to move/copy? **Make sure to move?** Select **Yes** to finish.
- 5). Delete: delete all the selected documents

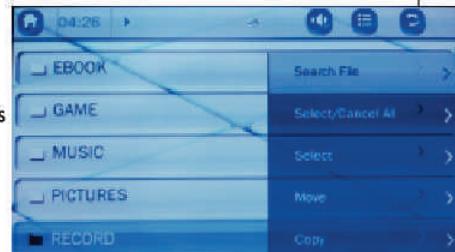

Photos Preview Function and Basic Operation

Press [Photo] in the main interface  to enter the main menu

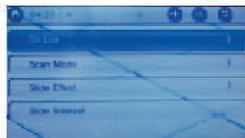

Scan Mode: sets the display option of picture browsing, list mode and Thumbnail mode are available.

Dir List : Functions the same < Music Dir List >



Slide Effect: Select the special effects of picture browsing: random, fly in, chessboard, Cut, Erase, Louver, random line, water wave, cube, rotate on and off.

Slideshow Interval : Select the picture playback interval 1-10 seconds



Key Function and Basic Operations

1). **Play/Pause:** When browsing pictures, press **▶/II** key to switch manual/automatic browsing mode. Press **◀/▶** Key to show the previous/next picture under manual mode.

2). Press **◀/▶** key to move left and right under thumbnail browsing mode.

Sub Menu

Short press the menu key **■** to enter into submenu when browse the picture manually, press **◀/▶** or **▲/▼** options are [Rotate],[Zoom],[Slide Interval],[Background Setting],[Delete] and [Detail Information].press **▶/II** to enter or confirm the options,press **ESC** back or exit menu.

1) **Rotate:** could rotate the pictures to 90°/180°/270°

2) **Zoom:** pres **▶/II** to zoom **IN/OUT** After pressing the Menu Key to exit the menu, press **◀/▶** key to move left and right to view the picture, short press the return key to exit zoom mode.(Cannot select one or more documents under the zoom mode).

Notes: Zoom and rotate function is invalid for GIF pictures.

3) **Slide interval:** Setting the interval times of playing pictures.

4) **Slide Effect :** Setting the playing effect of pictures,such as none,cut, fade, push, wipe, split, reveal, random bars shape, uncover, cover, flash, dissolve, checkerboard, clock, ripple

5) **Delete:** delete the current picture

6) **Information:** To view the relevant information of the current picture

Caution:

For all the manipulations above, press **▶/II** key to enter or confirm, press **ESC** key to return to upper menu or exit.

iPhone Player Function & Basic Operation

Two iPhone player mode are available for this player:

1. Plug iPhone in the iPhone port on top of the mainframe, the player will transfer to iPhone mode at this time.
2. Select  in the home page, press **►||** key to enter the iPhone connection



Connecting with iPhone, and charging simultaneously



iPhone Mode Frame after connecting with iPhone

Under the connection with iPhone, player can play the music in iPhone, and charges simultaneously.

Under this Mode, player can play the music in iPhone, and charges simultaneously

- 1) Play/Pause: press **<►||>** Key to switch play/pause
- 2) Fast Forward/Playback: Long press **◀◀/▶▶** key to play fast forward or playback when the music is playing or pausing
- 3) Music Switch: short Press **◀◀/▶▶** Key to switch previous/Next Song
- 4) Volume Up/Down: press **[V+/V-]** to adjust the volume.

Exterior Audio Input Function and Basic Operation

Select  in the home page, press **►||** key to enter the exterior audio, wire connecting or Bluetooth connecting page.



Exterior Audio input wire connecting method and operations

- 1). Plug the LINE IN cable 3 into the LINE IN Port on the back of the mainframe.
- 2). Plug the LINE IN cable 4 into the audio output Port of the electronic devices such as PC, Laptop, Mobile phone and MP3.
- 3). Volume Up/Down: press **[V+/V-]** to adjust the volume.

Bluetooth input connecting method and operations

- 1). Select  in the home page, power on the Bluetooth switch “ 

Note: Other audio sources are unavailable when the 

Page 8

NowPlaying: Same function as movie player mode
Dir List: Same function as movie player mode



- 1) **Play/Pause:** Press **▶||** Key, switch Play or Pause
- 2) **Fast forward and Playback:** Long Press **◀◀/▶▶** key to play fast forward or playback while playing or pausing the music
- 3) **Music switch:** show press **◀◀/▶▶** Key to switch previous/next song
- 4) **Volume Up/Down:** Press **[V+/V-]** to adjust the volume

Sub Menu

Short press **MENU** key under the music player page to enter the main menu
Options are:[select EQ],[Playmode],[Screen Size],[AB repeat],[Variable Speed Playback],[play],[Delete],[Advanced],[EQ Setting] and [Detail Information]



Operational Description of the Menu: Short Press **<◀◀/▶▶>** or **<vol./vol>** to select options;
Press **▶||** to confirm, Press **ESC** to return to the upper menu or exit; Same manipulations for other menus.

- 1). **Select EQ:** Natural, Pop, classical, soft, jazz, rock, bass, User EQ, SRS WOW, SRS WOW HD and SRS mode.
- 2). **Play mode:** order playing, single cycle, all cycle, random, random + Repeat and Browsing.
- 3). **Screen Size :** Displays frequency spectrum & lyric
- 4). **AB Repeat:** Select **<AB Repeat>** ,press **▶||** interface repeater signs 'AB' A point highlighting , which means to wait to confirm the point A ; press **▶||** , 'B' highlighting , which means A point to determine , waiting to confirm point B : press the **▶||** again , the icon 'A-B' while highlighting , which means that point B OK to start AB repeat ; this time as you press the **▶||** again to cancel AB repeat
- 5). **Variable Speed Playback** press **◀◀/▶▶** to adjust the playing speed from-4 to 4
- 6). **Delete:** Delete the playing document
- 7). **Advanced:**
 - Replay Times :** press **<◀◀/▶▶>** Key to adjust the number of time repeating from 1 to 10
 - Replay Interval:** Press **<◀◀/▶▶>** key to adjust the repeating gap, from 1 s to 7s
 - Scan Speed:** press **<◀◀/▶▶>** Key to set the Fast forward/Playback Speed, X2, X4, X8, X16 and X32
- 8). **EQ Setting:**
 - 1).**User EQ:** enter [user EQ] and long press **MENU** Key to select different options, press **MENU** key to adjust value
 - 2). **SRS Mode:** Same as[User EQ]
- 9). **Information:** Shows the relevant information of the playing song

Calendar Function and Basic Operation

Select [Calendar] in home page “” to enter into main menu

Operations

- 1). Select , press **▶||** key to enter
- 2). Press **▶||** key to switch to year/month/day, short/long press **◀◀/▶▶** key to check the date parameter.
- 3). Press **ESC** to exit.



Note: Please read the [Date and Time] setting on page 27 if the date is need to be adjusted.

EBOOK Function and Basic Operation

Select [EBOOK] in home page “” to enter **▶||** into the main menu.




Menu Function and Operation

Reading: Start reading from the last marked reading point

Dir List: Press **▶||** key to enter into E-book catalog, or short press **◀◀/▶▶** or **▲/▼** to select options, press **▶||** to read the text.

Tag List: List out all the documents which have page number

Document Browsing and Basic Operation

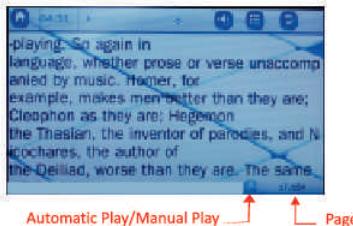

1). Play/pause: Under the browsing mode, press **▶||** to switch between automatic mode

 and manual mode 

2). Manual mode, press **◀◀/▶▶** key to turn the page up or down


Submenu

Long press **MENU** to enter into the submenu in document

browsing mode, options are: [Skip To], [Auto Reading Speed],

[Add Tag], [Font Size], [Font color], [Page Effect] and [Delete

File].

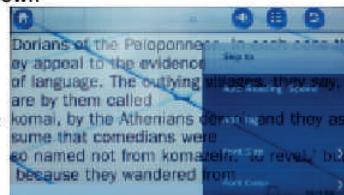

- 1). Skip to: Jump to specific page according to the percentage of the whole page
- 2). Auto Reading Speed : Set the automatic reading interval, press $\langle\langle/\rangle\rangle$ to change the parameter, range from 5 to 30 seconds, each 5 second to be level
- 3). Add Tag : Mark the current reading page. Function is the same as the add label for the MUSIC MODE.
- 4). Font Size: Change font size: small, medium or large size
- 5). Font color: Four colors are available
- 6). Page Effect : close, flat flip and curly page
- 7). Delete File : Delete the current documents

Caution:

For all the manipulations above, press $\blacktriangleright\blacksquare$ key to enter or confirm, press **ESC** key to return to upper menu or exit.

Alarm Function and Basic Operation

Select [Alarm Setting] in home page “” enter into the main menu

Main Menu and Basic Operation



Press $\blacktriangleright\blacksquare$ key to enter the alarm setting page, short press $\langle\langle/\rangle\rangle$ or $\uparrow\downarrow$ to select the setting options.




Alarm Setting

- 1) Alarm Press $\blacktriangleright\blacksquare$ Key to set the alarm[ON/OFF]
- 2) Type of Alarm : [Auto Alarm]
- 3) Alarm time: [0:0] Set the alarm, short press **MENU** switch hour and minute, press $\langle\langle/\rangle\rangle$ to change the parameter, press $\blacktriangleright\blacksquare$ key to confirm and exit.
- 4) Alarm time : [weekend/single/everyday/Monday through Friday], press $\blacktriangleright\blacksquare$ key to set cyclic alarm
- 5) Alarm [could select the music which is stored in this product to be a ringtone], see the music operation page
- 6) Alarm Volume: [adjustable from 1-40]. Press $\blacktriangleright\blacksquare$ key to set

Setting Function and Basic Operation

Select “” in home page, press **▶||** key to enter into the mainframe setting page, short press **◀◀/▶▶** or **▲/▼** to select the setting options.

Main Menu and Basic Operation

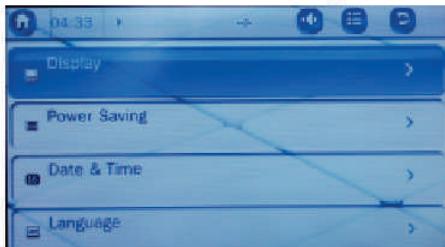

Mainframe Setting

1). Display Setting:

Brightness: Five levels

Backlight Time: OFF/5s/10s/20s/30s/1min/5mins are available

The backlight will not turn off if the time setting is OFF; if the backlight setting is ON, the backlight will turn off when no key is pressed

Screen Saver: Clock/Black Screen (this product does not have this function)

2). Power Saving:

Power Saving Time: OFF/10s/30s/1min/3mins/5mins and 10mins. If the power Saving time is off, the player will not shut down automatically, if it is ON, the player will shut down automatically when no key is pressed.

Sleep Time: OFF, 10mins/30mins/1Hr/2Hrs/3Hrs/4Hrs and 5Hrs, the player will shut down automatically, according to the sleep time setting.

3). Date and Time

Set Date : Set the system date, short press **MENU** key to switch year/month/day, press **◀◀/▶▶** key to change the parameter, press **▶||** key to confirm and exit

Adjust Date/Time : Set the system time, Press **MENU** key to switch hour and minute, press **◀◀/▶▶** key to change the parameter, press **▶||** key to confirm and exit

Language : 29 different languages: Simplified Chinese, Traditional Chinese, English, Japanese, Korean, French, German, Italian, Dutch, Portuguese, Spanish, Swedish, Czech, Danish, Polish, Russian, Turkish, Hebrew, Thai, Hungarian, Romanian, Arabic, Indonesian, Malaysia, Vietnamese, Norwegian, Finnish, Greek and Indian are available. Default is Simplified Chinese.

4). TV-OUT: Set the type of video output for the player

OFF: Video output function off when selected

PAL: Launch the video output function after selected, play mode converted to PAL

NTSC: Launch the video output function after selected, play mode converted to NTSC

5). Advanced:

5.1 Enter into detail information, could browse the following contents:

- Firm WaveVersion • Uemory Total Space • Uemory Free Space • Card Capacity
- Card Free Space • External Capacity • External Free Space

5.2 Effect Setting

Fly in Cube Rotate OFF

Fly In: Special effect of the slide is set to be "fly in" mode when this option is selected.

Cube: Special effect of the slide is set to be "Cube" mode when this option is selected.

Rotate: Special effect of the slide is set to be "Rotate" mode when this option is selected.

OFF: Turn off special effects when this option is selected.

5.3 Turn the Search Folder Function ON or OFF: ON, OFF. Set whether to search the next level catalog in search setting

5.4 Format Internal Uemory: Could format the internal storage in this player. Please save all the useful data before formatting.

5.5 Format Card : could format card. Please save all the useful data before formatting.

5.6 Format External Uemory : Could format the inserted memory card. Please save all the useful data before formatting.

5.7 Reset Default Setting: System will remind whether to restore to factory setting, select YES, then the system will restore to Default Factory Setting.

Caution:

For all the manipulations above, press **►■** key to enter or confirm, press **◀▶/■** key to adjust parameter, press **ESC** key to return to upper menu or exit.

VII FAQs

1. Player cannot be turn on: Please check the connection between the power adapter and the power source.

2. No sound for the earphone: Please check whether the volume is set to 0
Please check whether the earphone is inserted.

3. Serious Noise:

Please check whether the earphone plug is clean, dirt might cause noise
Please check whether the Music document is damaged, could confirm by playing other music.
It might create serious noises if the Music document is damaged.

4. Unreadable Code Display:

Please check whether the appropriate language is selected

5. Download unavailable

Please check the connection between the player and PC

Please check whether the space of internal storage is full

Please check whether the USB wire is damaged

6. Silent or low volume:

Please check whether the mute key is pressed on the remote control

Please check whether the volume is turned to minimum on the remote control

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.