

Tablet PC



Users Manual

Note: Please read the manual before using the tablet PC.

Thank you for buying the new tablet.

This manual is to let the customer the fastest to understand and familiar with our products, here the button layout and the definition of our products in the form of graphic made simple introduction, to do some basic operation simple instructions.

First, note before use.....	02
Second, the button layout and define.....	03
Three, the keyboard and application.....	04
Four, desktop	05
1. The screen Windows8.1	05
2. The picture sliding application	05
3. The apps introduction.....	07
4. The Charm menu bar	08
5. Double screen used	10
Five, the basic operation.....	11
1. The dormancy, restart, shutdown	11
2. The safety management.....	11
Specification.....	12
Warranty card.....	13

First, attention before use

1. The product is only suitable for below 2000metres of the tropics, the sign says the product is suitable for use in nameplate in subtropical regions.
2. Avoid the unit fell to the ground or other strong shock.
3. Don't be too wet, in extreme cold, heat, dustyenvironment of use for a long time, don't let the noise of the machine in the sunlight.
4. Try to avoid the strong magnetic, strong electrostatic environment use.
5. Once you have spilled water or other liquid of this machine, shall be immediately shut down, the native wipes, just can use after drying.
6. Do not use any detergent containing chemical composition, or other liquid to wipe the machine, to avoid the damage caused by corrosion and be affected with damp be affected with damp, if there are clean, use a dry soft cloth or paper towel to wipe
7. The company to human improper operation and maintenance of hardware and software within the machine or other unexpected result in data loss or delete do not assume responsibility, also do not bear other losses thus caused.
8. Please feel free to backup your important data, in order to avoid lost.
9. Please do not remove the machine itself, otherwise you will lose the warranty rights.
10. This product support most of the mainstream brand 3G DONGLE card, 3G DONGLE may vary, it is recommended that you test OK before you buy.
11. A quick start guide and related software update, the software update can visit www.xxx.com to download, without prior notice, if found not in conformity with quick start guide, please in kind prevail.
12. With error model battery replacement will be explosion danger, be sure to use the original battery.

Second, the button layout and definition


Six views:



1. Sound - / + : lower/raise the volume
2. Front-facing camera, photos and video
3. The camera light: camera will in the built-in camera lights light up when using Or wake up from sleep mode
4. Ambient light sensors, light sensors will detect ambient light and change the brightness of the screen
5. Windows button: press this button will be back to the start screen
6. Mobile base keyboard interface: the interface have magnetic, easy alignment and solid link tablet and keyboard
7. The rear camera: photos and videos
8. Speakers: built-in speaker let you don't need to link to additional equipment can be heard voices
9. The power button: press the touch screen panel on or off. You can also use this button to let computers into dormancy.
10. Headset with a microphone and jack: this jack cocoa tablet audio signal output to the amplifier or headset
11. The Reset button: restart the function of the system and Reset the system
12. Mini HDMI Interface: High - Definition Multimedia Interface, high-definition Multimedia Interface
13. Micro SD card slot: built-in memory card reader card slot, support with MicroSDHC MicroSD format
14. MIC: microphones export
15. Micro USB interface, you can reading data from the USB
16. DC power supply interface: by DC charging interface for your tablet

Third, buttons and application

Note: the keyboard needs buy in addition, product configuration, please according to the model you purchase shall prevail.

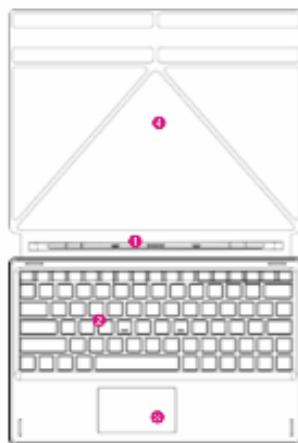


1. Keyboard form: provide a full-size QWERTY keyboard group
2. Buttons and provide excellent typing comfort.
3. Touch pad: used to control the cursor on the tablet, and mouse functions are the same.
4. Base: folding base of tablets.

Using ways of tablet and keyboard



Four, the desktop is introduced

1. The screen Windows8.1, at the start of the screen you can see many fixed procedure in the picture, these applications display, in the form of "magnet" with one click, can easy access. The application need to login before completely run your Microsoft account

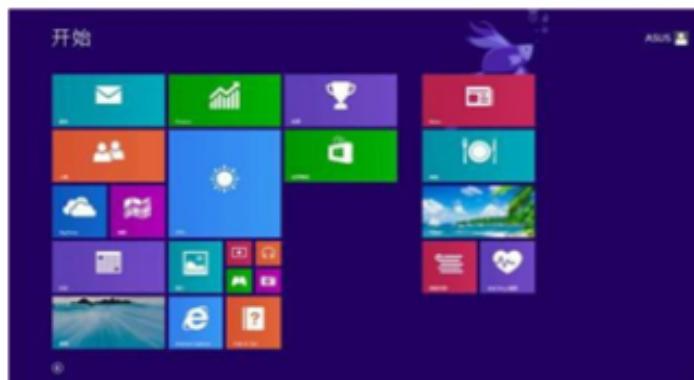

2. The picture sliding applications

Slide to the right



Slide from the left side of the screen to right to open the running application

Scroll left



From sliding to unlock Charms on the right side of the screen to the left menu bar

Reduce




Two fingers together on the touch screen to shrink

Larger




Separate two fingers on the touch screen to zoom in

Slide down finger sliding

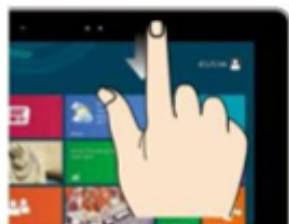

At the start of the screen, sliding down from the top of the screen to see all the applications

Finger sliding

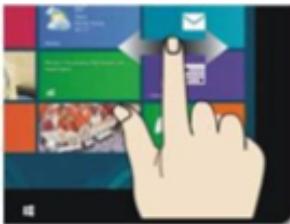

In began to slide your fingers move around the screen



Slide down at the start of the screen, slide up from underneath the screen and access to all applications (APPS) interface

3. The app interface is introduced in addition to have fixed at the start of application of the screen, you can also open in all the applications of flower surface other applications, such as tablet this computer accompanied by other software applications,



Want to start screen fixed more applications, see below, (1) light touch and hold the application magnet for about 1 second, and then let go run, select (2) is fixed to the start screen.



At the start of the screen, on the other hand, want to remove, or delete an application, (1) light touch and hold the application magnet for about 1 second, and then let go run, select (2) attribute column, remove fixed, delete, etc. The application can be completed.



4. Slide Charm menu bar from the right side of the screen to the left, to unlock Charm menu bar, including: start, equipment, Settings, share, search program.



Slide from the right side of the screen to the left, to unlock Charm menu bar, including: start, equipment, Settings, share, search program.



Allows you to search for files or applications in a tablet.



Allows you to share through social networks or email program.



Can return to the start screen; From the start screen you can also use this function to return recently open applications.



Allows you to connect to the tablet devices to read and write and share files, an external screen or printer.



Allows you to tablet PC Settings.

Search list



Share list



Equipment list



Setting list



5. Double interface application. My computer in the (figure 1)on the left side, from screen to screen left lateral slide inward moving drag live, look to the plane bounded out to open the can. In (figure 2) according to live between points cut line on the cutting press button left drag to move right, can be divided into cutting double screen show case.



Figure 1


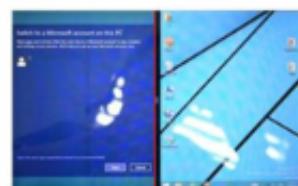


Figure 2

Fifth, basic operation

1.dormancy, restart and shutdown

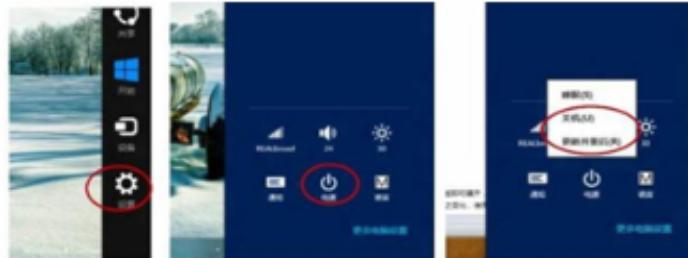

2.security settings

Set the user and password



Method of rapid setting: click on the "Charm" is set in the "set" button, select "more computer Settings";Choose "user" on the left of the Settings, and click the "your account" on the right side of "create the local account".After input complete Windows Live Id account password, enter the user name, password, confirm password and password hint.

Specification

OS	Windows Pro 8.1
CPU	Intel BayTrail-T platform Atom Z3740D Quad Core 1.33GHz
Storage	32GB EMMC
Ram	2GB DDR3
TF	512M-32G
Display	10.1*1280*800 IPS
Battery	Rechargeable 8000mAh
Mini USB	2.0 OTG
3D G-sensor	4 directions
Recorder	Built in MIC
Video	AVI(H.264,DIVX,XVID),3GP,MKV,WMV,MOV,VOB,MP4(H.264,MPEG,WMA,XVID),MPEG,MPG,WEBM,FLV,HD1080p max
Audio	MP3,WMA,OGG,AAC,M4A,FLAC,3GP,WAV
Photo	JPEG,BMP,GIF,PNG,TIF
Dual Camera	Front: 200W Rear: 200W
HDMI	Mini HDMI Port
Bluetooth	Yes

Kindhearted Remarks:

- ◆ Power on: Hold down the power button for 2seconds.
- ◆ Power off: Hold down the power button for 3seconds.
- ◆ Hibernate: Press the power button to hibernate and return.

keep the card for
guarantee
to keep in repair

Guarantee

User File							
User		Name		Gender		Age	
Address							
Telephone				Zip			
Purchasing Address							
Retail price		Odd Numbers					
Commodity name and specification		Model NO.					
Dealer Signature		User Signature					

Guarantee Item

1.7days upon date of purchase, if there is function problem, we should offer the same item subject to goods and packing maintain perfect.

2.one year upon date of purchase, we will guarantee to keep the goods in repair. (not including fittings)

3.Guarantee service is subject to normally using

4.All of damage by man-made (tear down the housing and the sticker, unnormally using), or losing the card, we will not guarantee.

FCC STATEMENT:

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC STATEMENT:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with RSS 210 of Industry Canada.

"Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device."

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil n'edoit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

"This Class B digital apparatus complies with Canadian ICES-003."

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet appareil et son antenne (s) ne doit pas être co-localisés ou fonctionnant en conjonction avec une autre antenne ou transmetteur.

SAR Exposure:

The device has been tested and meets the FCC RF exposure guidelines.

The maximum SAR value reported is 17.86w/kg (Body)