

Manual

How to use

Pairing

- Before using the headset for the first time, you must pair it with a Bluetooth-enabled handset.
- To pair your headset with an additional handset, the headset must be placed in pairing mode.
- There are 2 pairing Mode Methods with the R222 Easy pairing (First Time pairing)
 - 1,Move the power switch to the ON side to turn on the R222, when the headset enters pairing Mode. the LED indicator will show a solid blue light.
 - 2,Using your handset. Find the Bluetooth Menu and search for or add new devices.
 - Select R222 from the list of devices and pair it with your handset.
 - 3,If asked for the pass/PIN code please enter 0000(4Zeros).

Note: if your handset supports secure Simple Pairing (SSP), you will not need to enter pass/PIN Code

-once pairing has completed successfully, you will hear your headset paired.

4, some handsets might ask for permission to access the phones contact list if you receive a message from your handset, please select ok or Allow access.

How to Use

-The R222 will automatically turn off if not paired within 3 minutes.

Manual pairing (pairing with another phone or re-pairing)

- with the power off press the CALL button and move the power switch to the “ON” side at the same time for 1 second.
- when the headset enters pairing Mode the LED indicator will show a solid blue light, After the procedure repeat Easy pairing steps 2 through 4.Advanced Multipoint.

The R222 is capable of having two devices connected to the headset at the same time; this will give you the freedom of using call waiting between calls on both of your connected phones.

Connection

-pair the headset with one of your Bluetooth-enabled hand sets.(per the pairing instructions on page2)

-Turn off the headset.

-Turn off the headset.

-with the power off press the CALL button and move the power switch to ent “ON” side at the same time for 1 second to enter Manual pairing mode.

-Now, pair and connect the headset with your other Bluetooth-enabled handset,(this will be your primary handset)

How to use

-Once this handset is paired and connected, go back and connect the originally paired hand set to the headset, this will now be your secondary handset..

Auto Reconnect

-If the R222 is turned off (either accidentally or intentionality)while connected to a handset. the headset and hand sect when the R222 is turned back on while in range out of range.

-If the paired devices are separated by a range of 10 meters (33, feet) or more. The headset and handset will disconnect and R222 will vibrate to alert..

-If the headset and handset do net automatically, reconnect when they are back within the required

Range, briefly press the CALL button on the R222 to reconnect manually.

-It is possible to use these features only when your handset supports them. For further information about using these features, please consult your handsets user manual.

-while in multi-connection and streaming non-streaming paired device which is out of range will be disconnected and R222 will alert once and not try to reconnect.

Controls

Power on/power off

-Move the power switch to the “ON” or Off Side

How to Use

Volume control

-Briefly press the volume button.

Charging

-While charging, the LED indicator will show a solid red light.

Low battery

-An announcement will be made once every 2 minutes.

-if the battery is not charged, the headset will ring and vibrate

-Briefly press the volume down button to stop vibration

-Briefly press the CALL button.

Lost number redials

-If you make a call from the handset, the call will (subject to phone settings) automatically transfer to the headset. If the call is not automatically transferred, you can manually transfer the call by press and hold volume up button for 3 seconds

Voice dialing

-Briefly press the CALL button to activate “voice command”

Note: if the handset does not support voice dialing, it is possible that performing this action will activate last Number Redial.

How to use

Transferring a call

-while on a call on your handset, press and hold volume up button for 3 seconds to transfer the audio either from handset to handset or from handset to handset call waiting.

-Answer a second call without hanging up the first call by pressing the CALL button for 1 second to return to the original call.

-Briefly press the CALL button to terminate the active call or both calls at once.

Audio streaming

-PLAY: Briefly press the PLAY/PAUSE Button.


-PAUSE, Briefly pause the PLAY/PAUSE Button

-Stop: Press and hold the PLAY/PAUSE Button.

-NEXT SONG: Briefly press the FF Button.

-Previous song: Briefly press the REW button.

Description of parts

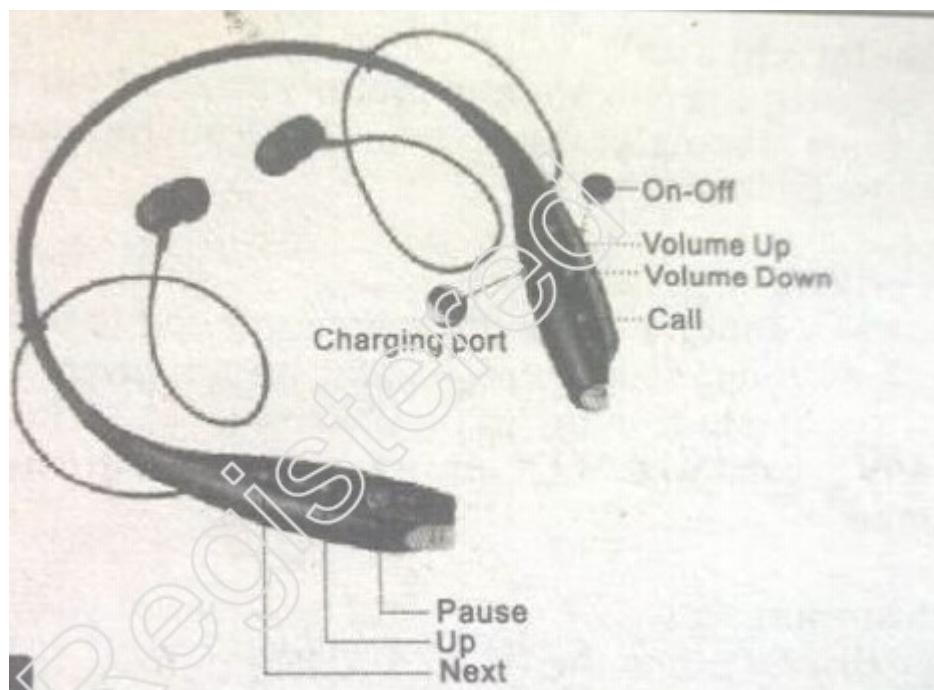

Specification

Item	Description
Bluetooth specification	4.0(Headset/Hands-Free/A2DP profiles)
Battery	Rapto/300/Hrs/up to 10Hrs
Standby time/Talk time	Battery 3.7V/180mAh
Music play time	UP to/300/Hrs/UP to 10Hrs
Charring time	UP to 8Hrs
Op creation temperature	<2.0Hrs
Dimension/weight	-10°C---60°C
	135. 6mm (W) X167. 3mm (L) X16. 9mm (T) /32g

Contact Information

Manufacturer: SHENZHENNINGTONDA TECHNOLOGY CO., LTD

2F, Building B6, Fengtang, Industrial park, Fuchengao, pinghu street Longgang
District, Shenzhen, 518111 china.

Telephone Number: 13602684722

Fax Number: 86 755 29736856

Email: ds13602684722@163.com

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.