



GRAVITY

For Age 3+


OPERATION MANUAL

STUNT TWISTER CAR

Channel: 4
Battery: 4xAA batteries (not included)

Thank you for choosing our product. In order to safety enjoy this product, please read this manual carefully before using. Please keep the manual for future reference.
This product is recommended for ages 3+ and should always be used with adult supervision.

Controller

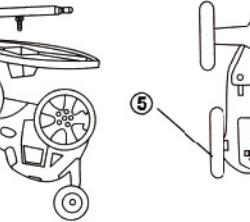

1. Antenna
2. Indicator
3. L/R Turn Key-press
4. F/B Run Key-press

5. Rear wheel
6. Front Wheel
7. Charging jack
8. Charging cord

NOTES:

Using a Phillips head screwdriver, remove the car from the plastic base. Remove the battery cover from the controller and place four "AA" batteries (not included) into the controller and replace the battery cover. Make sure to insert the batteries with the correct polarity. Place antenna into the hole at the top of the controller. Turn clockwise to secure antenna to the controller. DO NOT OVER-TIGHTEN. Pull tip of antenna to extend.

DO NOT

OVER

TIGHTEN

PULL

ANTENNA

TO

EXTEND

ANTENNA

TO

EXTEND