

# User Manual

Tablet PC

Hampoo

GIA10-00

Shenzhen Hampoo Science & Technology Co.,Ltd.

## Table of Contents

<b>Precautions</b> .....	<b>3</b>
<b>Basic Functions</b> .....	<b>4</b>
Hardware configuration.....	4
<b>G 10 Overview</b> .....	<b>4</b>
<b>Status Icons</b> .....	<b>5</b>
<b>First Use</b> .....	<b>6</b>
Battery management and charging .....	6
Connecting with PC.....	6
<b>Setting operation interfaces</b> .....	<b>7</b>
Basic operations.....	7
Main interface.....	8
Application interface .....	9
Displaying notification bar .....	10
Deleting desktop icons .....	11
Moving desktop icons.....	12
Video playing .....	12
Music playing .....	13
Camera.....	14
Settings .....	15
Software installation and management.....	19
Uninstalling APK application.....	20
HDMI output .....	21
Connecting with PC.....	21
Factory reset .....	21
Android FAQ.....	22
FAQ.....	24

## Precautions

This Manual includes important safety precautions and the instructions to various functions of the product. To avoid any accident, please read this product manual carefully before use.

1. This product refers to high-precision electronic product. Do not disassemble it personally.
2. Do not hit or drop this product heavily, otherwise, damage or abnormal display may occur.
3. Do not leave this product in the hot, wet and dusty environments, or expose this product under strong magnetic field or sunlight for a long time.
4. Please select a suitable volume to avoid hearing loss.
5. Use wrung wet cotton cloth to scrub this product softly. Do not use other chemical solutions to scrub this product.
6. Do not disconnect this product while uploading and downloading, or it may cause program errors.
7. Please use the batteries, chargers and accessories allowed by the manufacturer, or dangers may occur and the warranty regulations will not take effect.
8. Please treat the discarded products and accessories in accordance with the relevant local environmental protection regulations.
9. Do not use this product in environments where electronic equipment is prohibited to use, such as on the airplane.
10. Do not use this product while driving or walking on the street to avoid any accident.
11. In case of any problem during the use of this product, please contact the Customer Service Center of our Company directly.
12. Please backup important data of this product regularly.
13. All data may be erased out from the product during repairing, and be restored to the default factory setting.
14. Our Company will not undertake any responsibility for the data loss due to product damage, repair or other reasons. Please operate this product in accordance with this Manual.

※ Our Company reserves the right to improve this product. Specification and design of the product are subject to the change without prior notice. Sorry for the inconvenience.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

If not used in accordance with the instructions, may cause harmful interference.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.


**FCC RF warning** statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.

## I.Basic Functions

### 1. Hardware configuration

Processor	Intel clover trail+ Z2580 2.0GHz
Operating system	Android 4.2.2
Memory	LPDDR2 1GB/2GB (depending on detailed types)
Equipment memory	8GB/16GB (depending on detailed types), supporting extended functions
Screen type	10.1 inch multi-touch IPS display
Resolution	1,920×1,200
Camera	Front: 200W, Rear: 500W
GPS	Supporting
Multi-media	Supporting 1,080P video playing
Audio format	Supporting MP3, WMA, WAV, AAC, APE, FLAC, AMR, M4A and WV formats
Video format	Supporting RM/RMVB, AVI, WMV, MKV, DAT, 3GP, TS and MP4 formats
Port	MicroSD card slot, Micro USB port, 3.5mm audio interface, Micro HDMI
Battery capacity	7,300mAh, theoretic standby time: 300 hours
Dimension/weight	216.5X170X9.2mm, 590g
Bluetooth	BT3.0
Power supply	5V/2A

## II.G 10 Overview

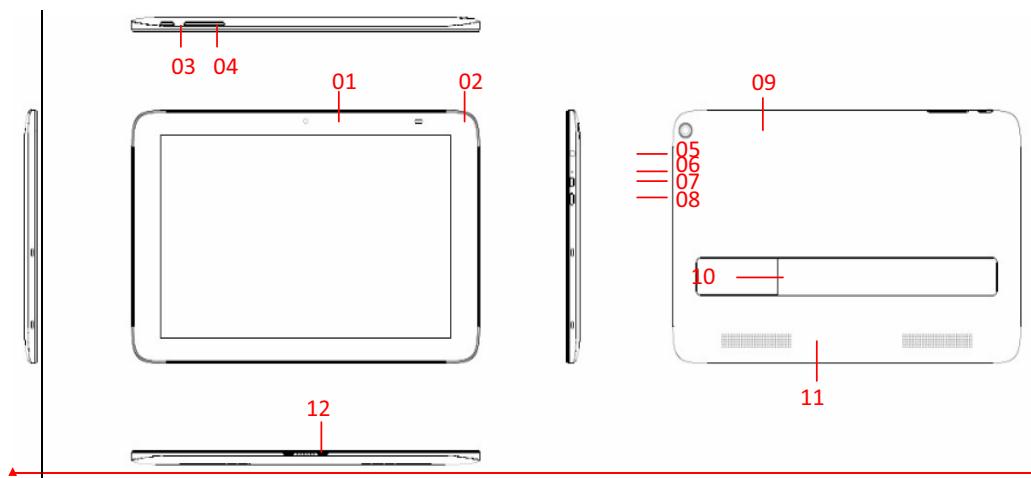

- 01. Front camera
- 02. Light/distance sensor (some models)
- 03. Power key
- 04. Volume keys +/-
- 05. Earphone interface
- 06. MIC
- 07. HDMI interface
- 08. USB interface (data transmission and charging)
- 09. Rear camera
- 10. Micro SD card slot (some models)
- 11. Speaker port
- 12. DOCK\_PIN (some models)

## III. Status Icons

The status bar displays the time, battery status, signal intensity and notification icon.

	Battery low		Music playing
	Battery critical low		USB connected
	Charging		Alarm clock On
	New Email		Earphone inserted

## IV. First Use

### Battery management and charging

Please charge the battery fully when using the equipment for the first time:

- ♦ Insert the charger/adapter into the charging interface (USB interface) to access the charging

status;

- Charging the equipment for about 10 hoursat the first and the second time, and about 5 hours later.

[Note]: This tablet adopts a built-in polymer battery. So a special charger is required for charging this tablet.

- During charging, the battery icon on the screen will roll;
- After charging completed, the battery icon on the screen will become green and stop rolling;
- To extend the service life, it is suggested to chargethe tabletonly after running out of power at the first and the second use.

[Note]:

1. If you keep the tablet idle for a long time, please ensure tofully charge it once every 3 months before storing it.
2. When the tablet is on the battery critical low state, you won't see the charging status before it is charged for over 20 minutes;
3. The built-in polymer battery must be charged regularly, or it may be damaged due to over-consumption, whichwill be excludedfrom the quality warranty scope.

### **Connecting with PC**

Use the accompanied USB wire to connect the PC and this tablet, and install corresponding drivers, and then conduct USB data transmission or charging.

- In the U-disk mode, you can copy and delete documents on the PC.

[Note]: The system will shut down automatically when the battery power is low.

## **V. Setting Operation Interfaces**

### **1. Basic operations**

#### **Startup**

Press and hold the “Power key” for 3 seconds.

#### **Shutdown**

Press and hold the “Power key” till the dialog box pops up, and then select the “Shutdown”.

In the sleeping mode, first wake the tablet and then press and hold the “Power key” to shut down.

#### **Power supply reset**

In case of no response during using, press and hold the power key for 10 seconds to conduct compulsory shutdown.

#### **Screen protection**

Access the “Set” – “Display” – “Sleep” to set the screen standby time. When the screen is standby, wake the screen by pressing the power key, and then slide the unlock icon to recover the previous display status.

#### **Returning status**

In any interface, click the  key at the bottom of the screen to return to the desktop.


#### **Returning to the last interface**

In any interface, click the icon  at the bottom left corner to return to the last interface.

## **2. Main interface**

#### **Description**

Access the main interface after startup, and then slide to unlock the screen, which is locked by default.

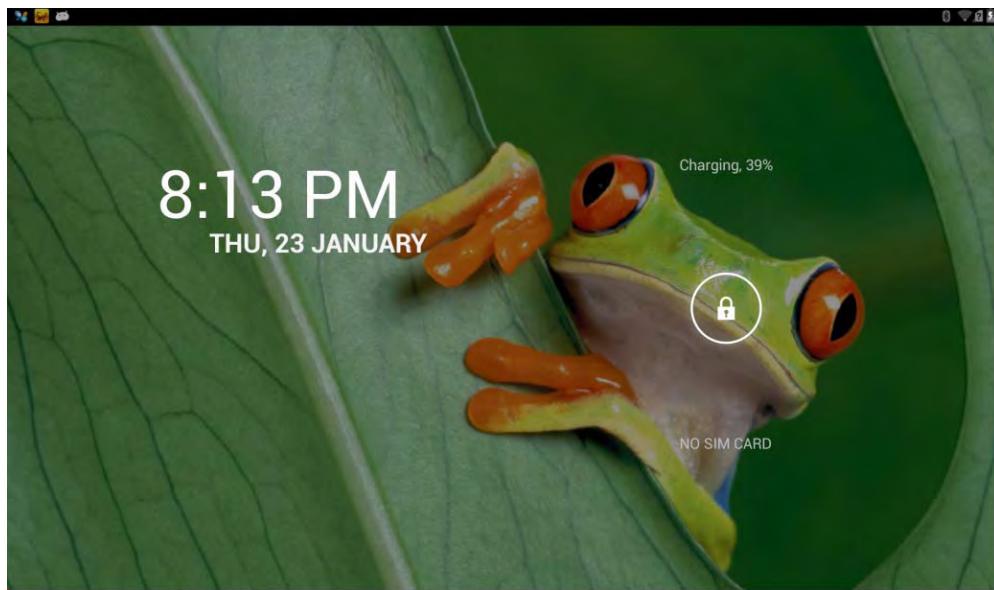


#### **Switching the desktop display**

In the main interface, slide the touch screen towards left/right to switch the desktop display.



### Changing the desktop wallpaper


Press and hold the blank space in the main interface to pop up the setting menu of desktop wallpaper..

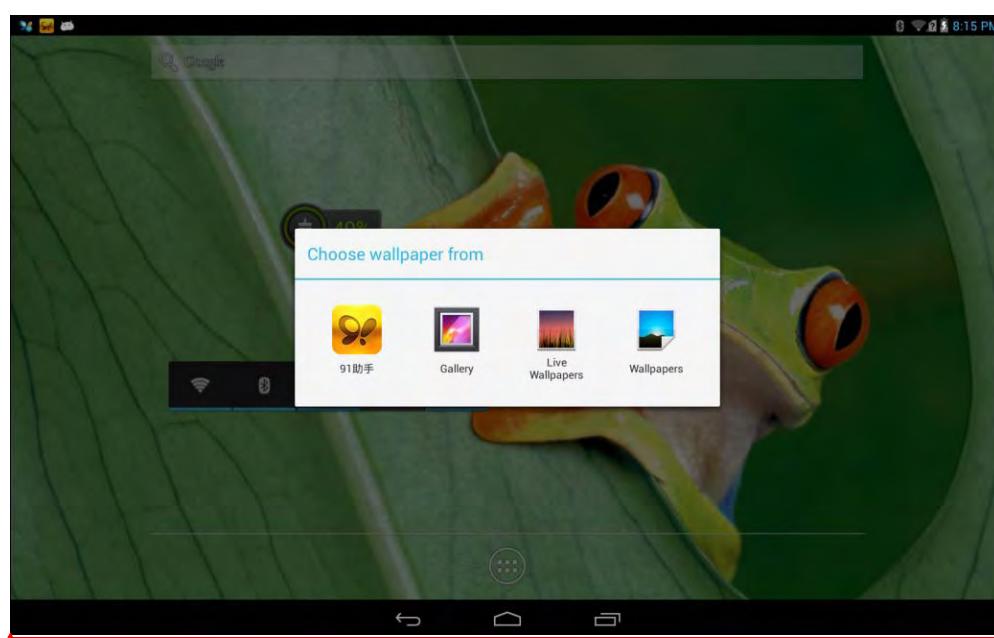

### 3. Application interface


#### Displaying all applications

In the main interface, click the icon  in the middle of the bottom of the screen to display all installed applications. Press and hold an application icon to add its shortcut to the desktop.

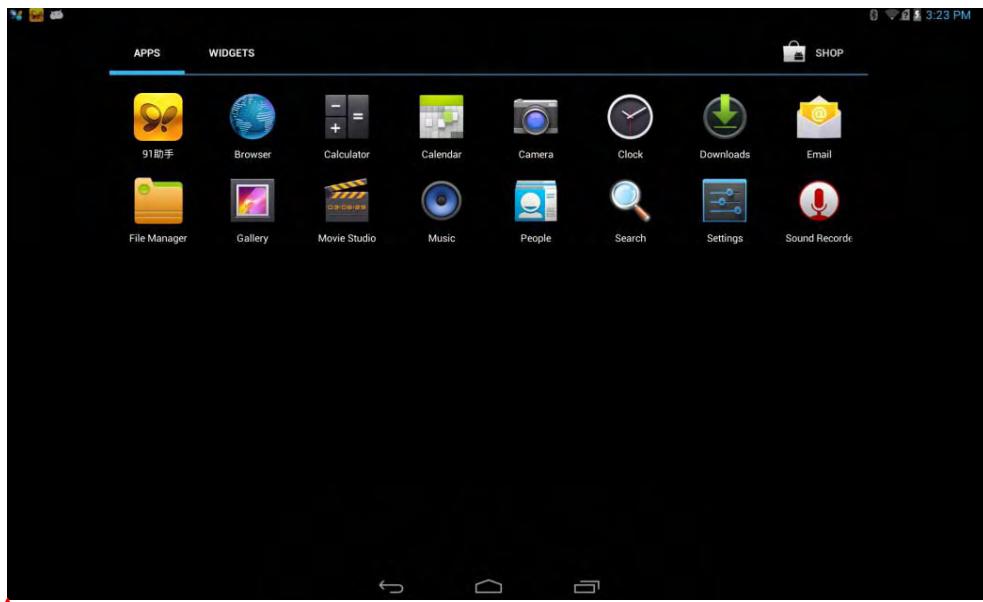

### Adding widgets


In the main interface, click the icon  in the middle of the bottom of the screen, and then click the “Widgets” at the top of the screen, press and hold all selected widgets to add them to the desktop.

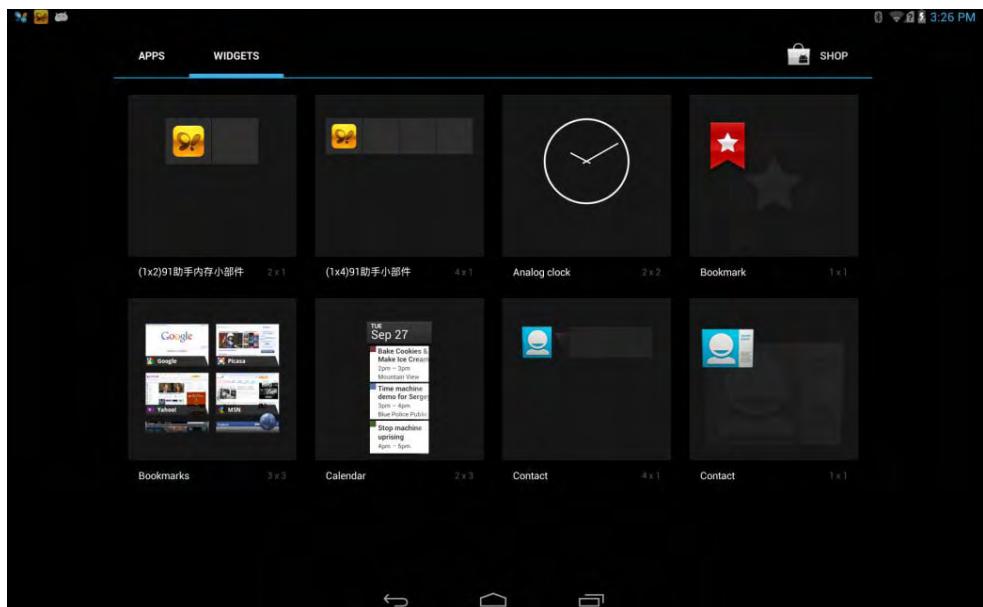

### Displaying the applications running in background


Click the icon  in the bottom right corner of the screen to pop up a list of applications running

in the background; click an application icon to switch to the interface of the application opened in background. Slide the application icon upwards/downwards to close the application running in the background.

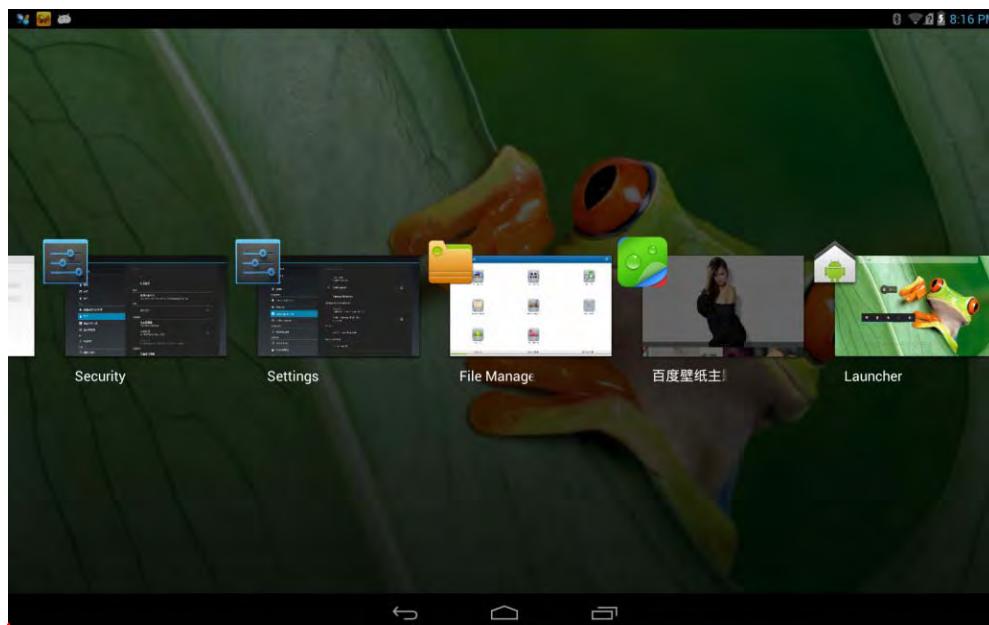


#### 4. Displaying notification bar

In the main interface, pull down the display region in the top right corner of the screen to open the notification panel, on which the current networking status, battery power, Bluetooth and other information will be shown.

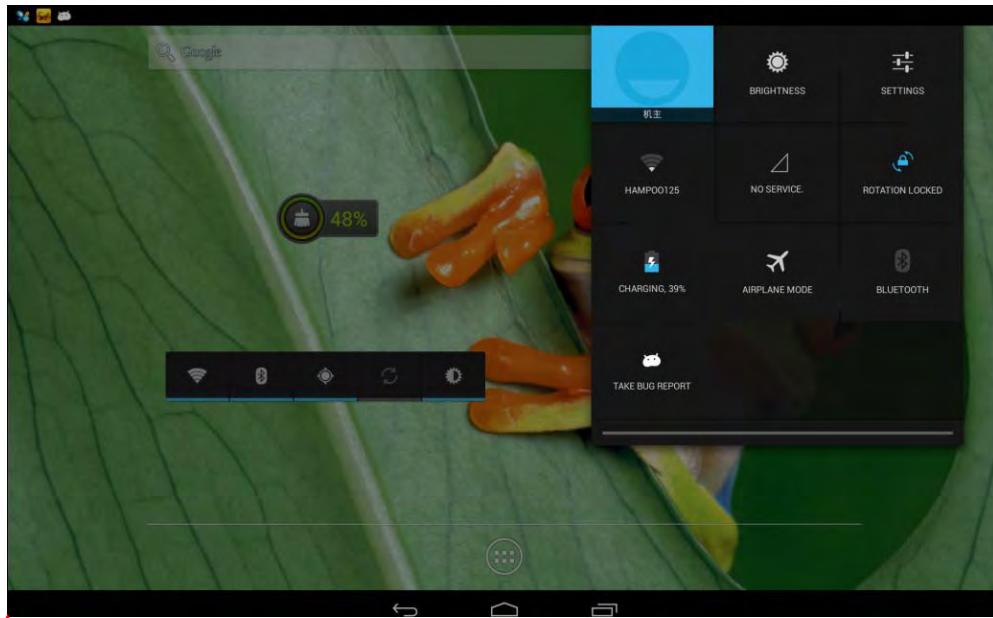

## 5. Deleting desktop icons


In the main interface, press and hold the application icons to be deleted; after the icons are scaled up, move the selected icons to the X Remove region of the screen, and then loose to delete the application icons.

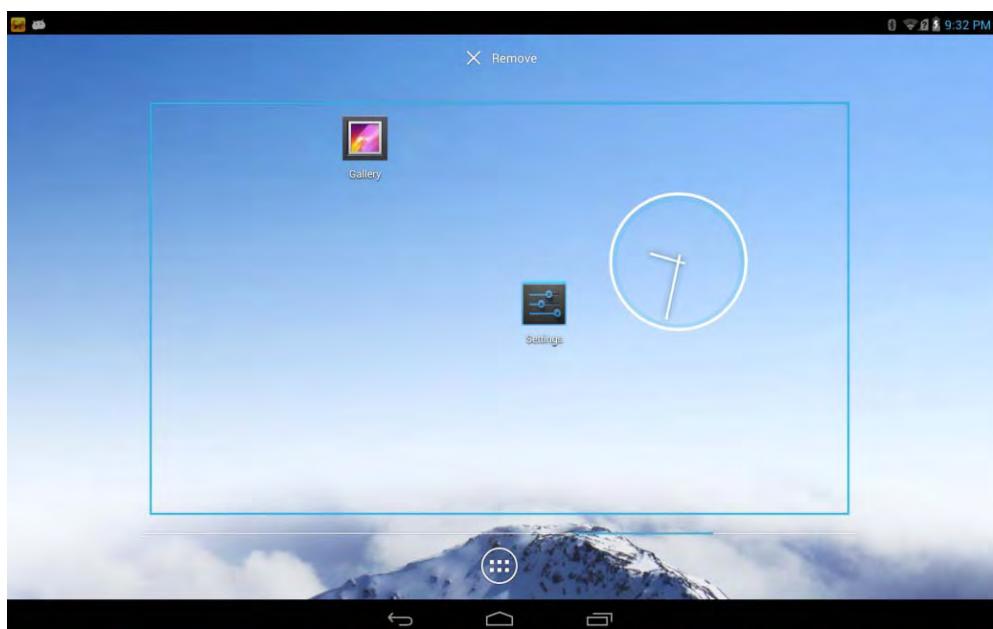

## 6. Moving desktop icons


Press and hold the application icons in the main interface; after the icons are scaled up, move the selected

icons.

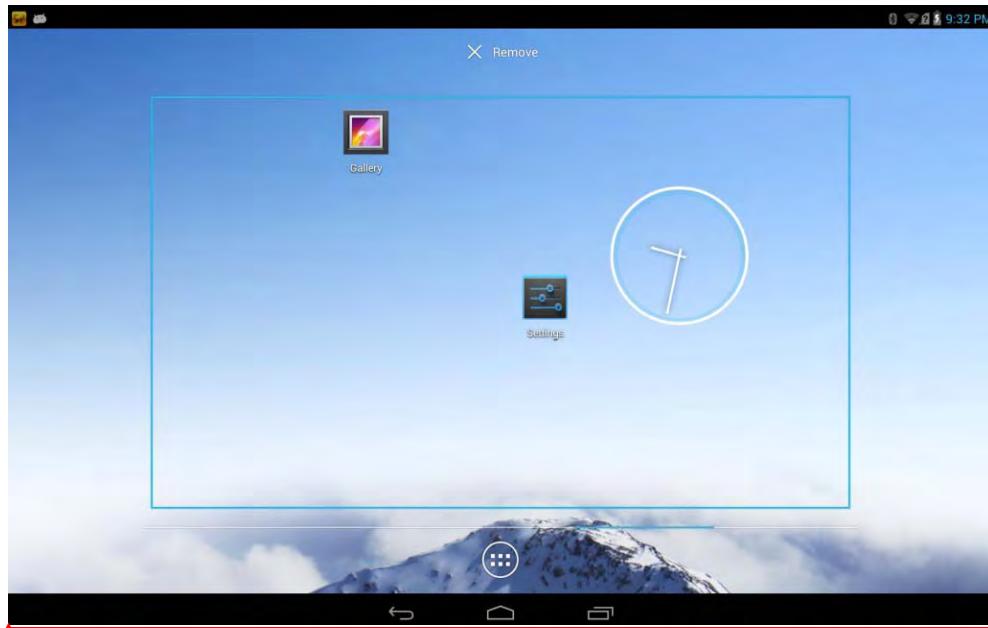


## 7. Video playing

Open the video player in the list of applications and enter the interface of the file list, click any file to play.

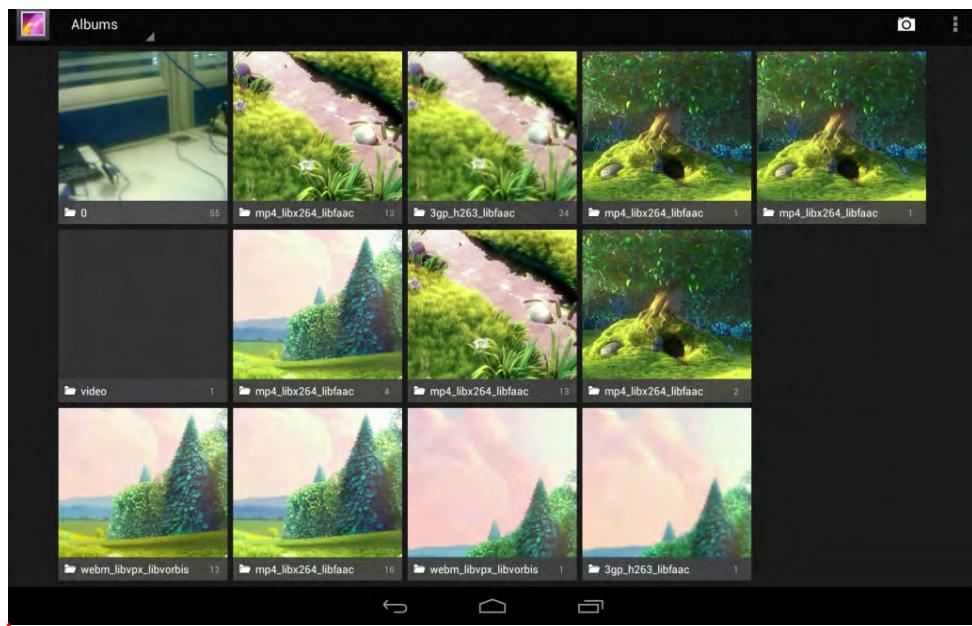

## 8. Music playing

Click "Music" in the list of applications to access the music player, and then click any song to play.

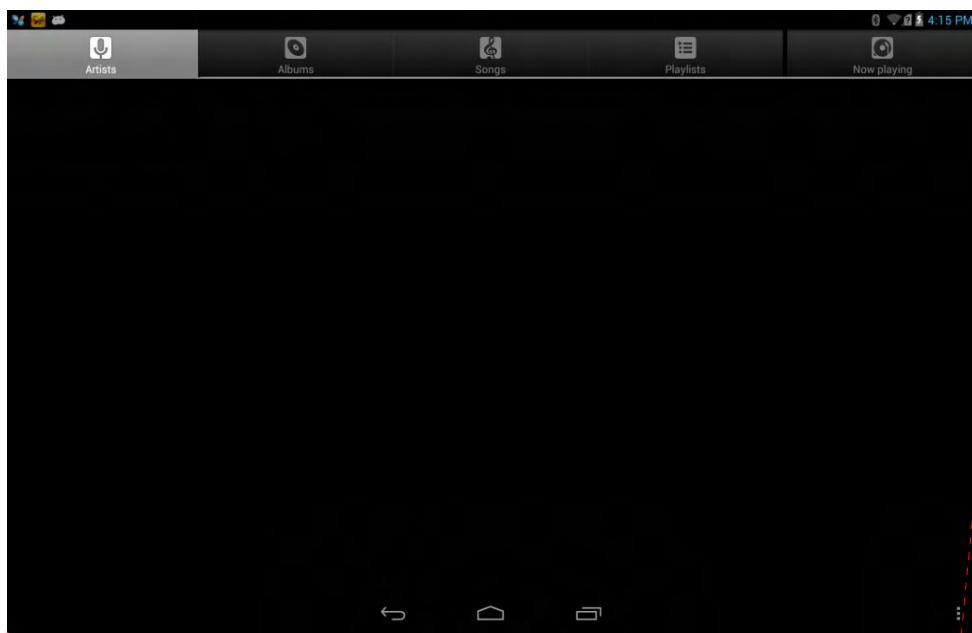

Click this icon to display music files which are classified according to singers.



Click this icon to display music files which are classified according to album names.



Click this icon to display all music files.




Click this icon to display music files in the playlist.



Click this icon to display the music playing interface.

### Music playing interface

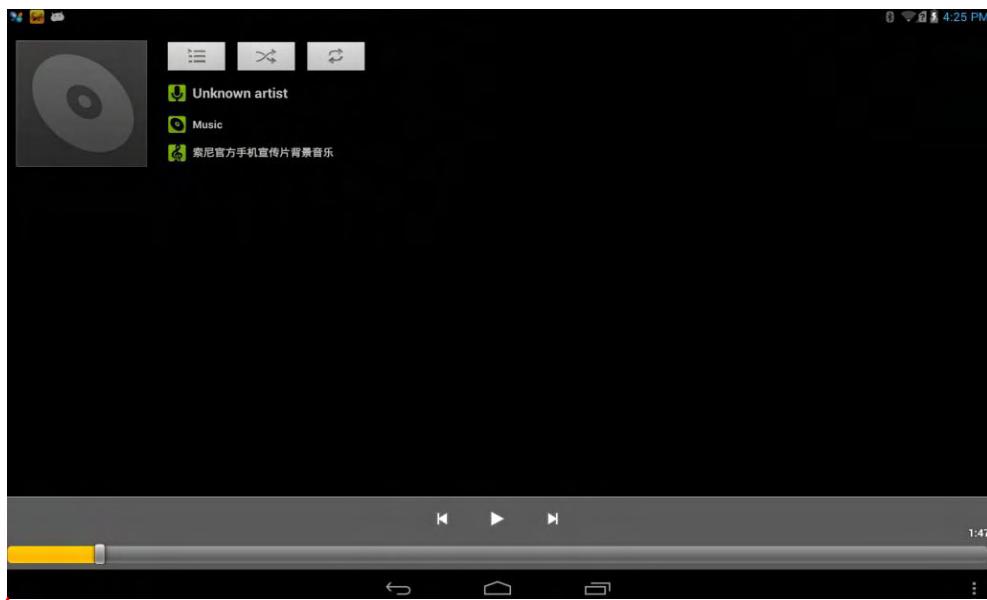

◀ Click this button to switch to the last song.

▶ Click this button to switch to the next song.

▶ Click this button to play the song.

⏸ Click this button to suspend the song.


☰ Click this button to access the playlist page.

🔀 Click this button to switch the random playing mode.

🔁 Click this button to switch the cyclic playing mode.

## 9. Camera

Click the camera button in the list of applications to take pictures.

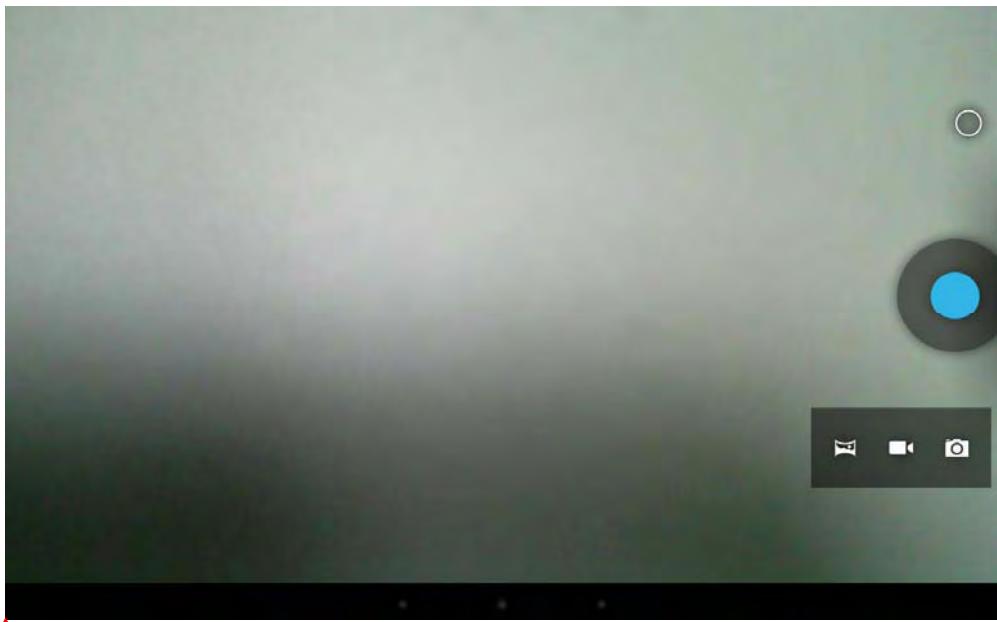

Click this button to take pictures.



Click this button to switch to the photo mode.



Click this button to switch to the video mode.



Click this button to adjust the framing mode.



Click this button to adjust the brightness, white balance, focal length and make switch between the front camera and the rear camera.


## 10. Settings

Click the setting icon  in the menu to access the interface of settings.



## Network setting

Conduct the Wi-Fi settings to manage the wireless network connection.

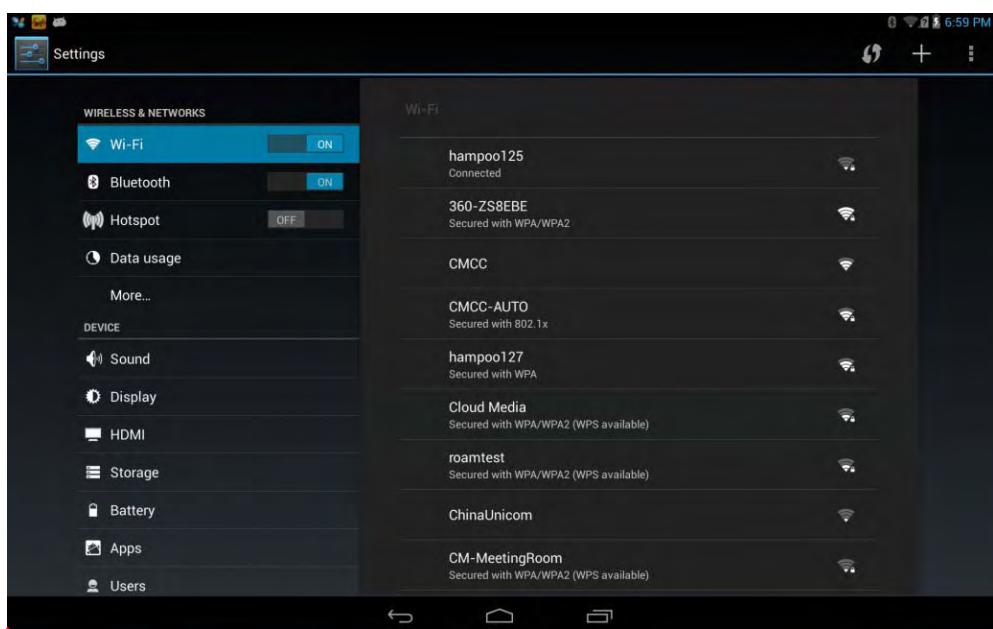

### Wi-Fi: on/off

When the prompt of “Start Wi-Fi” appears, the right icon displays as “”, which means that the Wi-Fi is on.


Click the button to the left, then the right icon displays as “”, which means that the Wi-Fi is

off.

[Note]: In the settings of this tablet, when the right icon displays as “”, the option is on the “off” status, unless otherwise specified. When the right icon displays as “”, the option is on the “on” status. When Wi-Fi is on, the system will automatically search and add the nearby available Wi-Fi networks; click the AP in the Wi-Fi list and enter the password to connect the network. If the connection succeeds, the Wi-Fi setting icon displays as “Connected”.

For Wi-Fi routers with connected history, this tablet will record them automatically. Just set the “Wi-Fi settings” to “Wi-Fi On” in case of reconnecting, or click this Wi-Fi router directly for connection. In addition, when the Wi-Fi status in the Wi-Fi settings is on, the tablet will automatically search Wi-Fi routers with connected history for connection under the wake-up status.

## Sound

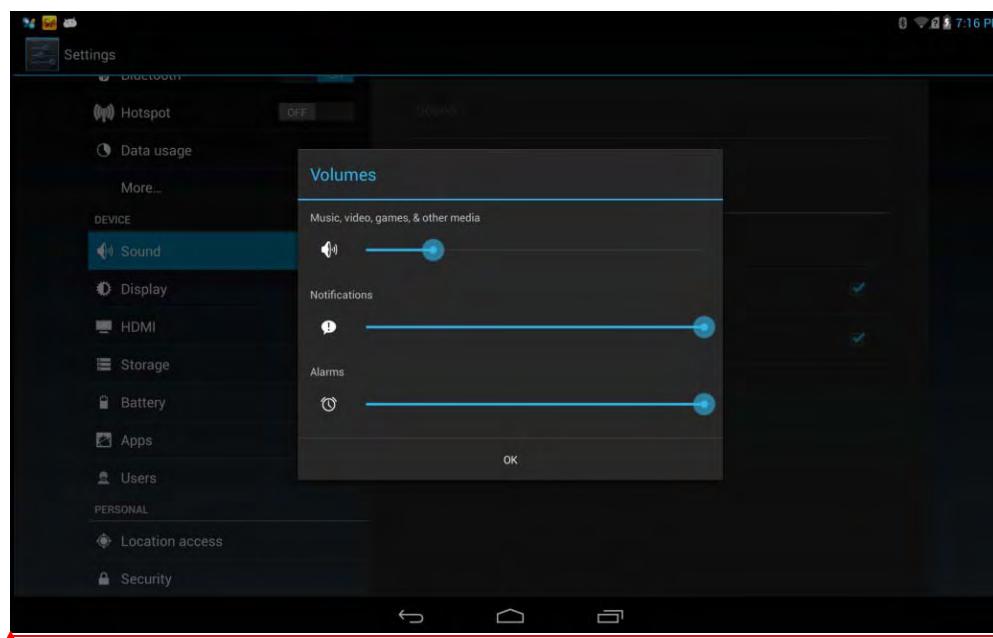


Volume: Set the volume of notification, media and alarm clock

Bell and notification: Set the default bell of notification

Touch prompt sound: Check it to make a prompt sound when touching the screen.

Unlocking prompt sound: Check it to make a prompt sound when locking the screen.

## Display

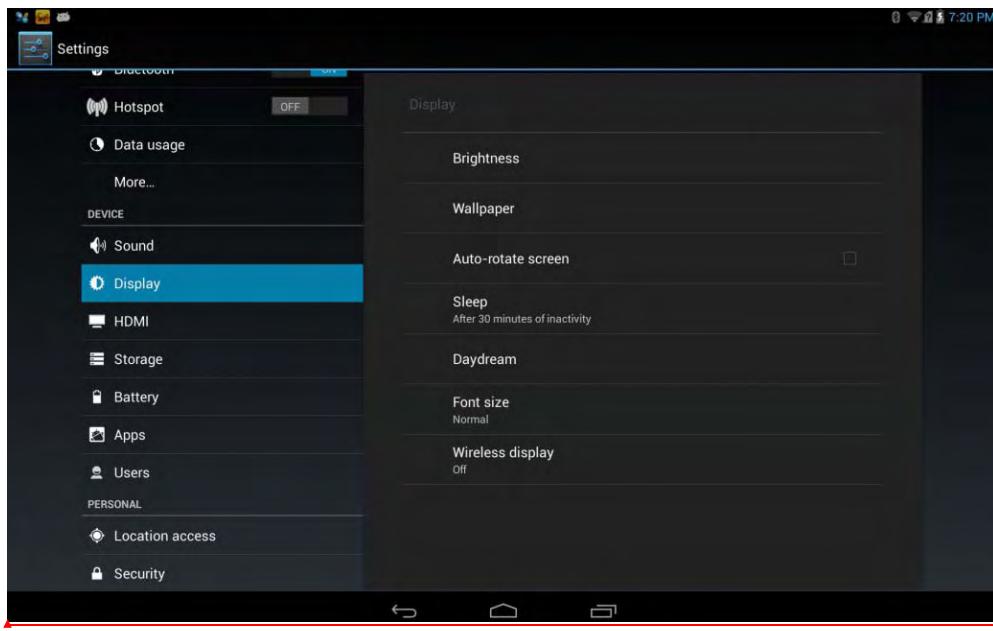

**Brightness:** Adjusting the screen display brightness

**Wallpaper:** Setting the desktop wallpaper

**Auto-rotate screen:** Checking this to open or close the screen gravity sensing function.

**Sleep:** After setting the sleep time, the tablet will protect the screen automatically under the standby mode when the time arrives.

**Font size:** Setting the font size of the system display

## **Application**

Display and manage all installed applications.



## Security

Screen lock: Select a screen lock method among multiple screen lock methods.

Unknown sources: It is allowed to install third-party applications.

## Voice and input method

Setting the language region, input method and other functions

## Backup and reset

Backup data and restore the settings of this tablet

## Date and time

Setting the date, time, time zone and time display format of this tablet


## About equipment

Viewing the software version information of the tablet

## 11. Software installation and management

This tablet supports Android platform based applications of a third party. Most of such applications can be downloaded from the network, and then uploaded to the tablet or the Micro SD card.

Click the installed “Resource manager” or “File manager” icon (here taking the resource manager for example), and select the APK applications to be installed.

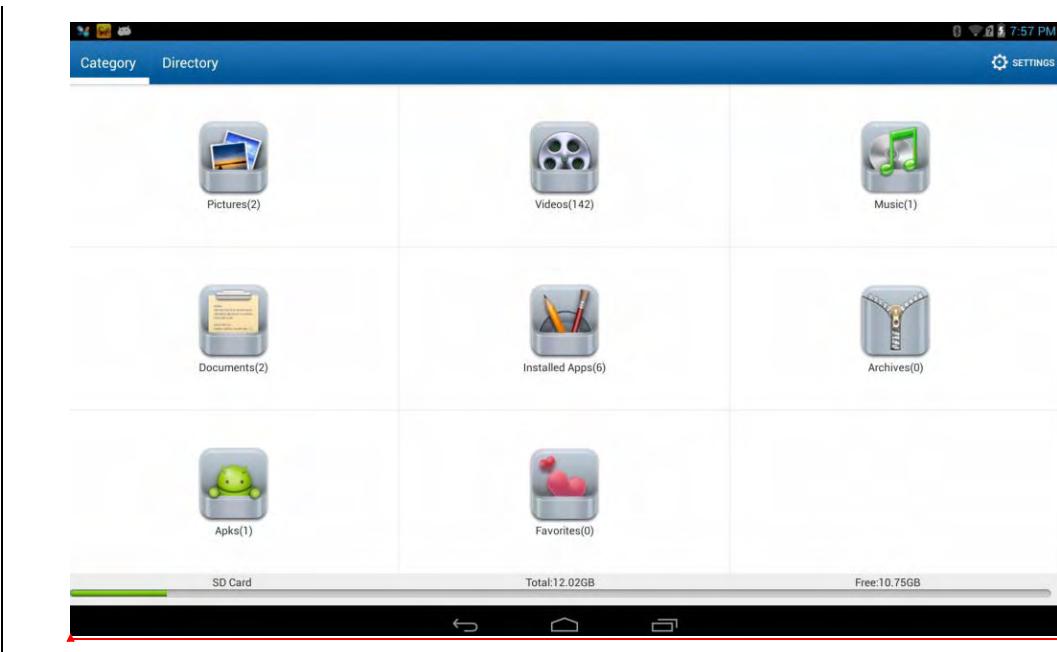


## 12. Uninstalling APK applications

Click the “Settings” on the desktop to enter “Settings”, and select “Apps”, and then click the desired application to uninstall.



Click the “Uninstall” icon to uninstall it.

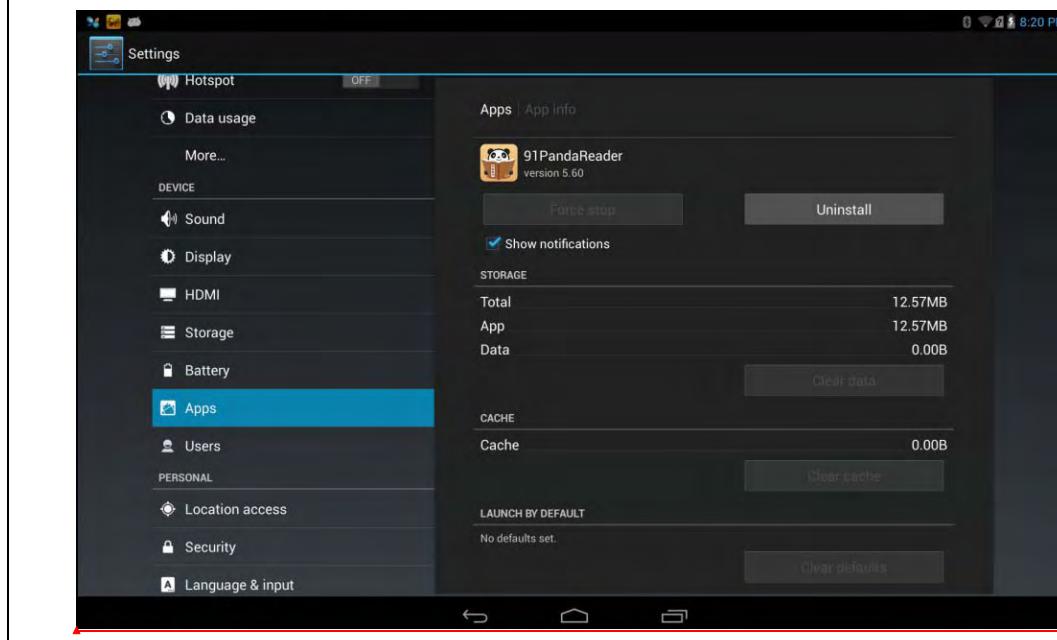

### 13. HDMI output

- ♦ Turn on a TV, and set the signal input source to be the HDMI input status.
- ♦ Turn on the tablet, and connect it to the TV with a HDMI cable. This moment, the tablet and the TV will display synchronously.
- ♦ In the HDMI output status, unplug the HDMI cable to exit from the TV output status.

#### 14. Connecting with PC

This tablet can be connected with a PC through a USB cable to copy or delete data:



- ♦ Connect this tablet with a PC through a USB cable, and the notification bar will display “USB connected”.

#### 15. Factory reset

If this tablet runs abnormal when attacked by viruses or operates third-party software, the factory default status can be restored through the factory reset to remove the third-party software.

Access “Settings” – “Backup and reset”, select “Factory data reset”, and confirm it to erase all data.

★ Note: All data will be erased in this case. Please make backup in advance.

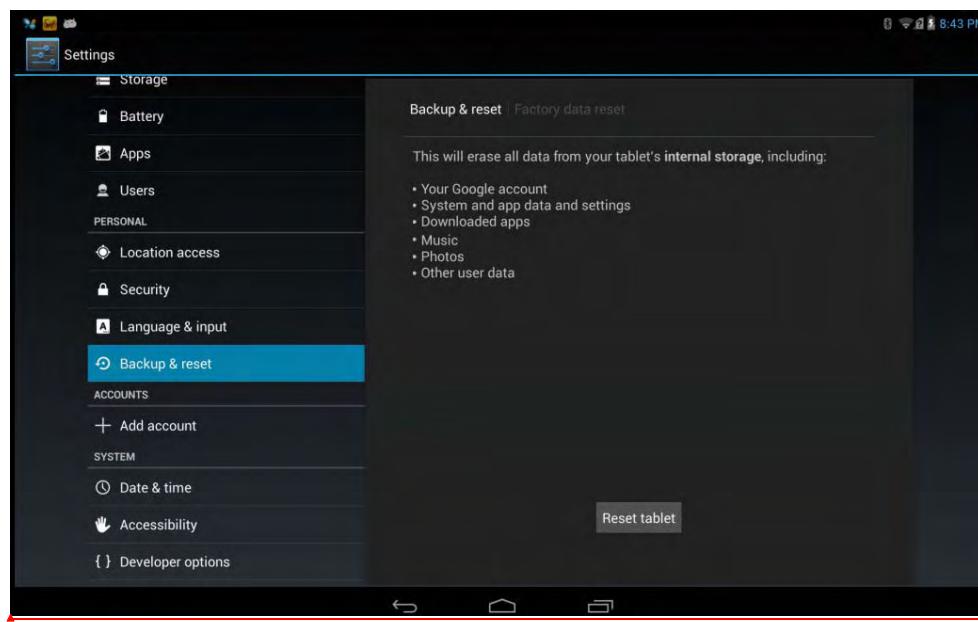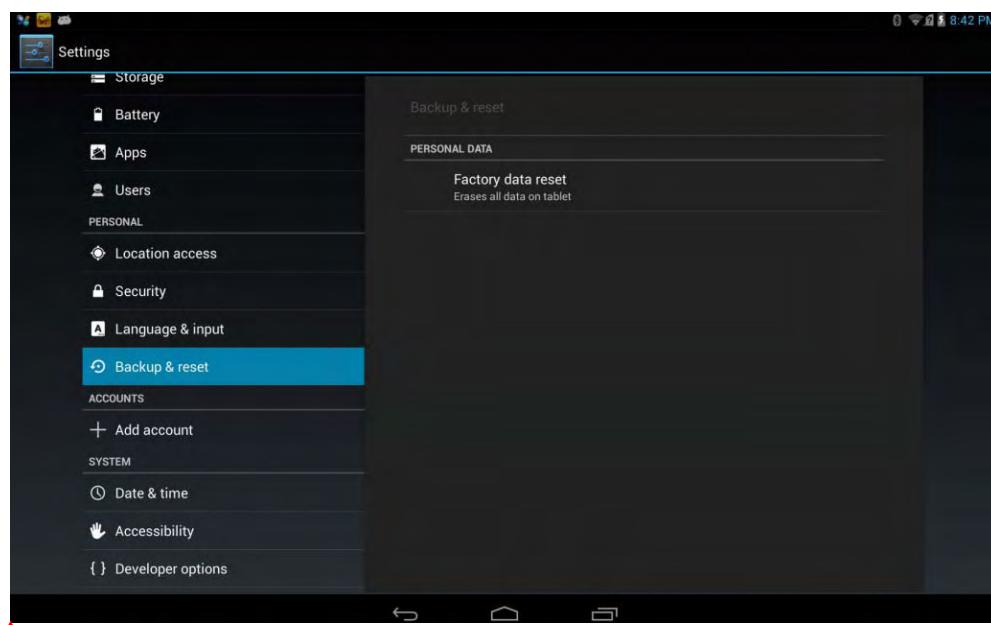

## 16. Android FAQ

Q: What is the APK file? What is the relationship between it and Android?

A: APK is the abbreviation of Android Package, i.e. Android installation package. It can be installed through directly transmitting the APK file to the Android emulator or Android equipment.

Q: How to acquire the APK applications?

A: You could go to “Google Play Store” to get them or download corresponding applications in the APK format.

Q: Why does the Wi-Fi connection fail?

A: If the “screen timeout” is set, when the tablet is in the screen protection status, the Wi-Fi function will be closed automatically to save energy; after the tablet is waken up, the Wi-Fi function will restore automatically after screen unlock.

Q: Why the gravity sensing function cannot be realized?

A: This product supports the gravity sensing function, and the horizontal and vertical screen display can be switched through shaking. However, some applications do not support this function, so the screen switching function cannot be realized, which doesn't belong to the product function troubles.

## 17. FAQ

1. The tablet cannot be started up.

Check the battery state;

Recheck after connecting the charger;

If this trouble still exists after charging, please call the Hamooo service center.

2. The earphone has no sound;

Please check whether the media volume is the minimum;

Please check the earphone connection condition.

3. The tablet can't be charged normally.

Please confirm whether the adopted charger conforms to the charging requirements of the tablet.

4. Files cannot be copied.

Please confirm whether the connection between the computer and the tablet is correct;

Please use the post USB interface of the computer as much as possible.

5. Why some downloaded videos cannot be played normally?

This product is compatible with most video files on the internet. However, the difference of parameters such as video formats, coding methods, resolution, and data rates provided on the internet may cause the playing failure or abnormal playing of some video files. It is suggested to use the third-party video conversion software for converting file formats on your PC, and copy them to the tablet for playing.

6. Applications have no response in the tablet.

In this case, press and hold the power key to conduct compulsory shutdown and then restart up the tablet.