

D318T USER MANUAL (Touch Screen Type with Remote Control)

1 . TO UNLOCK THE LOCK

- 1) Using Keypad: Enter a valid User code (default code is 1234) and press **6** and hear 1 beep and lights green.
- 2) Press **6** button on the remote and hear 1 beep and lights green.

2 . TO LOCK THE LOCK

- 1) Using Keypad: Press **8** and then hear 2 beeps and lights red.
- 2) Press **8** button on the remote and hear 2beeps and lights red.

3. TO ADD A NEW USER CODE

The User code (UC) must be a 4-8 digit combination. Each User code(UC) is then linked to a User ID (ID),which is any number between 01-50.

PC-**6**-1-**6**-ID-**6**-UC-**6**-Re-enter UC-**6**

Hear 1 beep and Light indicator illuminates green.

4 . DELETE ONE EXISTING OR PRESET USER CODE

PC-**6**-2-**6**-Existing ID-**6**-Re-eter ID-**6**

Hear 1 beep and Light indicator illuminates green.

5 . DELETE ALL USER CODES

PC-**6**-3-**6**-Re-enter PC-**6**

Hear 1 beep and Light indicator illuminates green.

6 . CHANGE CURRENT OR PRESET PROGRAMMING CODE

PC-**6**-4-**6**-NEW PC-**6**-Re-enter new PC-**6**

Hear 2 beep and Light indicator illuminates green

7 . SET OR CANCEL AUTO LOCK

Set Auto Lock: PC-**6**-5-**6**-Time Value (20-900 seconds)-**6**

Cancel Auto Lock: PC-**6**-5-**6**-00-**6**

Hear 1 beep and Light indicator illuminates green.

8 . TURN ON AND OFF SOUND

PC-**6**-6-**6**-1 OR 2 -**6** (1=Sound off, 2=Sound on)

Sound off- Light indicator illuminates green

Sound on –Hear 1 beep and Light indicator illuminates green

9 . CREATE A TEMPORARY CODE

Temporary aces for house sitter, contactor, cleaning company etc. Use one of the 50 available UC and give it out for temporary access and delete it when it is no longer required. See steps 3 and 4

10. TO ADD ONE REMOTE CONTROL (you can add up to 20 remotes, ID from 01~20)

PC - **6** - 7 - **6** - ID (01 - 20) - **6** - PRESS ANY BUTTON ON THE REMOTE.

Hear 1 beep and Light indicator illuminates green.

11 . DELETE ONE EXISTING REMOTE CONTROL

PC - **6** - 8 - **6** - Existing ID (01 - 20) - **6** - re-enter ID - **6**.

Hear 1 beep and Light indicator illuminates green.

D318T USER MANUAL (Touch Screen Type with Remote Control)

12 . DELETE ALL REMOTE CONTROL

PC - **9** - **9** - re-enter PC - **9**

Hear 1 beep and Light indicator illuminates green.

13 . RESTORE TO FACTORY SETTINGS

Remove one battery for 10 seconds, reinsert the battery and wait for a long and short beeps. Press **9 button 3 times within 3 Seconds.**

Restore PC to 123456, default password to 1234, all user codes will be deleted, all remotes will be deleted. All back to default settings including Auto-lock function is off, Sound is on etc.

15 . Audio and Visual Message Guide

ALL SAME AS KEYPAD TYPE EXCEPT:

Incorrect Code Entry Attempts: Warning sounds and LED flashes red after 4 incorrect code attempts, Touchscreen shuts down for 60 seconds.

16 . NEW ATTENTION PART(CAN BE NOTED BY AFTER SALE SERVICE ONLY)

When battery is under low voltage, the lock will warning and during this time the lock can still work.

However once the voltage is lower than 4.3V (Called Super-low Voltage), the operation of Lock/Unlock

the door cannot be done, user must replace the new batteries immediately.

17 . FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.