



PORTRABLE PA BATTERY-POWERED SPEAKER

User Manual



LYXSPA8BAT

Introduction

Thank you for purchasing the LyxPro Portable PA Battery-Powered Speaker. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only. It is not intended for commercial use.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

Important Safety Instructions

1. Installation and/or repair of the speaker cabinet must be carried out by qualified personnel following approved safety standards.
2. Do not attempt to clean plastic enclosure with solvents or petrochemical-based cleaners.
3. Do not place lighting equipment, smoke machines, or other heat-source objects on speaker cabinet.
4. Do not place speaker cabinet in water or expose to rain, excessive moisture, or humidity. This could create an electrical shock hazard, cause a hazardous short circuit, or cause an electrical fire.
5. Do not stack speaker cabinet in a manner that could cause injury should a cabinet become dislodged.
6. Before installation, ensure that voltage and frequency of power outlet match power requirements of loudspeaker.
7. Make connections to loudspeaker first before connecting to main power.
8. Ensure that power cord is never crimped or damaged by sharp edges. Never let power cord come into contact with other cables. Only handle power cord by the plug.
9. In case a fuse replacement is needed, be sure to use one of identical rate and dimensions.



Do not dispose of electrical appliances as unsorted municipal waste. Make sure to use your area's designated collection facilities. Contact your local authorities or waste disposal services for information regarding proper disposal of electrical appliances. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging the community's health and well-being.

Features

- 70 Crystal-Clear Watts On Demand
- Built-In 10-Hour Rechargeable Battery
- Built-In Bluetooth®
- SD™ Card and USB Inputs
- Built-In 2-Band Equalizer
- One (1) Microphone Input
- One (1) Guitar Input
- 3.5 mm Stereo Auxiliary Input
- RCA L/R (Red & White) Inputs
- Mix Output to Daisy Chain Other Speakers
- 8" Low Frequency Woofer
- Basic EQ Knobs for MP3 Section
- Internal Switch-Mode Power Supply
- Tripod Mounting Hole w/Tightening Screw
- TWS Linking for Stereo Pair Use

Box Contents

- 1x Portable PA Battery-Powered Speaker
- 1x Power Cord
- 1x User Guide
- 1x IR Remote

Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.


-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Parts & Controls

1. USB Playback
 - a. TWS
 - b. MODE switches between USB/SD/BLUETOOTH/ Remote Control
 - c. BLUETOOTH
 - d. Play/Pause
 - e. Repeat
 - f. Last
 - g. Next
2. Volume: Control master sound level
3. Volume: Bass level control
4. Volume: Echo level control
5. Volume: Treble level control
6. Left/Right aux input
7. Left/Right aux output
8. Aux input
9. Mic input
10. Volume: Mic/Guitar level control
11. Guitar input
12. Light indicator for battery level
13. DC 12 V input
14. Power switch: Switch the unit on/off
15. Main supply input: Connect an IEC main power cable in order to power the unit through electrical outlet connection.

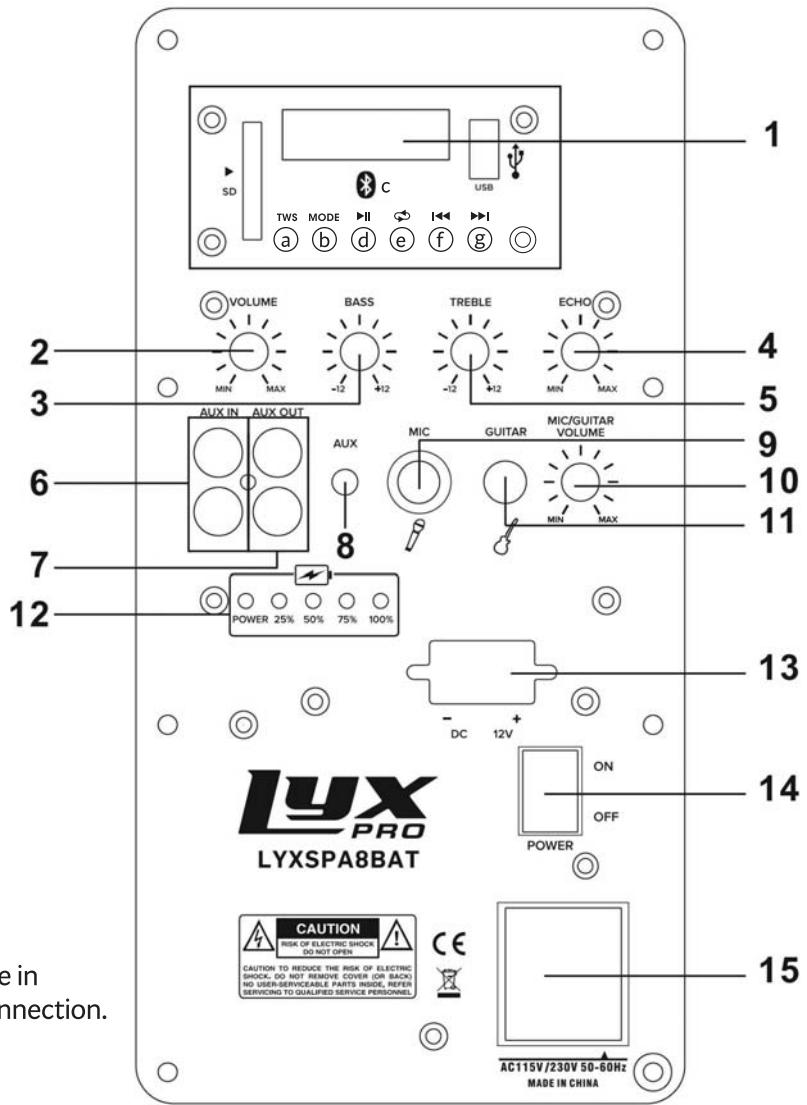

Charging the Battery

- Connect the power cable to the connection in the rear of the unit, then plug the cable into a working outlet.
- Make sure the Power switch (#14) is in the OFF position.
- When the device is not in use, powered off, and the power cable is properly connected to the device and a working outlet, the internal battery will recharge. The LED charging indicator will be lit.
- When the unit is fully charged (usually takes about 4.5 hours), the LED charging indicator will turn off.

Powering the Speaker On

- Turn the Volume (#2), Echo (#4), and Mic/Guitar Volume (#10) controls down.
- Turn the Power switch (#14) to the ON position.
- The Power LED indicator should light up.
- Switch the VCV (voice-controlled volume) off.

Connecting to Bluetooth

- Switch Power On/Off Switch (#14) to On position.
- Press and hold the Mode Button (#1a). Display will read "BLUE" or "BT".
- Turn on Bluetooth on the mobile device you wish to connect.
- When "LYXPRO" appears on your mobile device, select it.
- Short beep will sound. Devices are now connected.

Using the TWS

This feature allows the user to link two speakers together via Bluetooth. Here's how to get started:

1. Turn on the two speakers.
2. Press the Mode Button on both speakers to enter BT mode. Display will read "BL:UE".
3. Press the Bluetooth (BT) Button on one of the speakers. The speaker will automatically search and connect to the other speaker. Display will then read "BT:BT".
4. Connect your phone to the speaker via Bluetooth.

NOTE: Second method of linking is to connect your phone to a speaker first. Then, connect to the other speaker using the BT Button.

Technical Specifications

Speaker type: Active

Frequency response: 70 Hz - 18 kHz

Power output: 70 W

Maximum sound pressure level (SPL): 95 dB

Nominal sensitivity: 93 dB

Impedance: 4 Ω

Low frequency driver: 8" woofer 20 oz. 1" VC 4Ω

High frequency driver: Piezo

Enclosure material: Plastic

Input connections: 1/4" mic/guitar input, 3.5 mm aux input, 2 RCA line input

Product length: 9.25"

Product width: 8"

Product height: 14"

Weight: 14.7 lbs.

Product type: PA speaker

SD functionality: Yes

Connectivity: Bluetooth

Power source required: Yes (plug-in power)

Location: Indoor or outdoor use

Installation required: No

Adult assembly required: No

Additional tools required: No

Country of origin: China

Warranty included: Yes

Warranty length: 1 year

Customer Service

info@lyxpro.com

866-849-3049

www.lyxpro.com

Distributed by C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837

info@lyxpro.com

MADE IN CHINA

LyxPro is a trademark of C&A IP Holdings LLC

SD™ is a trademark of SD-3C, LLC.

Bluetooth® is a trademark of Bluetooth SIG, Inc. USA.

©2021. All Rights Reserved

LIMITED WARRANTY TO ORIGINAL CONSUMER

This LyxPro Portable PA Battery-Powered Speaker ("Product"), including any accessories included in the original packaging, as supplied and distributed new by an authorized retailer is warranted by C&A Marketing, Inc. (the "Company") to the original consumer purchaser only, against certain defects in material and workmanship ("Warranty") as follows:

To receive Warranty service, the original consumer purchaser must contact the Company or its authorized service provider for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented to the Company or its authorized service provider in order to obtain the requested service.

Service options, parts availability, and response times may vary and may change at any time. In accordance with applicable law, the Company may require that you furnish additional documents and/or comply with registration requirements before receiving warranty service. Please contact our customer service for details on obtaining warranty service:

Email: info@lyxpro.com

Phone: 866-849-3049

Shipping expenses to the Company's Return Facility are not covered by this warranty, and must be paid by the consumer. The consumer likewise bears all risk of loss or further damage to the Product until delivery to said facility.

EXCLUSIONS AND LIMITATIONS The Company warrants the Product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase by the original end-user purchaser ("Warranty Period"). If a hardware defect arises and a valid claim is received within the Warranty Period, the Company, at its sole option and to the extent permitted by law, will either (1) repair the Product defect at no charge, using new or refurbished replacement parts, (2) exchange the Product with a Product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original device, or (3) refund the purchase price of the Product.

A replacement Product or part thereof shall enjoy the warranty of the original Product for the remainder of the Warranty Period, or ninety (90) days from the date of replacement or repair, whichever provides you longer protection. When a Product or part is exchanged, any replacement item becomes your property, while the replaced item becomes the Company's property. Refunds can only be given if the original Product is returned.

This Warranty does not apply to:

- (a) Any non-LyxPro Portable PA Battery-Powered Speaker product, hardware or software, even if packaged or sold with the Product;
- (b) Damage caused by use with non-LyxPro Portable PA Battery-Powered Speaker products;
- (c) Damage caused by accident, abuse, misuse, flood, fire, earthquake, or other external causes;
- (d) Damage caused by operating the Product outside the permitted or intended uses described by the Company;
- (e) Damage caused by third party services;
- (f) A Product or part that has been modified to alter functionality or capability without the written permission of the Company;
- (g) Consumable parts, such as batteries, fuses, and bulbs;
- (h) Cosmetic damage; or
- (i) If any LyxPro Portable PA Battery-Powered Speaker serial number has been removed or defaced.

This Warranty is valid only in the country where the consumer purchased the Product, and only applies to Products purchased and serviced in that country.

The Company does not warrant that the operation of the Product will be uninterrupted or error-free. The Company is not responsible for damage arising from your failure to follow instructions relating to its use.

NOTWITHSTANDING ANYTHING TO THE CONTRARY AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE COMPANY PROVIDES THE PRODUCT "AS-IS" AND "AS-AVAILABLE" FOR YOUR CONVENIENCE AND THE COMPANY AND ITS LICENSORS AND SUPPLIERS EXPRESSLY DISCLAIM ALL WARRANTIES AND CONDITIONS, WHETHER EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, QUIET ENJOYMENT, ACCURACY, AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. THE COMPANY DOES NOT GUARANTEE ANY SPECIFIC RESULTS FROM THE USE OF THE PRODUCT, OR THAT THE COMPANY WILL CONTINUE TO OFFER OR MAKE AVAILABLE THE PRODUCT FOR ANY PARTICULAR LENGTH OF TIME. THE COMPANY FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE.

YOU USE THE PRODUCT AT YOUR OWN DISCRETION AND RISK. YOU WILL BE SOLELY RESPONSIBLE FOR (AND THE COMPANY DISCLAIMS) ANY AND ALL LOSS, LIABILITY, OR DAMAGES RESULTING FROM YOUR USE OF THE PRODUCT.

NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY YOU FROM THE COMPANY OR THROUGH ITS AUTHORIZED SERVICE PROVIDERS SHALL CREATE ANY WARRANTY.

IN NO EVENT WILL THE COMPANY'S TOTAL CUMULATIVE LIABILITY ARISING FROM OR RELATED TO THE PRODUCT, WHETHER IN CONTRACT OR TORT OR OTHERWISE EXCEED THE FEES ACTUALLY PAID BY YOU TO THE COMPANY OR ANY OF ITS AUTHORIZED RESELLERS FOR THE PRODUCT AT ISSUE IN THE LAST YEAR FROM YOUR PURCHASE. THIS LIMITATION IS CUMULATIVE AND WILL NOT BE INCREASED BY THE EXISTENCE OF MORE THAN ONE INCIDENT OR CLAIM. THE COMPANY DISCLAIMS ALL LIABILITY OF ANY KIND OF ITS LICENSORS AND SUPPLIERS. IN NO EVENT WILL THE COMPANY OR ITS LICENSORS, MANUFACTURERS, AND SUPPLIERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA, OR RECORDS) CAUSED BY THE USE, MISUSE, OR INABILITY TO USE THE PRODUCT.

Nothing in these terms shall attempt to exclude liability that cannot be excluded under applicable law. Some countries, states, or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so certain limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.