



Ashley Entertainment Corp  
PO Box 777944  
Henderson, NV 89077  
Customer Service #  
1-(877) 914-1800

[www.AshleyEntertainmentCorp.com](http://www.AshleyEntertainmentCorp.com)  
[customerservice@ashleyentertainmentcorp.com](mailto:customerservice@ashleyentertainmentcorp.com)



## USING THE SPEAKERPHONE FEATURE

With the built-in microphone, I ROCK speaker can be used as a speakerphone whether you are connected via Bluetooth or AUX.

• User's Guide

## PLAYING MUSIC VIA BLUETOOTH MODE

1. Make sure the speaker is charged.

2. Turn speaker on by the on/off switch located on the back of the speaker.

A green LED will appear when on.

3. Connect the headphones cable to the "AUX OUT" port on the side of the speaker. Music now will only play in the headphones.

4. Note: Connecting the audio cable will override speaker mode. Speaker will automatically switch to auxiliary when the audio cable is connected.

5. Make sure the volume of your audio device is set to medium/low.

## CHARGING I ROCK SPEAKER / SPEAKERPHONE

Charge speaker with the included USB charge cable. Plug the micro end

into the socket (5V IN) on the side of the speaker and the other end into a

power USB port like on a computer. You may use any USB AC adapter

that is available to charge your speaker.

## VOLUME UP AND DOWN

Hold the volume up (+) and down (-) buttons to adjust to your desired

volume. You can also adjust the volume on your audio device.

## NEXT/LAST SONG

Press the arrow buttons to switch songs.

## ROUBLE SHOOTING

Problem: Bluetooth not connecting.

Solution: Please consult the User Guide of your Bluetooth enabled audio device for instructions. Make sure that both of your audio device and speaker are discoverable and charged. Try rebooting the speaker by turning it off then back on. Make sure one or less is not already connected to the speaker.

## PACKAGE CONTENTS

• I ROCK BT Speaker / Speakerphone

• Adjustable wrist Strap

• User's Guide

## PLAYING MUSIC VIA BLUETOOTH MODE

1. Make sure the speaker is charged.

2. Turn speaker on by the on/off switch located on the back of the speaker.

A green LED will appear when on.

3. Connect the headphones cable to the "AUX OUT" port on the side of the speaker. Music now will only play in the headphones.

4. Note: Connecting the audio cable will override speaker mode. Speaker will automatically switch to auxiliary when the audio cable is connected.

5. Make sure the volume of your audio device is set to medium/low.

## CHARGING I ROCK SPEAKER / SPEAKERPHONE

Charge speaker with the included USB charge cable. Plug the micro end

into the socket (5V IN) on the side of the speaker and the other end into a

power USB port like on a computer. You may use any USB AC adapter

that is available to charge your speaker.

## VOLUME UP AND DOWN

Hold the volume up (+) and down (-) buttons to adjust to your desired

volume. You can also adjust the volume on your audio device.

## NEXT/LAST SONG

Press the arrow buttons to switch songs.

## ROUBLE SHOOTING

Problem: Bluetooth not connecting.

Solution: Please consult the User Guide of your Bluetooth enabled audio device for instructions. Make sure that both of your audio device and speaker are discoverable and charged. Try rebooting the speaker by turning it off then back on. Make sure one or less is not already connected to the speaker.

## HEADPHONE/AUX CUT MODE

1. Make sure the speaker is charged.

2. Turn speaker on by the on/off switch located on the back of the speaker.

A green LED will appear when on.

3. Connect the headphones cable to the "AUX OUT" port on the side of the speaker. Music now will only play in the headphones.

4. Note: Connecting the audio cable will override speaker mode. Speaker will automatically switch to auxiliary when the audio cable is connected.

5. Make sure the volume of your audio device is set to medium/low.

## CHARGING I ROCK SPEAKER / SPEAKERPHONE

Charge speaker with the included USB charge cable. Plug the micro end

into the socket (5V IN) on the side of the speaker and the other end into a

power USB port like on a computer. You may use any USB AC adapter

that is available to charge your speaker.

## VOLUME UP AND DOWN

Hold the volume up (+) and down (-) buttons to adjust to your desired

volume. You can also adjust the volume on your audio device.

## NEXT/LAST SONG

Press the arrow buttons to switch songs.

## ROUBLE SHOOTING

Problem: Bluetooth not connecting.

Solution: Please consult the User Guide of your Bluetooth enabled audio device for instructions. Make sure that both of your audio device and speaker are discoverable and charged. Try rebooting the speaker by turning it off then back on. Make sure one or less is not already connected to the speaker.

## HEADPHONE/AUX CUT MODE

1. Make sure the speaker is charged.

2. Turn speaker on by the on/off switch located on the back of the speaker.

A green LED will appear when on.

3. Connect the headphones cable to the "AUX OUT" port on the side of the speaker. Music now will only play in the headphones.

4. Note: Connecting the audio cable will override speaker mode. Speaker will automatically switch to auxiliary when the audio cable is connected.

5. Make sure the volume of your audio device is set to medium/low.

## CHARGING I ROCK SPEAKER / SPEAKERPHONE

Charge speaker with the included USB charge cable. Plug the micro end

into the socket (5V IN) on the side of the speaker and the other end into a

power USB port like on a computer. You may use any USB AC adapter

that is available to charge your speaker.

## VOLUME UP AND DOWN

Hold the volume up (+) and down (-) buttons to adjust to your desired

volume. You can also adjust the volume on your audio device.

## NEXT/LAST SONG

Press the arrow buttons to switch songs.

## ROUBLE SHOOTING

Problem: Bluetooth not connecting.

Solution: Please consult the User Guide of your Bluetooth enabled audio device for instructions. Make sure that both of your audio device and speaker are discoverable and charged. Try rebooting the speaker by turning it off then back on. Make sure one or less is not already connected to the speaker.

## HEADPHONE/AUX CUT MODE

1. Make sure the speaker is charged.

2. Turn speaker on by the on/off switch located on the back of the speaker.

A green LED will appear when on.

3. Connect the headphones cable to the "AUX OUT" port on the side of the speaker. Music now will only play in the headphones.

4. Note: Connecting the audio cable will override speaker mode. Speaker will automatically switch to auxiliary when the audio cable is connected.

5. Make sure the volume of your audio device is set to medium/low.

## CHARGING I ROCK SPEAKER / SPEAKERPHONE

Charge speaker with the included USB charge cable. Plug the micro end

into the socket (5V IN) on the side of the speaker and the other end into a

power USB port like on a computer. You may use any USB AC adapter

that is available to charge your speaker.

## VOLUME UP AND DOWN

Hold the volume up (+) and down (-) buttons to adjust to your desired

volume. You can also adjust the volume on your audio device.

## NEXT/LAST SONG

Press the arrow buttons to switch songs.

## ROUBLE SHOOTING

Problem: Bluetooth not connecting.

Solution: Please consult the User Guide of your Bluetooth enabled audio device for instructions. Make sure that both of your audio device and speaker are discoverable and charged. Try rebooting the speaker by turning it off then back on. Make sure one or less is not already connected to the speaker.

## HEADPHONE/AUX CUT MODE

1. Make sure the speaker is charged.

2. Turn speaker on by the on/off switch located on the back of the speaker.

A green LED will appear when on.

3. Connect the headphones cable to the "AUX OUT" port on the side of the speaker. Music now will only play in the headphones.

4. Note: Connecting the audio cable will override speaker mode. Speaker will automatically switch to auxiliary when the audio cable is connected.

5. Make sure the volume of your audio device is set to medium/low.

## CHARGING I ROCK SPEAKER / SPEAKERPHONE

Charge speaker with the included USB charge cable. Plug the micro end

into the socket (5V IN) on the side of the speaker and the other end into a

power USB port like on a computer. You may use any USB AC adapter

that is available to charge your speaker.

## VOLUME UP AND DOWN

Hold the volume up (+) and down (-) buttons to adjust to your desired

volume. You can also adjust the volume on your audio device.

## NEXT/LAST SONG

Press the arrow buttons to switch songs.

## ROUBLE SHOOTING

Problem: Bluetooth not connecting.

Solution: Please consult the User Guide of your Bluetooth enabled audio device for instructions. Make sure that both of your audio device and speaker are discoverable and charged. Try rebooting the speaker by turning it off then back on. Make sure one or less is not already connected to the speaker.

## HEADPHONE/AUX CUT MODE

1. Make sure the speaker is charged.

2. Turn speaker on by the on/off switch located on the back of the speaker.

A green LED will appear when on.

3. Connect the headphones cable to the "AUX OUT" port on the side of the speaker. Music now will only play in the headphones.

4. Note: Connecting the audio cable will override speaker mode. Speaker will automatically switch to auxiliary when the audio cable is connected.

5. Make sure the volume of your audio device is set to medium/low.

## CHARGING I ROCK SPEAKER / SPEAKERPHONE

Charge speaker with the included USB charge cable. Plug the micro end

into the socket (5V IN) on the side of the speaker and the other end into a

power USB port like on a computer. You may use any USB AC adapter

that is available to charge your speaker.

## VOLUME UP AND DOWN

Hold the volume up (+) and down (-) buttons to adjust to your desired

volume. You can also adjust the volume on your audio device.

## NEXT/LAST SONG

Press the arrow buttons to switch songs.

## ROUBLE SHOOTING

Problem: Bluetooth not connecting.

Solution: Please consult the User Guide of your Bluetooth enabled audio device for instructions. Make sure that both of your audio device and speaker are discoverable and charged. Try rebooting the speaker by turning it off then back on. Make sure one or less is not already connected to the speaker.

## HEADPHONE/AUX CUT MODE

1. Make sure the speaker is charged.

2. Turn speaker on by the on/off switch located on the back of the speaker.

A green LED will appear when on.

3. Connect the headphones cable to the "AUX OUT" port on the side of the speaker. Music now will only play in the headphones.

4. Note: Connecting the audio cable will override speaker mode. Speaker will automatically switch to auxiliary when the audio cable is connected.

</

This device and its antenna must not be located or operating in conjunction with any other antenna and transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help