

Please read this user manual carefully before using

Manual

Floating Waterproof Bluetooth Speaker
The way to enjoy your bath

SL986



Thank you for purchasing our product.
Please keep this user manual carefully.
Read this user manual carefully before using this product and keep this manual for future reference.

This product is designed for home entertainment and indoor use only.



Warranty

■Slive warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 180 days from the date of original purchase should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased.

■Within warranty period, Slive will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to Slive LLC listed below. The product must include proof of purchase, including date of purchase. Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems.

If service is still required:

- Remove the batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
- Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
- Send the unit prepaid and insured, to Slive LLC below.

Slive LLC,
32232 Rochelle Dr.
Union City, CA 94587

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, (iv) the cost of shipping this product to Slive LLC and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event Slive LLC be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages.

■Slive does not warrant against normal wear and tear, nor damage caused by accident or abuse.

Warranty Expiration

If you submit a claim over this warranty, Please contact Slive. Slive will either repair as its own discretion. It could cause cost.

Personal information

All conversation and repair confirmation from customer will be saved record by Slive. The relevant personal information is not allowed to reveal to the third party without reasonable reason.

Sales Support

Subject to obtain support. If you have any inquiry, please contact Slive
E-mail: support@slivedirect.com
Website:www.slivedirect.com

Trouble Shooting

If any trouble, perform trouble shooting shown as below

■Smoky	If any trouble or accident occurs, Please stop using immediately. Contact Slive for repair.
■Smelly	
■Other trouble	

※This product must be disposed of separately from household waste.

Floating Waterproof Bluetooth Speaker

S-BUBBLE

Under Warranty	Product	Date of purchase	D/M/Y
(Free of charge)			
Customer	Name/Address		
Sales Store	Name/Address		

Maintenance Record

Important Safety and Handling Information

To avoid injury or other property damage. Read all operating instruction and the following safety information before using.

Go through and follow the instructions for correct operation and maintenance, and always keep at hand for consultation.

Pay attention to the sentences marked with "Warning" or "Caution" Symbol in this publication, which involves safety of operation.

WARNING: [If fail to follow these safety instruction or operate this product incorrectly could result in death or serious injury. 1Hypothesis]

CAUTION: [If fail to follow these safety instruction or operate this product incorrectly could result in 2 Injury or property damage. 3Hypothesis]

※1 Serious injury means blindness, injury, burn (High or low temperature), electric shock, fractures, poisoning, squeal and hospitalization.

※2 Injury means light injury, burn or electronic shock. It would not cause hospitalization.

※3 Property damage means house, property or relevant large range damage

Symbol Instruction



Pay attention to relevant symbol or article.



Pay attention to relevant symbol or article.



Pay attention to relevant symbol or article.

WARNING

- Do not disassemble, repair or modify product itself. It could result in fire, electric shock.
- If you have any questions, contact Slive LLC.
- Do not use or place this product in enclosed places or directly under sunlight. Do not place this product inside the car, heat air or any high temperature circumstances. It could result in fire, deform, or damage.
- Do not insert any foreign objects or metal into the product. Metal (Clip, Needle, Coin etc.), paper, combustible substance could result in fire, electric shock, or other injury. The family with children should pay special attention to it.
- Do not open cover or battery cover in wet or humid condition. It could result in fire, electric shock, or other damage
- Do not use with sea water. It could result in fired, or other damage
- Attention: Turn off this product or pull out batteries if there is any smoke or abnormal noise. It could result in fire or damage.

CAUTION

- Do not place this product on the machine, turn it over or damage. It might cause injury.
- Please pay special attention to children.
- Do not listen at high volume level for long period. It could result hearing impairment.
- Do not place this product in wet or humid condition for long period, it could damage the product.

Battery Safety Information

To avoid injury, read the following safety information.

- Do not use different type of batteries
- Batteries should not be inserted with wrong polarities.
- Do not charge, heat, disassemble, short circuit or dispose battery in fire.
- Do not use expired batteries.
- New and used AA batteries should not be mixed
- Take out batteries if not using the product for more than one week
- Take out batteries after using for long period
- Do not touch the battery with wet hands
- Battery overheating, leaking, or rupture could cause injuries.

Waterproof	Waterproof standard: IPx 6. This product is designed floating on the water. Do not fully sink this unit in water, it could cause damage electronic parts. Please fully understand the instruction before using.
Waterproof Object	Use this product with tap water. Do not use this product in sea water, soapy water, shower gels water, shampoo water, hot spring water, swimming pool water or any other type of liquid. If product is exposed with above liquid by accident, please make sure no liquid or water leak into battery/battery case and wash this product with tap water as soon as possible.
Do not use this product with dryer or hairdryer.	This product is not designed for heatproof, please do not use dryer or hairdryer to blow it directly. Do not place or use this product in sauna, heat air or any high temperature circumstances.
Internal parts condensation prevention	Do not take this product from cold to warm condition or warm to cold condition, it could cause condensation issue.
Do not insert any sharp objects to speaker hole.	Never attempt to insert any sharp objects to speaker hole, it will damage the surface of speaker, effect waterproof and sound quality.
Daily Check	Please examine the rubber ring on battery cover frame to make sure the rubber ring is perfectly inserted, no any other foreign objects on the surface of rubber ring, and make sure the rubber ring is in good shape.
Waterproof	<ul style="list-style-type: none">Do not fully sunk this unit in water.Do not place this product in water or humid location for long period. Take this product out once a week from bathroom. Remove batteries, place this product under dry and shaded area until this product complete dry.
Exception from liability	<ul style="list-style-type: none">Damage caused by accident, abuse, misuse, fire, earthquake or other external causes.Damage caused by using this product outside of the intended uses described by this manual.


AA batteries insertion instruction and battery cover close instruction

1. Turn this product upside down and turn the outer battery cover counterclockwise to separate


【】 symbol from the body and outer battery cover.

BUTTON 【】 symbol

BACK

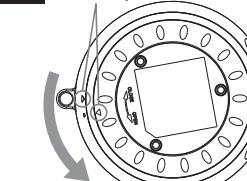


Take out the outer battery cover


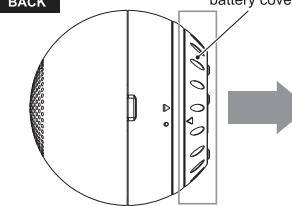


2. Open both side buckle cover and open inner battery cover, insert AA batteries.

Outer Battery Cover

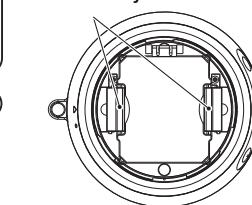


Inner Battery Cover

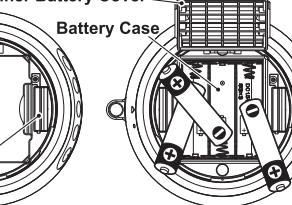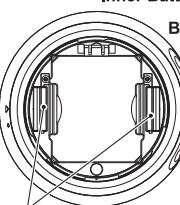


Open both side buckle cover, insert AA batteries with correct polarities.

3. Close inner battery cover after inserting batteries, both side buckle cover must be fully closed

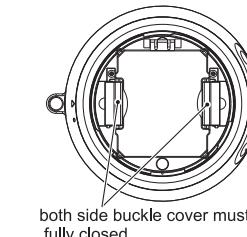

both side buckle cover must be fully closed

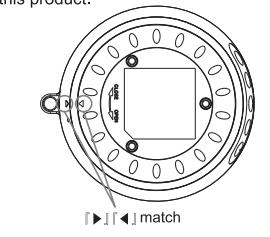

【】 match

Specifications

■Power:3x AA Batteries (not included)

■Play time: up to 32 hours (based on 1/3 volume)

■Max output power: ~1W

■Speaker DiameterΦ50mm(1PC)

■Waterproof Standard: JIS IPx6

■Size 110 (W) ×110 (L) ×101 (H) mm

■Weight 255g (batteries are not included)

※Depends on operating condition or batteries, sound quality may be different

■In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice

Bluetooth Specifications

■Bluetooth accession No.

SL986

■Specifications

Bluetooth® ver4.0

2.4GHz(2402~2408MHz)

■Using frequency

FHSS

■Content protection

SCMS-T

■Transmission range (AZDP)

20Hz ~ 20,000Hz

■Communication coverage

~10m

■Bluetooth version

4.0

■Transmission power

CLASS 2 Max 4dB

■Maximum number of Paired Devices

8

■Auto Identification and connection


1

(Under metal shield wall/enclosure, Communication coverage will be shorter)

Function and operation

Function

Front

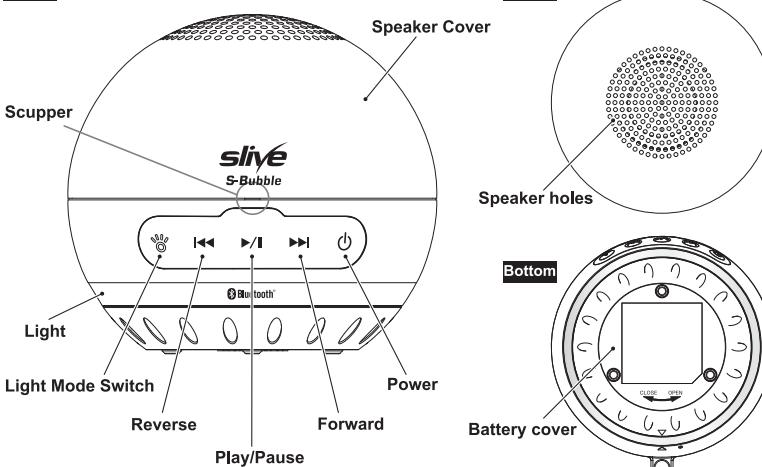

Operation

■ "Hold" means press and hold >2 seconds, and "Press" means press and release about 0.1 second in this manual.

Power on/off the unit

Hold the Power bottom for switching on/off the unit.

Light will be on and melody sounds. If you hear the melody about 10 seconds later, you can start the pairing process.

Caution

■ The unit on after 30 minutes, it will be turned off automatically.

Select previous sound track

Press the Reverse button while playing.

It back to the beginning of current sound track or switches to previous sound track

Play

Press the Play/Pause button.

Press the button, the music will stop, and press the button again for continue playing

Pause

Press Play/Pause button while playing.

Press the button, the music will stop, and press the button again for continue playing

Increase the volume

Hold the Forward button.

The volume goes up (up to maximum volume)

Light Mode Switch

■ You can enjoy two different light mode by pressing Light Mode button.

■ Light ball mode (without pairing)

Power on the unit.

Press Light Mode Switch to change LED strip color

Decrease the volume

Hold the Reverse button.

The volume goes down (up to zero volume)

Skip sound track

Press the Forward button while playing.

It switches to new sound track

Pairing mode

Power on the unit and pairing the unit with audio Bluetooth devices.

The unit changes the lighting mode as follows by pushing the Light Mode button.

- ① The unit blink to music
- ② The unit changing color.
- ③ The unit lights up blue.
- ④ The LED lights off.

FCC Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Caution

■ When the speaker holes are covered by water, please wipe off by towel. The water may leak into the unit by time.

■ When the speaker holes are covered by water, the volume decreases. After sometime, it gets back automatically by "emptying" the water.

■ Please dry off the unit at least once a week.

■ Please do not open the battery cover under wet or humid condition.

■ When the light blinks red, it indicates the time to change batteries.

Possible paired devices: up to four devices

■ Automatic recognition of paired device only for the last connected device

Enjoy the music

S-Bubble let you enjoy your music streaming from your audio Bluetooth device.

To connect your device to S-Bubble needs "pairing" procedure.

Please fully understand the pairing procedure of your Bluetooth audio device before pairing your device with S-Bubble.

Streaming music from your phone to S-Bubble by pairing with your audio Bluetooth devices

Pairing Limitation

■ Please finish the pairing within 30 minutes.

■ Pairing device should be within 1 meter.

■ Maximum transferable distance will be 10 meter in the best condition.

■ Maximum Paired device: up to four devices. If pairing more than four devices, the oldest one will be overwritten.

■ Automatic recognition of paired device only for the last connected device

Pairing

1. Turn on the unit by holding the Power button. The unit is on and the light is on.



3. Please select Pairing process from your audio Bluetooth device

4. Select the device that you want to connect.

5. Please select SL986 from your audio Bluetooth device

6. If the device ask passcode, please input "0000" (four zero). (No passcode by default)

7. If "Connection is completed" appears on the display, pairing is completed.


8. Select the music in your audio Bluetooth Device, and start to enjoy.

2. After 10 seconds, the melody rings, and you can start Pairing.


Maintenance

When water gets into S-Bubble, you should follow below instruction.

■ Hung up S-Bubble to get water out from scupper, and place S-Bubble under dry and shaded area about a day.

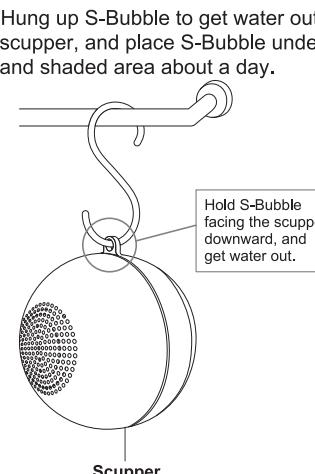


■ Do not open the battery cover in wet or humid condition.

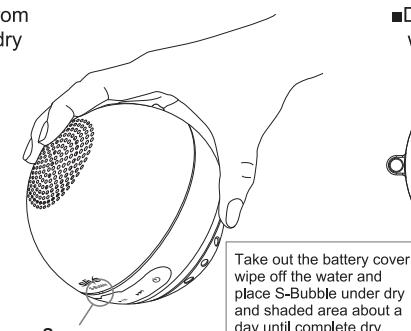


Scupper

Take out the battery cover, wipe off the water and place S-Bubble under dry and shaded area about a day until complete dry.

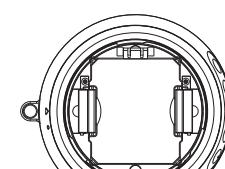

■ When the red light blinks,
■ When the light blinks red, it indicates the time to change battery.

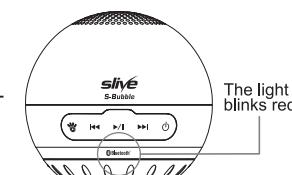

The light blinks red