

尺寸：140X105MM

DECLARATION

This manual without any kind of warranty, the position of expression or other implied. If any because of the use of all of the information of the manual, or they use the products mentioned, caused by direct or indirect loss of data, loss of profits, or the cause of termination of the Company, our company and our employees definitely do not assume any responsibility. In addition, the specifications of the products mentioned in this manual for information purposes only, may be modified according to the product specific to prevail in kind, the content will be updated at any time absolutely without prior notice.

Product and company names talked about in this manual are only for identification purposes, these names may be registered trademarks and copyrights of other companies.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

USER MANUAL

TIPS

For your safety, while driving please do not watch video or operating this machine. Set the volume to clearly hear outside sound levels while driving. Before you begin, carefully read this manual and other manuals and understand this manual and machine safety tips and warning signs, after reading it, please put it on the readily accessible place for ready reference.

1. First pay attention to traffic safety.
2. If when you encounter difficulties in operating the system, park your car in a safe place before the operation.
3. Please do not let children operate this machine, so as not to cause personal injury or damage to the machine.
4. When using satellite navigation feature, please follow the rules of the road driving.
5. Please do not use this machinery in place to prohibit the use of electronic equipment or open flame is prohibited, such as gas stations, wineries, electromagnetic strong interference region, or it may be dangerous
6. Do not self-service, maintenance, or install the machine. In case of the power is on, do not install or repair the machine. It is very dangerous if the person who did not receive the electronic equipment or vehicle installation training or lack of experienced personnel to install and repair the machine.
7. Do not store or install the machine in direct sunlight place, nor to be placed in the environment of other harmful substances, especially LCD screen, when installing, if the LCD screen just in the air conditioner near the ventilation duct, to ensure that cold do not wind or hot air blowing directly on the machine, otherwise it may damage the machine, even for personal injury.
8. Do not use sharp objects to scratch or paint on the display, do not take a hard object vigorously push on the display, otherwise it will cause damage to the display or the touch screen.
9. In order to ensure the normal operation of the machine and to prevent the occurrence of fire or electric shock, do not expose it in the moist air, also do not to let the liquid spilled on the machine.

SAFETY CAUTION

Please read through the manual before you install this machine. You're suggested to ask the professional car audio engineers to install this machine.

-  This product fits for 12V car power system(must be connected with the ground wire).Please do not install this product to the car with 24V power system. Or the machine will be damaged.
-  Please do not change the power fuse by yourself without any guide of the professional people. Use the unsuitable fuse, will lead to the damage of the machine or cause fire alarm.
-  To avoid violating the traffic rules, the drivers are not allowed to watch programs or operate this machine when driving, in order to avoid unnecessary traffic accident.
-  For safety and ensure the normal use of this product, please ask the professional people to install this product, and do not disassemble or maintain this product, to avoid the damage of this product and some accidents, details please refer to your local car audio shops.
-  Please do not put this product in damp environment and water,to avoid the electric shock caused by short circuit,or other unnecessary losses and fire alarm.

Attention: To avoid short circuit, please note to turn off the car and disconnect the connection of cable ACC with B+ before install the machine.

PRODUCT'S RESET

1. At the first time to use this machine or after changing the car battery,you are required to reset the machine.
2. When the functions of this machine are abnormal, you are required to reset the machine.
3. Use a substance which is with cusp, press the RESET button which is in the face plate. In setting system click Initialize Settings, let the machine in its initial state.

Attention: Press RESET button or make system in its initial state which will make the previous time and memory lost.

Menu

Interface Operation	02	GPS/time setting	13
Navigation	03	Language/background setting	14
TV/AUX	04	Frequently Asked Questions	15
DVD	05	Care And Maintenance	16
Bluetooth	06		
Radio	08		
iPod	09		
SD/USB	10		
System Settings	11		
Audio Settings	12		

— 1 —

Interface Operation

Turn on navigation then access to main menu, it has two pages.



photograph1

Tap screen and slide right to next page as photograph 1

photograph2

Tap screen and slide left to last page as photograph 2


— 2 —

NAVIGATION


Set navigation as follow



1:Put map to GPS slot, clink"Icon"to Navi setting

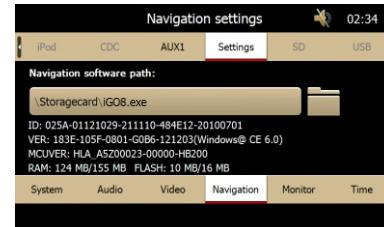

1:Setting 2:Folder Icon
2:Clink "setting" , then clink "Folder Icon"

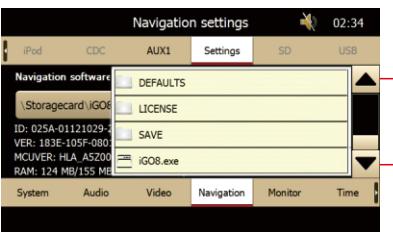

3:Clink folder , choose AddrBook
Clink next page to choose "Navione.exe" , then return to main menu

— 3 —

TV/AUX



1.In AUX mode,when signal input,system will turn to image automatically.

2.Clink top left corner will show return to main menu

NO.	Icon	Function
1		Search the TV channel
2		Search channel up
3		Search channel down
4		last TV channel Next TV channel
5		Search the channel
6		Storage the TV channel

— 4 —

DVD



NO.	Icon	Function
1	▶	pause/play
2	■	stop
3	◀▶	Last Track/Next Track
4	◀▶	Fast forward
5	○	Cycleplay
6	▶	Next menu
7	≡	Main menu
8	SUB_T	Choose subtitles DVD mode
9	🔊	Stereo
10	GOTO	Show the information of CD/DVD
11	⚙	Setting
12	🔉	Turn down the volume
13	🔊	Turn up the volume
14	◀	Previous menu
15	≡	Link to keypad to choose play list
16	❖	Choose and setup tracks in Mp3 mode

— 5 —


Bluetooth




Enter the mobilephone pair setup



Connect Delete pairing record
Delete Return

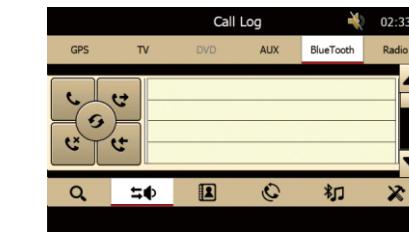


Answer Missed calls Call incoming
Missed call Refresh phonebook

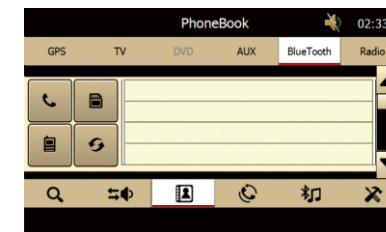


Call Phonebook of SIM(GPS) card
Check phonebook of mobilephone Refresh phone book

— 6 —

Bluetooth

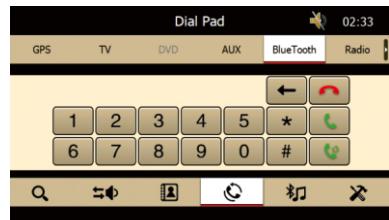

Hang up Key to dial interface
 Redial

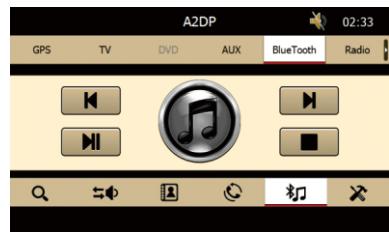

Play the music on the mobile phone by bluetooth

— 7 —



Changes Bluetooth name and password

Radio



1 2 3 4 5 6 7 8 9 10

NO.	Icon	Function
1	EQ	Sound mode
2		Search the radio station
3	AMS	Auto search and store radio channels
4	BAND	Band switching
5	LOC/DX	Receiving the strong signal of radio station frequency
6	PTY	Program type/ Station menu
7	FAV	Display station list automatic
8	AF	On-Off of RDS
9	ST	Stereo/Mono this setting will work on FM and bands
10	TA	Search the traffic information channels

Note:

AF/TA work only when device have RDS function

— 8 —


iPod



NO.	Icon	Function
1		Back to the main menu
2		Last Track/Next Track
3		Speed/Fast rewind button
4		Suspend/Play
5		Stochastic Pattern
6		Recurrence Pattern
7		Sound mode

— 9 —

SD/USB

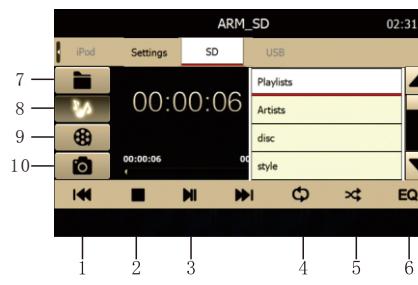

NO.	Icon	Function
1		Last Track/Next Track
2		Stop
3		Suspend/Play
4		Stochastic Pattern
5		Recurrence Pattern
6		Sound mode
7		Folder in the SD card
8		Music in the SD card
9		Movie in the SD card
10		Picture in the SD card

Note:

SD menu interface is the same as USB menu interface.

—10—

System Settings



Time display: System Time Display ON/OFF


Brake: ON—All video will stop playing with reminding words in screen when tick it

System initialization: Restore Factory settings

Radio location: Radio location Settings

TV Video System: PAL N, PAL M, PAL I, PAL B/G, PAL D/K, SECAM L', SECAM L, SECAM D/K, SECAM B/G, NTSC M/N.

Audio Settings

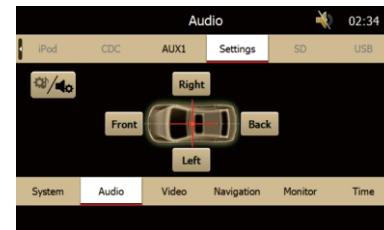

All Model Audio Settings: Navigation/BT/DVD/TV/iPod/Aux In/Radio

LOUD: Four Speakers sound at the same time

6 Sound Effects: Custom/Standard/Pop/Rock/Classic/Jazz

Tips:

"Front, Back, Left, Right" is used for adjusting each in car louder speakers' volume

GPS/time setting



This picture shows the GPS signal, Click  can redetect GPS signal


24HR:Swap 12-hour system to 24-hour system
GPS Sync: system time is synchronous with GPS
or not

-13-

Language/background setting



Language Settings

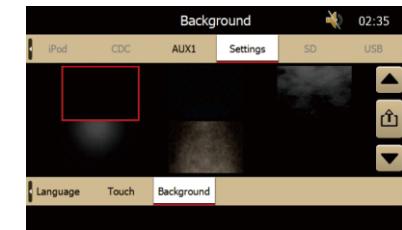

System Background settings

-14-

Frequently Asked Questions

1.Question: Failure to open the unit
Reason : Haven't installed the bus pod or haven't install the bus pod properly
Solution : configure the bus pod properly

2.Question: Failure to enter the GPS navigation
Reason : Not setting the gps navigation route correctly
Solution : reset the gps navigation route

3.Question: No BT function
Reason : No mobile telephone connection
Solution : Enter the BT setup and check the machine name and code

4.Question: Failure of touch screen
Reason : Touch screen deflected
Solution : recalibrate the touch screen

5.Question: Failure of specific speaker
Reason : Incorrect audio setup
Solution: configure speaker properly

6.Question: Failure of navigation's signal
Reason : Not insert the GPS antenna or not configure the GPS antenna correctly
Solution : Insert the GPS antenna properly

Care and Maintenance

The car entertainment & navigation systems need to be operated carefully, considering its excellent design and technology. The following suggestions will help you to fulfill the obligation of warranty terms and conditions.

- 1.Keep all the parts, accessories of the car entertainment & navigation systems away from the children.
- 2.Please keep dry. The rainwater, moisture and other kinds of liquid may contain mineral substance, which will corrode the electronic circuits. The soaking or moisture will ruin the components, cause irreparable damage.
- 3.Do not use or put the headunits in the dusty or smudgy place, which may damage its detachable elements.
- 4.Keep the headunits away from the extremely hot place. The high temperature will shorten the acceptable life, damage the battery , deform or melt the plastic parts.
- 5.Keep the headunits away from the extremely cold place. Otherwise the temperature increment may accumulate moisture inside, which will damage the circuit board.
- 6.Please do not throw, knock or shock the machine with great force, otherwise it may be ruined.
- 7.Do not attempt to destructuralize the machine, this will damage it, especially to the non-professionals.
- 8.Do not use the strong chemicals, detergent or strong abluent to wash the machine.
- 9.keep away the electromagnetic, radioactive or magnetic equipment when use the machine or store it.
- 10.When wipe the screen, use the soft and clean cloth, ordinary paper is not recommended.
- 11.The LCD screen is scraped easily, please use the touch pen when operate. To avoid the damage on the screen, other sharp objects are not recommended.