



TYPE-S

Operations and Safety Manual


VERSION 1.0 (6/14/2019)



- 1. Contents
- 2. Introduction
- 3. <u>Features</u>
- 4. Requirements
- 5. What's in the Box
- 6. Getting Started
- 7. Recording an Activity
- 8. Wearing Your LEOMO Motion Sensors (Optional)
- 9. Hardware Controls and Statuses
- 10. Home and Menu Screens
- 11. Status Bar
- 12. <u>Activity Screens</u>
- 13. Customizing the TYPE-S Using LEOMO App
- 14. LEOMO Web App
- 15. Motion and training
- 16. Motion Performance indicators
- 17. <u>Technical Information</u>
- 18. <u>Technical Information</u>
- 19. <u>Limitation of Liability</u>
- 20. <u>Certification Information</u>



- Quantify your body's 3D movements in real life training and racing environments.
- Includes a transflective display, which is clearly visible in direct sunlight, and FIVE wireless LEOMO Motion Sensors.
- Powerful real-time graph for trend evaluations of your motion, power, cadence, speed, heart rate, and GPS data.
- Available as a smartphone, too, enabling voice calls, photo/video shooting, and use of various Android™ applications.
- Analyze your activity data anywhere using LEOMO's browser-based analysis tool.

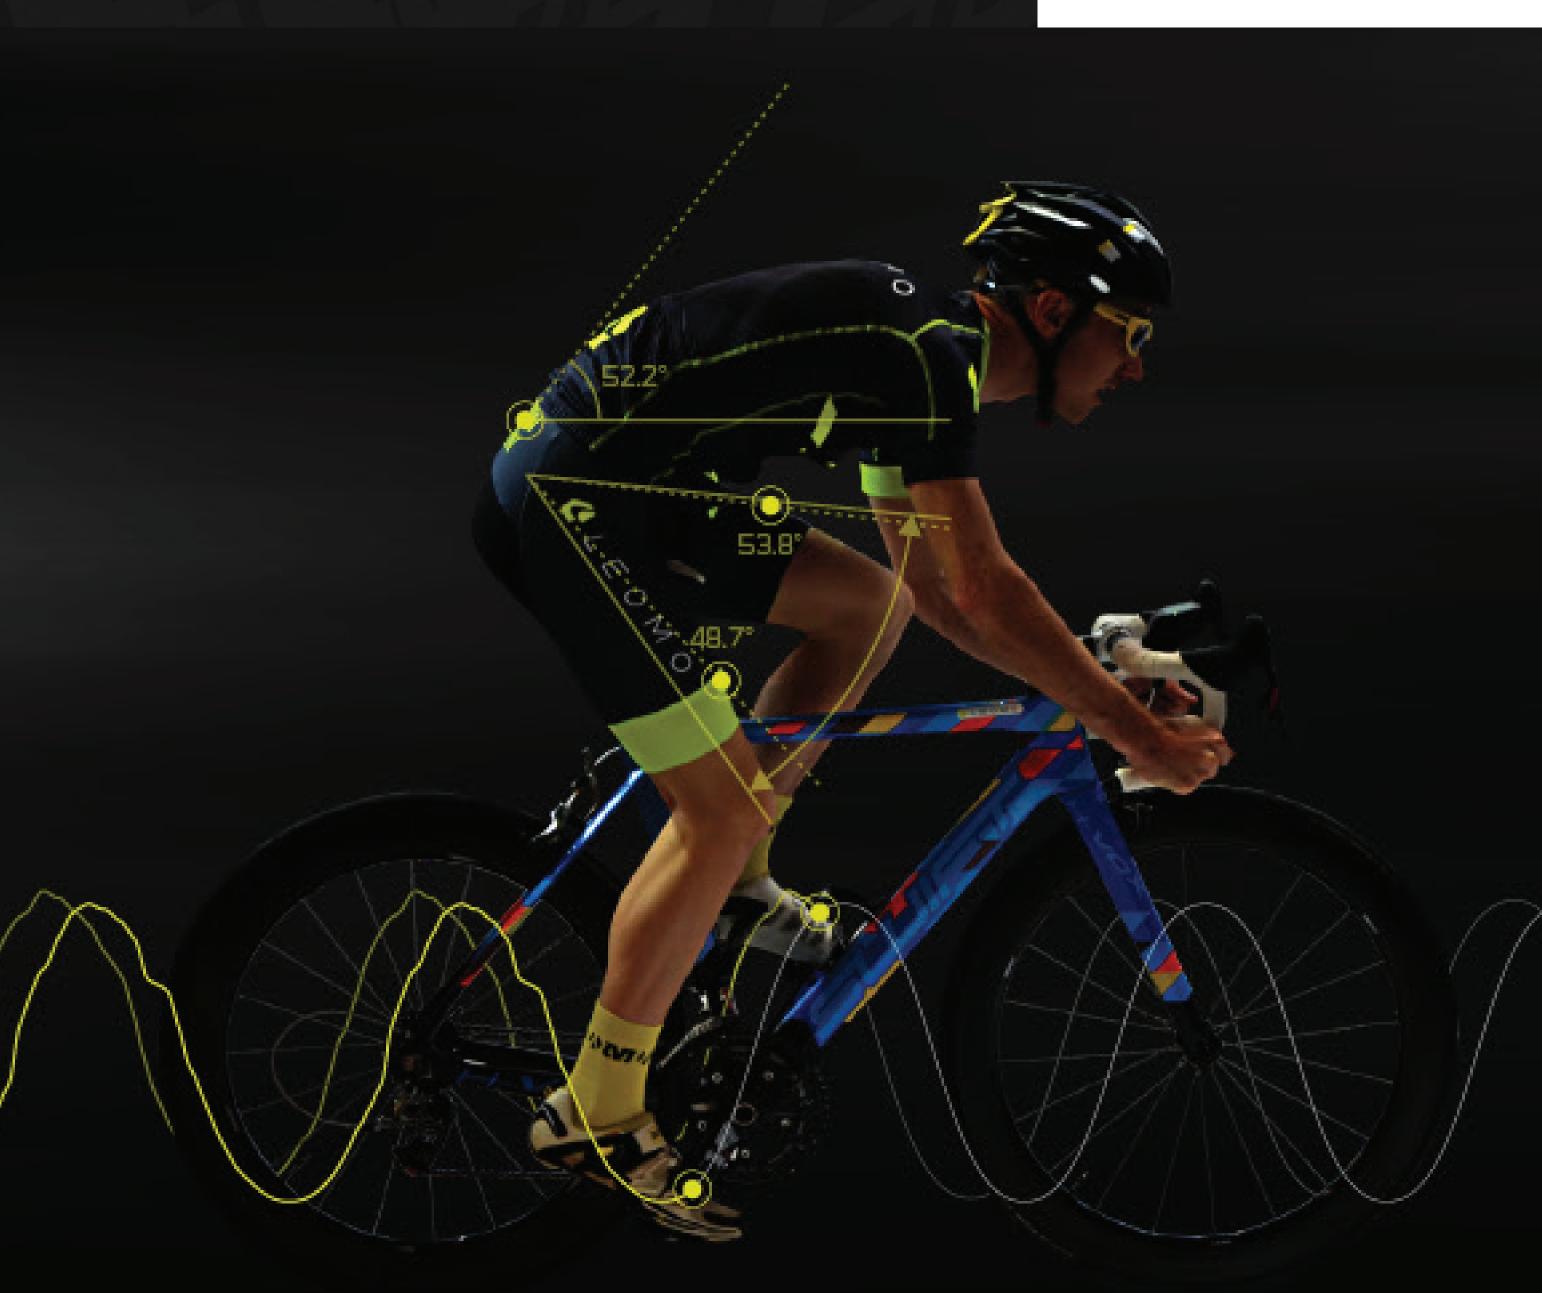



WI-FI CONNECTION


WEB BROWSER

- Chrome™ V55 or later
- Safari V10 or later
- Firefox V58 or later
- Edge V4.0 or later


WHAT'S IN THE BOX



CORE ITEMS

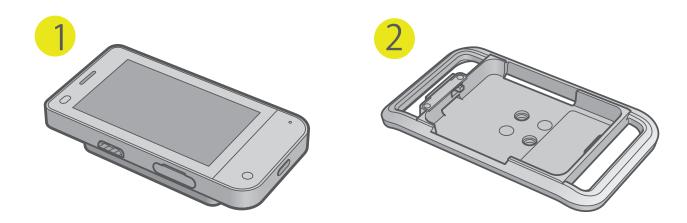

OPTIONAL ACCESSORIES

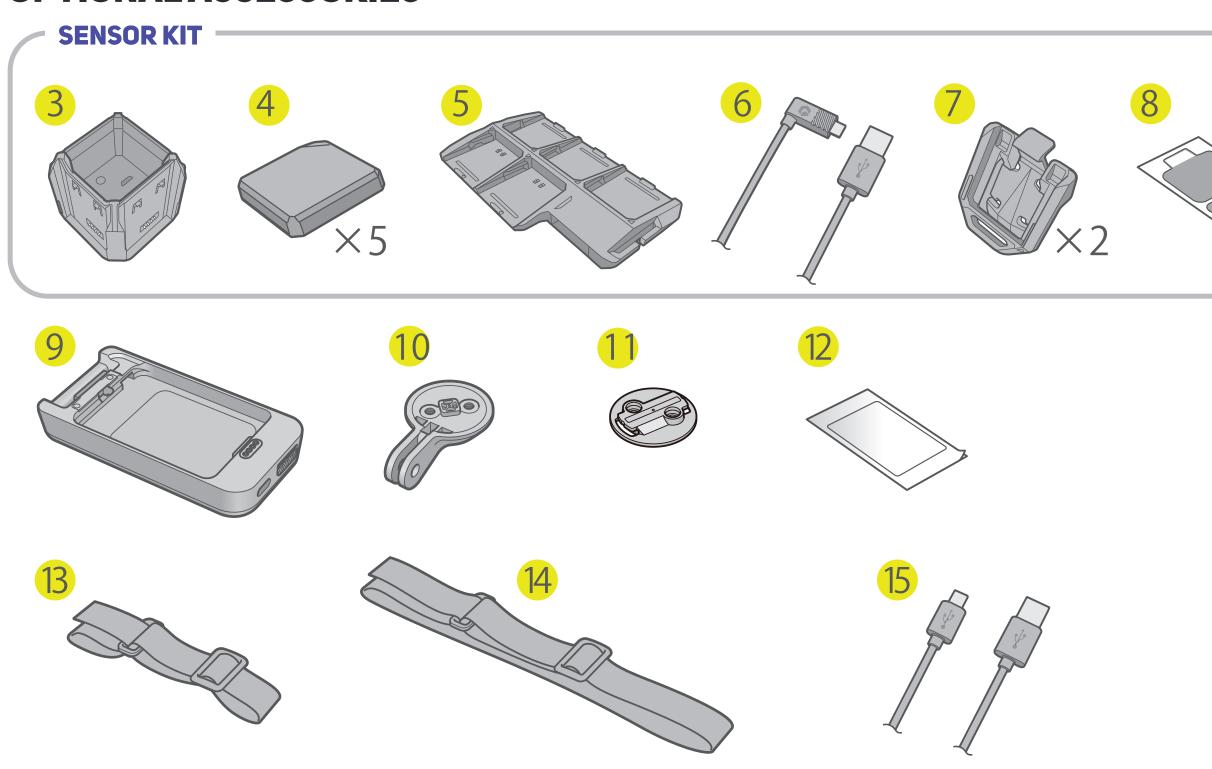

- 1. TYPE-S MAIN UNIT
- 2. MULTI-SPORT ADAPTER
 WITH BIKE PLATE FOR FITTING
 ON BIKE MOUNT


SENSOR KIT (OPTIONAL)

- 3. SENSOR CHARGER FOR CHARGING MOTION SENSORS
- 4. LEOMO MOTION SENSORS
 X5 FOR MOTION DATA COLLECTION
- 5. SENSOR CARRIER CASE FOR KEEPING MOTION SENSORS POWERED OFF WHILE IN TRANSIT
- 6. USB CABLE

 $\times 25$


- 7. SENSOR CLIPS FOR USING MOTION SENSORS ON SHOES
- 8. SENSOR ADHESIVES X50 FOR WEARING MOTION SENSORS

- 9. POWER MOUNT
 WITH BIKE PLATE
 (OPTIONAL) FOR FITTING
 ON BIKE MOUNT WHILE CHARGING
 TYPE-S
- 10. CAMERA MOUNT
 (OPTIONAL) FOR MOUNTING
 TYPE-S ON BIKE AND SHOOTING
 PHOTO/VIDEO
- 11. BIKE PLATE
 (OPTIONAL) FOR FITTING
 ON BIKE MOUNT
- 12. ANTI-GLARE FILM (OPTIONAL)
- 13. ARM BAND (OPTIONAL)
 FOR WEARING TYPE-S ON ARM
- 14. WAIST BELT
 (OPTIONAL) FOR WEARING
 TYPE-S AROUND WAIST
- 15. TYPE-C USB CABLE (OPTIONAL) FOR CHARGING TYPE-S
- 16. AC ADAPTER (OPTIONAL, NOT SHOWN)

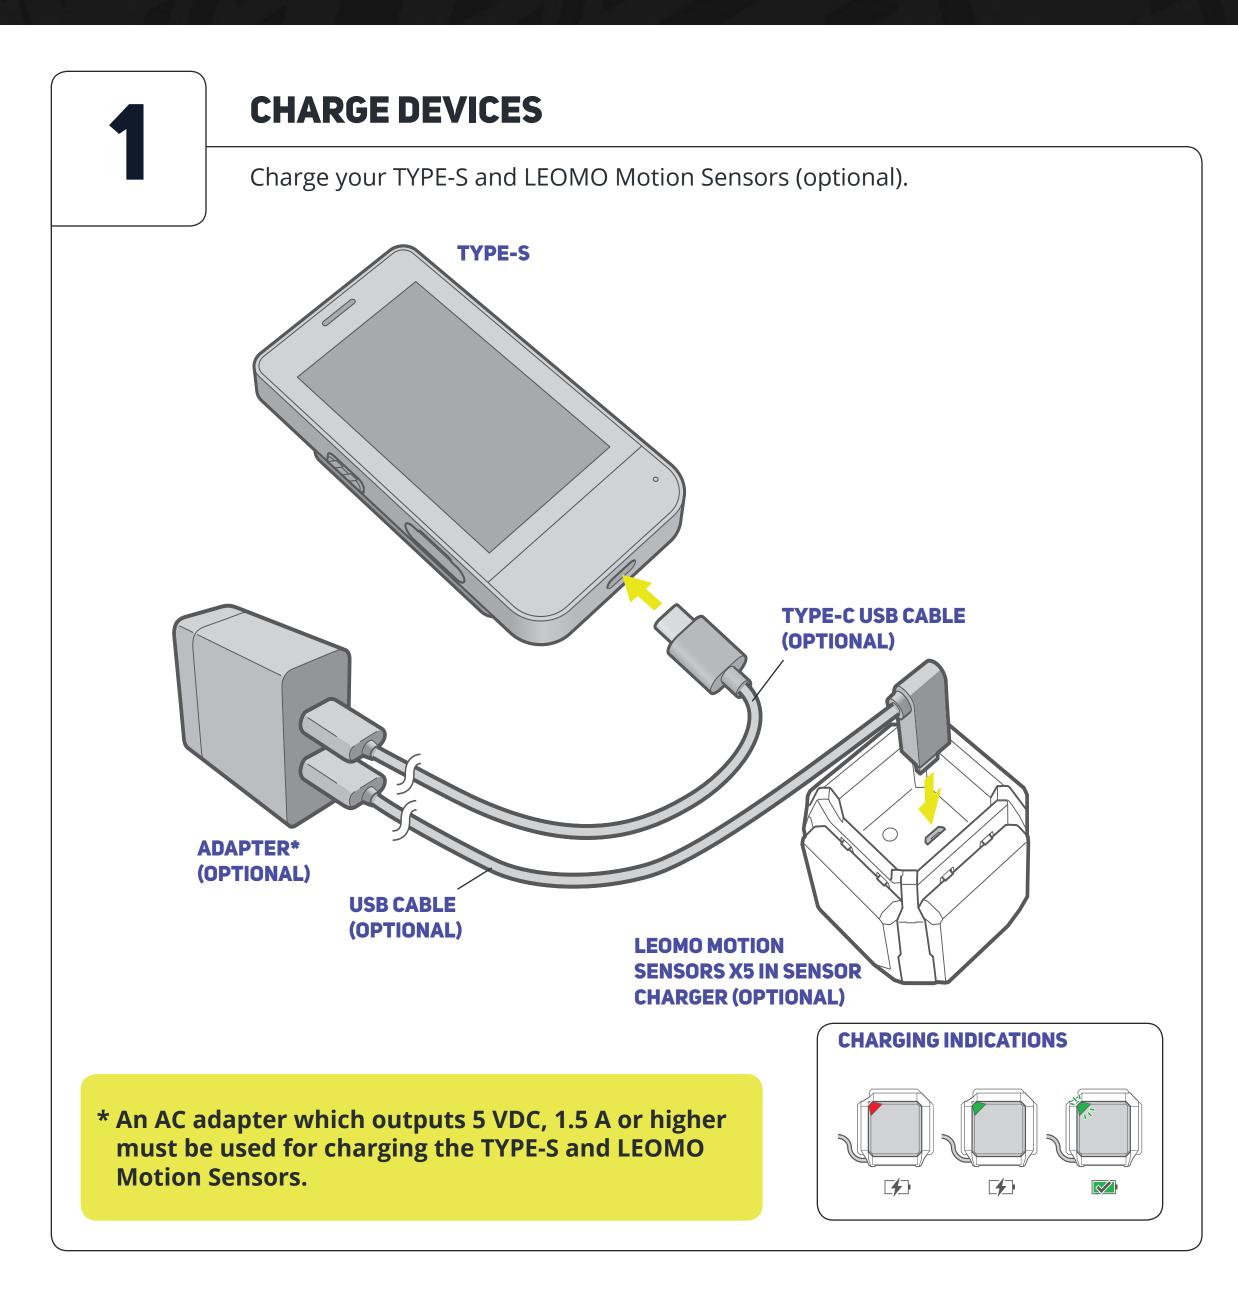

TURN ON THE TYPE-S


Turn on the TYPE-S by holding down the left hardware button on the side of the TYPE-S until the TYPE-S powers on.

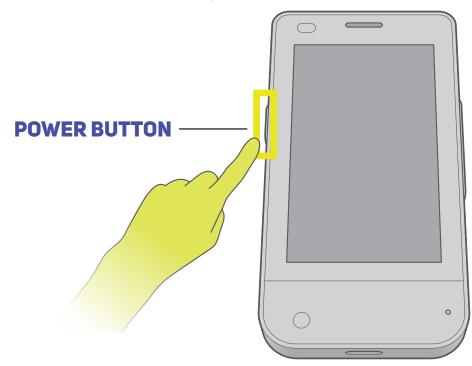

INSERT A SIM

When the TYPE-S is first powered on after purchase, it shows a message asking if you would use a SIM.

To use the TYPE-S as a smartphone, too, outside wi-fi coverage areas, obtain a nano SIM and insert it in the TYPE-S SIM/micro SD card slot.

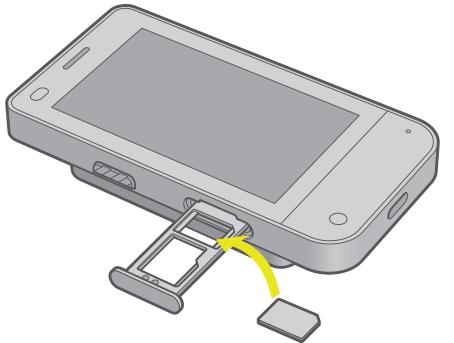

Skip this step if you would not use SIM.

Skip to step 5 if the TYPE-S directly shows its standby screen with a LEOMO icon.



MAKE ANDROID CONFIGURATIONS

Follow the instructions displayed on the screen to make the required Android configurations related to wi-fi connection, Android, and the Google™ account to be used.

The standby screen comes up with a LEOMO icon.

5

TAP THE LEOMO ICON


The LEOMO APP starts.





TURN ON ALL 5 LEOMO MOTION SENSORS

To turn on the LEOMO Motion Sensors, insert them into a plugged-in Sensor Charger, or remove the LEOMO Motion Sensors from the charger after they are charged sufficiently. If the LEOMO Motion Sensors are inserted into an unplugged charger, they will be turned off.

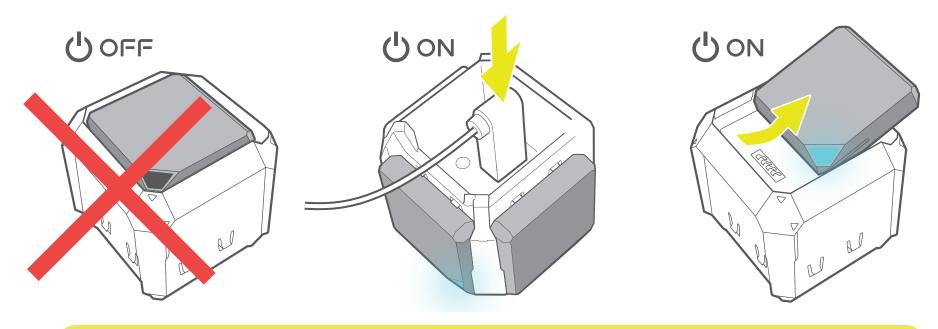

* An AC adapter which outputs 5 V DC, 1.5 A or higher must be used for charging the LEOMO Motion Sensors.