



OWNER'S MANUAL

Wifi Smart

Thank you for choosing our product.
For proper operation, please read and keep this manual carefully.
If you have lost the Owner's Manual, please contact the local agent or visit
www.gree.com or sent email to global@gree.com.cn for electronic version.

Content

Download and install APP	1
Configuration	1
Functions introduction	3
User registration.....	3
Personal setting.....	4
Control functions.....	6
Menu functions.....	15

Operation of Smart Control (Smart Phone, Tablet PC)

Operation Instructions

Download and install APP

Scan the following QR code (also indicated on the package) with your smart phone and download Wifi Smart.



Install the APP according to its guidance. When successfully installed, your smart phone homepage will show this icon




Configuration

Before operation, please finish the following configuration in order to realize Wifi control and the connection between air conditioner and mobile phone.


1. Short-distance control setting for air conditioner using wifi hotspot

Step 1: Air conditioner wifi is set to AP mode in factory. You can search the air conditioner wifi hotspot through your smart phone. The name of wifi hotspot is the last 8 numbers of the air conditioner mac address. Password is 12345678.

Operation of Smart Control (Smart Phone, Tablet PC)

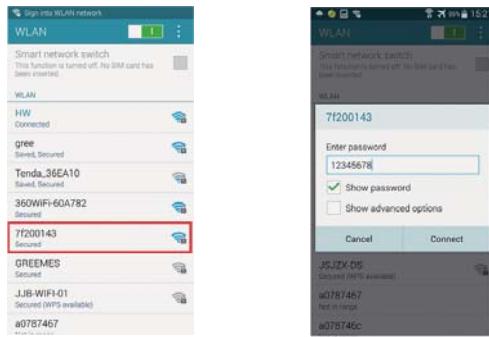

Step 2: Open Gree APP and the screen will show the air conditioner that you just connected. Click this air conditioner to enter and realize short-distance control, as shown below. Please refer to "Functions introduction" for specific control methods.

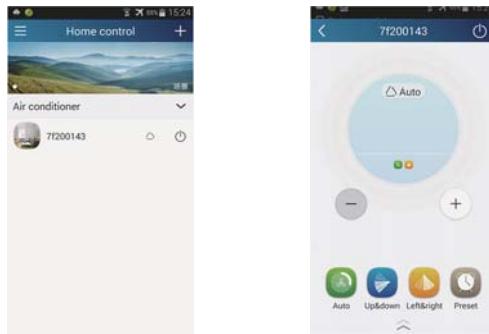

2. Short-distance and long-distance control setting for air conditioner connecting router


Step 1: Under short-distance control, return to the homepage "Home Control". Click



at the top right corner and select "Add device" to enter the page "Configure".

Step 2: Click "Manual configuration". Input router's name, password and encryption type.

Operation of Smart Control (Smart Phone, Tablet PC)

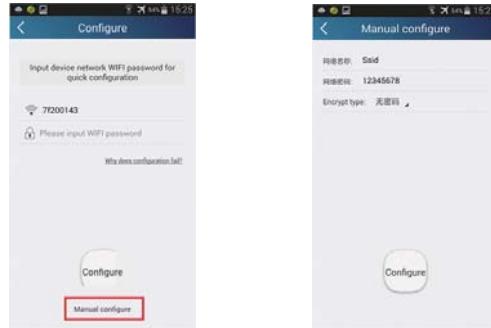

If configuration succeeds, APP will notify user that configuration is successful and displays its homepage. If configuration fails, APP will notify user that configuration fails. In this case, please repeat the above steps until the APP shows that configuration is successful.

Functions introduction


1. User registration

Purpose: To realize long-distance control

Operation instruction: For the first time login, you have to register a new username. If you already have a username, skip the registration step and input email address and password on the "Login Page" to log in. If password is forgotten, you can reset the password.


Operation steps:

(1) Login with username: Slide the "Home control" page and enter the "Menu" page on the left. Click "Login" to enter the page "Login username". New user must first register a username. Click "Register username".

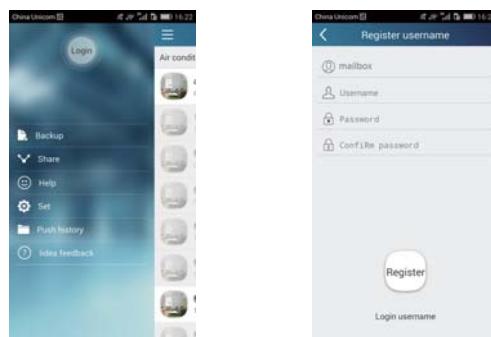


Operation of Smart Control (Smart Phone, Tablet PC)

(2) Input email address and click "Get the verification code". Wait until you receive the verification code. Input the code and click "OK" to log in. Username will appear, as 3 in the picture.

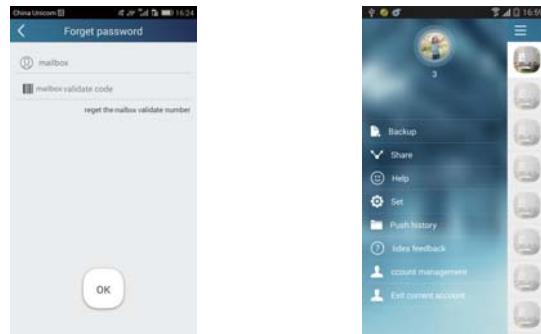

(3) If password is forgotten, you can reset the password with your phone number. Click "Forget password" and enter the page "Forget password". Click "Verification code" to get the email verification code. Input a new password and click "OK" to login.

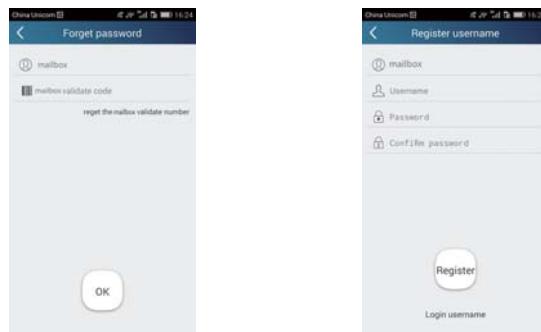

2. Personal setting

Purpose: Set name (device name, preset name, etc.) and image (device image) for the convenience of user identification.


(1) Set device name

After quick configuration, a list of controllable smart devices will be generated.


Operation of Smart Control (Smart Phone, Tablet PC)



Step 1: Click and hold "a3" to enter the page "Edit device". Click "Image" to select the source of image. Select from "Default images" or "Take a picture" or "Picture gallery" and save an image.

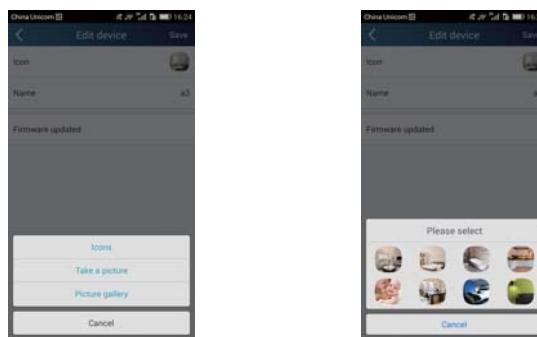

Step 2: Click "Name" to change device name. As shown in the picture, device name is changed to "baby home". Save it and the new device name will be shown.

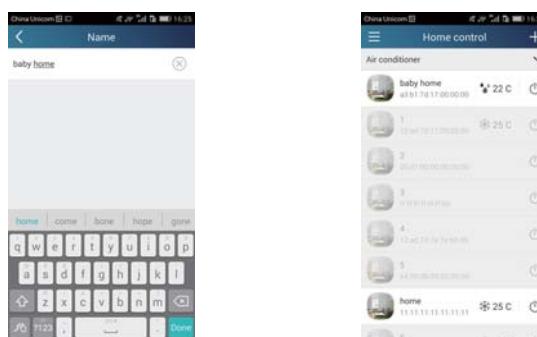


Operation of Smart Control (Smart Phone, Tablet PC)

(2) Set preset name

Step 1: Click **+** at the top right corner of the homepage "Home control". Select "Add preset" and enter the page "Preset edit".



Step 2: Choose the time. Click "Name" to edit it. As shown in the picture, it is edited to "baby room". For timer type, select On. Then select the repeat days. Save the setting of preset name.

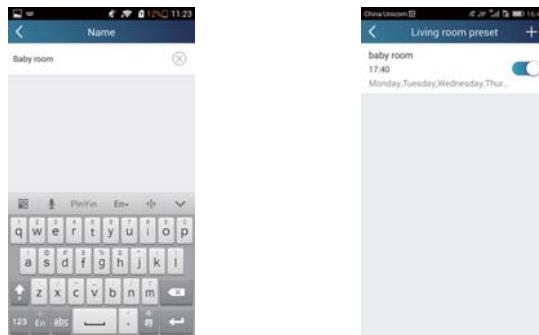

(3) Set device image

Please refer to the steps as instructed in 2(1)

3. Control functions

(1) Common control functions: General control on the operation of smart devices (On/Off, temperature, fan speed, mode, etc.) and the setting of advanced functions (Air exchange, dry, heat, light, sleep, energy saving lower limit).

Step 1: General control Enter the homepage "Home control" first. Take "baby home" as an example.


Operation of Smart Control (Smart Phone, Tablet PC)



Click "Baby home" and enter the air conditioner control page. Click  to turn on the control switch.



Click  or  to increase or decrease temperature. Click  to adjust working mode. Click  to save the mode. Click  to enter the page of fan speed adjustment.

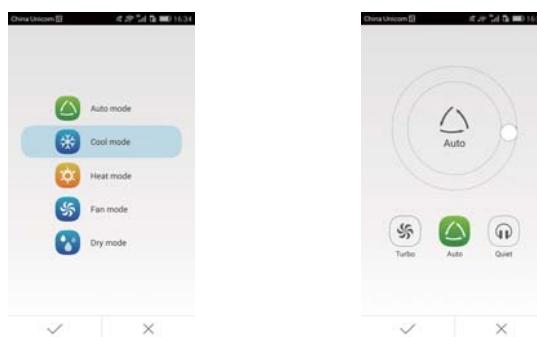


Operation of Smart Control (Smart Phone, Tablet PC)



Click

and go around the circle to select fan speed. Then click to save the selection.

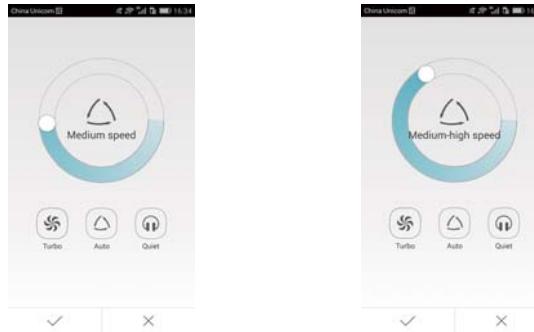

Step 2: Advanced settings Click to enter advanced settings. You may select "Air", "Dry", "Health", "Light", "Sleep" or "Energy saving/upper limit".

(2) Advanced control functions: Set scene; Preset; Link; Infrared control (limited to the smart phone with infrared emitter)

Set scene: Preset the operation of several devices by one click


On the page "Home control", click the image of "Home control" to enter the page "Edit scene".




Click "Add scene" and edit the scene name, for example, "back home". Add execution devices.

Click to add commands. On the page "Select device", select the air conditioner "home". Then select "ON" or "OFF".


Operation of Smart Control (Smart Phone, Tablet PC)

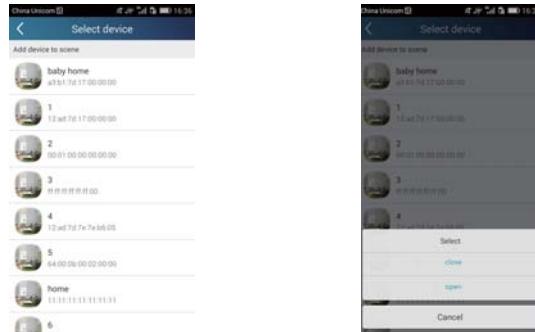

Continue to select the next execution device as instructed above. Click  to set the interval.

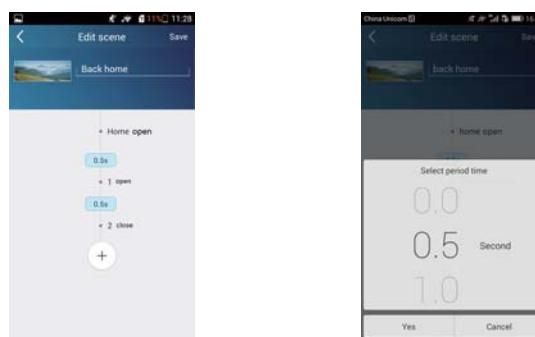

Save it and the scene "back home" will be executed. You may also view the execution condition of the scene.

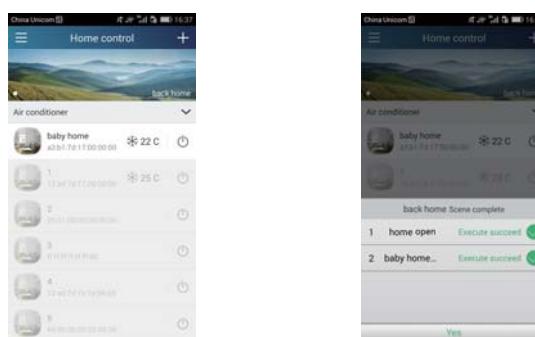


(3) Preset includes single-device preset and multi-device preset

Single-device preset: This can preset a certain device to execute On/Off at a specific time.


Operation of Smart Control (Smart Phone, Tablet PC)

On the homepage "Home control", take air conditioner "baby home" as an example.

Click the bottom icon  on the page "baby room" to enter the page "Preset edit".

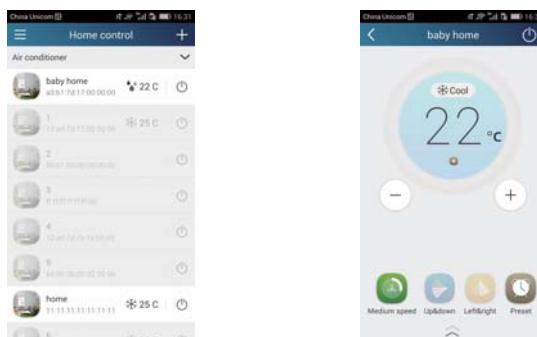


Slide up and down to set the time. If you want to synchronize the time, choose "Synchronize".

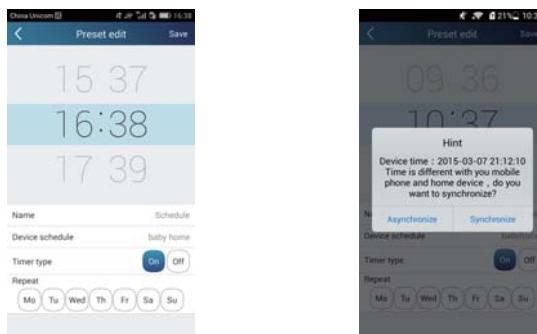

Click "Name" to define the preset name.


Preset device defaults to "baby home". Select "On" as the timer type. Select "Repeat" days to complete the preset.

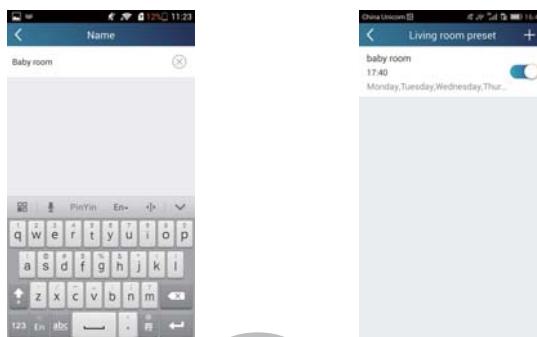

Operation of Smart Control (Smart Phone, Tablet PC)

Multi-device preset: This can preset multiple devices to execute at a specified time. Please refer to the instructions as how to set preset time, name, timer type and repeat days of a single device.

On the page "Select device", select one or more devices to preset multiple devices. Then return to the page "Home control".

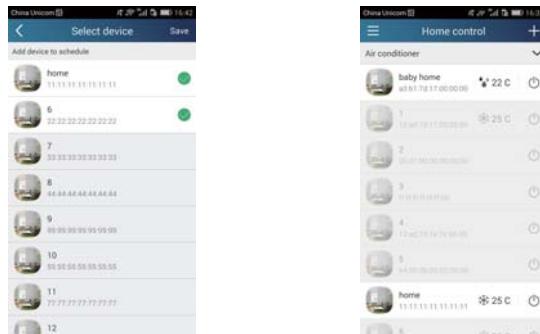


(4) Link (This function is applicable to partial of models)

Select a master device. When the environment has satisfied the parameters as set in the master device, slave devices will execute commands to realize devices linkage.


Step 1: Set the parameters of master device (Select master device, select environment parameters, select master device status).

Click **+** at the top right corner of the homepage "Home control". Select "Link" and enter the page "Add linkage". Select "Device parameter" to enter the page "Select device". Take "baby home" as an example. Select "baby home".

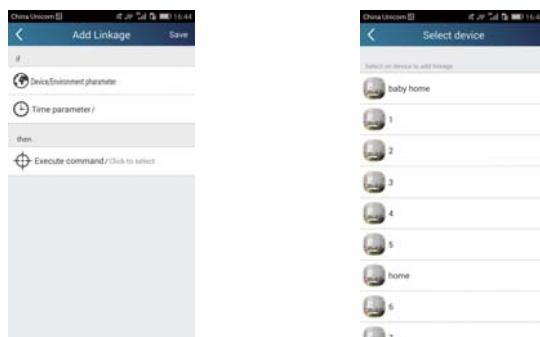


Enter the page "Select environment parameter".


Operation of Smart Control (Smart Phone, Tablet PC)

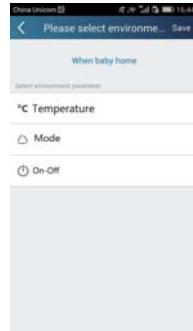

Select "Temperature" to enter the page "Select temp parameter". Slide up and down to adjust temperature. Then select "upper limit" or "lower limit". Click "Mode" and "On-Off" to select the status of master device. Then save the data.

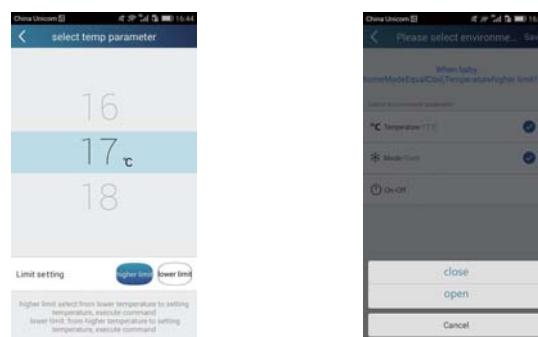


Step 2: Set linkage time parameter. Click "Time parameter" to enter the page "Set time". Slide  right to turn on the setting time.

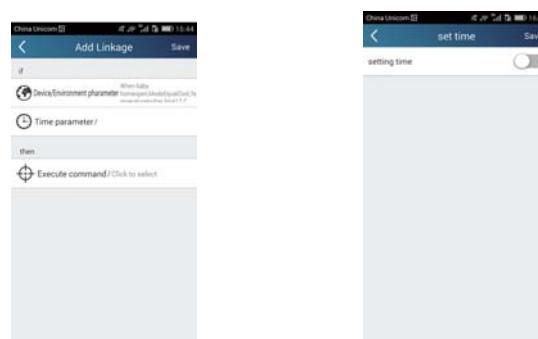

Click "Execution time" to select the start time and stop time. Then click "OK" to save the data.

Operation of Smart Control (Smart Phone, Tablet PC)

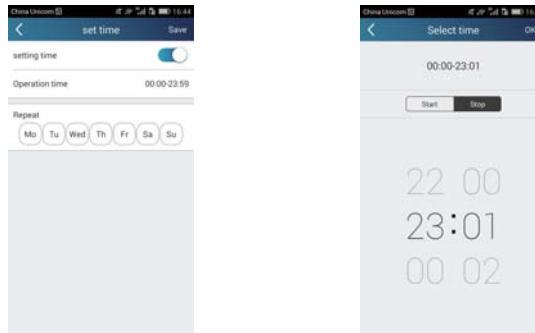

Click the days below "Repeat". Select repeat days and save the data.




Step 3: Select "Execute command"

Select "Execute command" and enter the page "Select device".




Click the name of device that needs to be controlled. Select "ON" or "OFF" and then save the data to complete the linakge.

Operation of Smart Control (Smart Phone, Tablet PC)

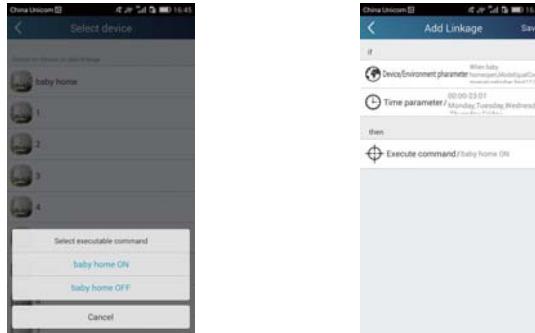

Click "Save". Repeat the above steps to set linkage for several scenes.

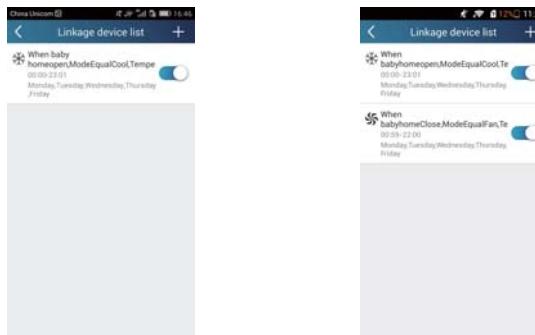

(5) Infrared control (limited to the smart phone with infrared emitter)

Function: Smart phone can be used like a remote controller.

Click **+** at the top right corner of the homepage "Home control". Select "Infrared" and enter the page "Remote controller". Click **↑** and slide up to enter the page of advanced functions.



Operation of Smart Control (Smart Phone, Tablet PC)

Click  to turn on the device. Click  to select mode. Click  to adjust fan speed, etc. Click "Health", "Energy saving", "Sleep", etc. to set advanced functions.

Click "Sleep" to enter the page "Sleep", on which "Traditional sleep", "Expert sleep", "DIY sleep" can be selected. For example, click "DIY sleep". Then click the left and right arrows to select sleep time and up and down arrows to adjust temperature at a specified sleep time.



4. Menu functions


Menu functions (Share, Set, History, Feedback) functions.

(1) Share: To share quick configuration information and unit's information, including local export and local import. For local import, you just need to select "Local import" and wait for the data download.

Local export

Step 1: Export local data to another smart phone.

Enter "Menu" on the left side and click "Share" to enter the page "Share". Select "Local export".

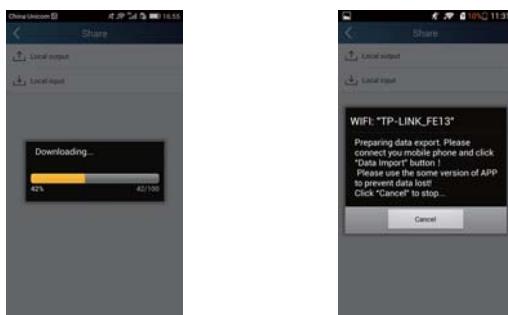

Operation of Smart Control (Smart Phone, Tablet PC)

Step 2: Export to another smart phone.


Select the model name and wait for the download.




(2) Backup: To keep backup of the quick configuration information and unit's information, including backup to cloud and backup list on the cloud.

Backup to cloud

Enter "Menu" on the left side and click "Backup".

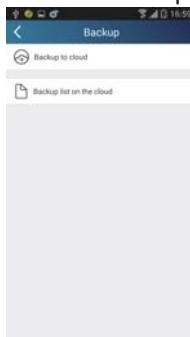


Select "Backup to cloud" and then "Yes". Wait for the data compressing.

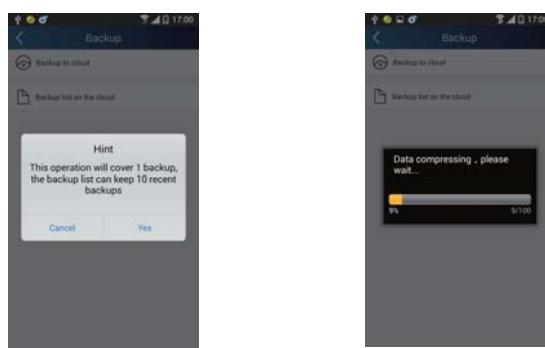


Operation of Smart Control (Smart Phone, Tablet PC)

Select "Backup list on the cloud". Then backup records will appear. Click "Record" to download data and recover data to local unit.

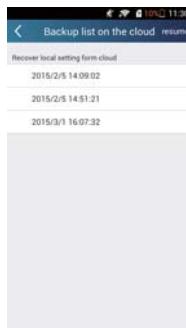

(3) Set


User can set click vibration, message alerts, gesture password (usable only after registration), etc.

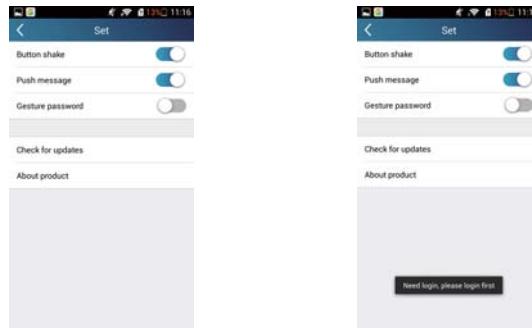

(4) Feedback

User may feedback suggestions to back-stage management for maintenance and development.

Click "Feedback". Input your suggestions and submit it.

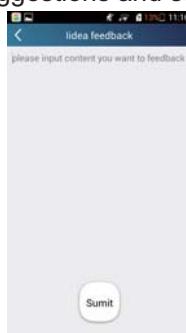

GREE ELECTRIC APPLIANCES, INC. OF ZHUHAI
Add: West Jinji Rd, Qianshan, Zhuhai, Guangdong, China, 519070
Tel: (+86-756) 8522218 Fax: (+86-756) 8669426
E-mail: gree@gree.com.cn www.gree.com



66160000322