 


ENGLISH

Thank you for choosing our product.
Please read this manual and safety instruction before usage.
Please keep the manual for future reference.

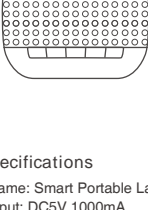

 
- A perfect combination of Bluetooth speaker and mood light
- Playing music from Bluetooth enabled devices, like smart phones, tablet and computer.
- Slightly shaking or tapping the lamp to adjust brightness or turn it on/off
- App control all functions, play music, resume and shutdown the speaker automatically, change the light color.
- Build- in Li-polymer battery.

Specifications

- Name: Smart Portable Lamp Speaker
 - Input: DCSV 1000mA
 - Speaker power: 3W
 - Frequency range: 70HZ ~ 18KHZ
 - SNR: >70dB
 - Speaker size: 1.5"
 - Product size: Φ75x86mm
 - Weight: 213g
 - Battery information: After fully charged, it can work up to 8 hours to play music; Work up to 6 hours when playing music and lighting at the same time (Music is played at 70% of its highest volume); Work up to 8 hours when using lighting with maximum intensity and 16 hours with dim light.
 - The label is located on bottom of unit.
- Item No: H0019
 - LED power: 0.6W
 - Distortion: <0.5%
 - Battery: 3.7V/1300mAh
 - Bluetooth version: 4.0
 - Material: ABS +PC
 - Charging Time: 2-3 hours

Components and Accessories

- Lamp speaker x1
- USB cable x1

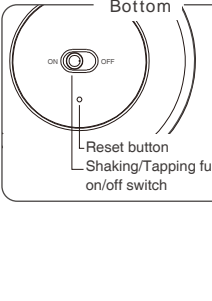


Illustration


Speaker power button

- ▶ Play/Pause/Hand-free/Stop alarm
- Short press: lower volume/ Longer press: previous song
- + Short press: raise volume/Longer press: next song
- ☀ Lighting button/ Brightness adjusting/ Color-changing button

Bottom



Back



Charging

- Please make sure that the smart lamp speaker is fully charged before first use.
- Connect the USB cable with the product and power supply for charging (choice of power from USB or connect with AC adapter to power from AC supply).
- The indicator will flash with white when charging. The first indicator lighting means the battery is charged to 0-25% of its full capacity. The second indicator lighting, 25%-50% battery capacity is charged. The third indicator lighting, 50%-75% battery capacity is charged. The fourth indicator lighting, battery is fully charged.
- When in use (no charging), the first indicator lighting means 0-25% of the battery capacity remains. The second indicator lighting, 25%-50% of battery capacity remains. The third indicator lighting, 50%-75% of battery capacity remains. The fourth indicator lighting, the battery is full.

Play music

- Play music from Bluetooth enabled devices, like smart phones, computer and etc.
- Press and hold the power button for 2 seconds to turn on the unit and enter Bluetooth mode, indicator flashing with white light.
- Search "emoi Portable Lamp Speaker" on your devices' Bluetooth list, and select it to pair with the speaker. When paired successfully, there is a sound prompt and the mode indicator will stay white.
- After paired, please select and play songs from the Bluetooth enabled device, any songs of your choice.

 


Hands free calling

- Short press the hands free button to answer the call.
- Long press the hands free button to reject the call, a beep will prompt.
- If you want to end the talk during the call, short press the hands free button, a beep will prompt.

Normal light

- Press the lighting button for 1.5 seconds or shake the lamp for the first time to get soft light with low intensity.
- Short press the lighting button or shake the lamp for the second time to increase the light intensity.
- Short press the lighting button or shake the lamp for the third time to turn off light.

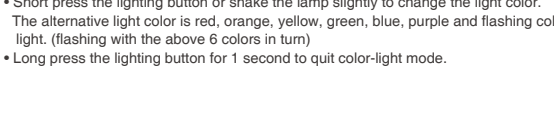

Color light

- When the lamp is turned off, long press the lighting button for 3 seconds to enter color -light mode, the light will be red. Or you can press the button for 1.5 seconds to enter color/light mode when the white light is on.
- Short press the lighting button or shake the lamp slightly to change the light color. The alternative light color is red, orange, yellow, green, blue, purple and flashing color light. (flashing with the above 6 colors in turn)
- Long press the lighting button for 1 second to quit color-light mode.

Notes

- You can control the speaker either by tapping its surface downward with a 45 degree or shaking it slightly.
- Note that the shaking/tapping time interval is more than 0.5 seconds.
- On/off switch for this shaking/tapping function is at the bottom.
- The sensitivity of shaking/tapping function is determined by shaking/tapping speed, force and direction. Please hold the speaker firmly and shake or tap slightly. Do not shake it forcefully. If you have difficulty in controlling light with this function, please switch off this function and use lighting button to turn on/off the light.
- Do not hold the speaker for a long time after shaking or tapping it, which may affect the speaker cooling itself.

Restart

- If crash or other abnormal occurs, please restart the product. When the lamp speaker is on, put the paperclip and the aike into the bottom hole inside which the reset button is, so you can reset the product to factory settings.

APP

- Android user can download and install the app from emoi official website (<http://www.emoi.com/support/>) in order to enjoy a better user experience. You can also search "emoi smart" APP in Google Play Store to download.

Apple smart phone user can download emoi smart APP from iTunes store.



Safety Instruction

Safety Information

- Please read and follow these instructions, beware all warnings, and keep this document for future reference.
- Set up your product in accordance with product manual, and place your product in a stable location so it will not fall and cause product damage or bodily harm.
- Do not use your product near water, including dripping or splashing sources (e.g. indoor fountain), or near object filled with liquids, such as flower vase or fish tanks.
- Do not use your product near heat sources (e.g. radiators, heat registers, stoves, open flame, such as lighted candles, or other heat-producing devices, such as audio amplifiers or TVs).
- Do not hold the speaker for a long time after shaking or tapping it, which may affect the speaker cooling itself.
- Refer all servicing and repair to qualified service personnel. Servicing is required when your product dose not operates normally, the power cord/plug has been damaged, the product has been exposed to water, rain, liquid or moisture, the product has been dropped, or an object has been inserted into a product port or vent.
- Please use the product in specified voltage, or it may cause electric shock, damage or fire.
- Place the product in a proper place to avoid injury to children.
- Please do not disassemble and make any modifications to the product, this may lead to electric shock, fire or electric leakage.
- The sensitivity of shaking/tapping function is determined by shaking/tapping speed, force and direction. Please hold the speaker firmly and shake or tap slightly. Do not shake it forcefully. If you have difficulty in controlling light with this function, please switch off this function and use lighting button to turn on/off the light.
- Use the product in an environment within the temperature of 0℃ ~ 40℃.
- This is not toy, children under 8 are forbidden to use.

Cleaning

- Do not clean when the product is charging, clean with soft and dry cloth.
- Do not use solvents, chemicals or sprays.
- Do not allow liquids to spill or objects to drop into any openings.

Power Supply Warning

Caution electric shock/fire hazard! The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Battery information and disposal guidelines at product end of life

If the product use a non-servicable, rechargeable battery, which should last the duration of a product's warranty period under normal use. Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions in the documentation that accompanies your product. Also consult local laws and regulations for the proper disposal of batteries and electronic devices in your region. If there are no local regulations concerning electronic waste disposal, place your product (and its battery) in a waste bin for electronic devices.

Caution: There is a risk of explosion, fire or chemical burns if battery is replaced by an incorrect type, mutilated, or exposed to conducting materials, liquid, fire or heat (54 C or 130°F). Do not use or recharge a damaged rechargeable battery. Do no use or charge a battery if it appears to be leaking, discolored, deformed or in any way abnormal. Do not leave a battery discharged or unused for extended periods of time.

Do not mix battery types. When a battery is misused, it may explode or leak, causing burns and personal injury. If a battery leaks, use normal precaution and discard it immediately following the local laws and regulations in your area. Keep all batteries out of the reachof children.

China 3C Caution

- There will be a risk of explosion if the battery is changed improperly.
- Change the battery with the same type or same capacity.
- Battery or battery unit should not be exposed to sunshine, open fire or store in other over heated places.

FCC Statement

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Canada Statement

This device complies with Industry Canada RSS-210. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Information to Consumers in Application of EU WEEE Directive 96/2002

This product is subject to European Union regulations that promote the re-use and recycling of used electrical and electronic equipment. This product required the extraction and use of natural resources and may contain hazardous substances. The symbol above, on the product or on its packaging, indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop of your waste equipment for recycling, please contact your local city office, your household waste disposal service, or the store from which you purchased the product.

