


# 88 TAURI

## Quick Guide

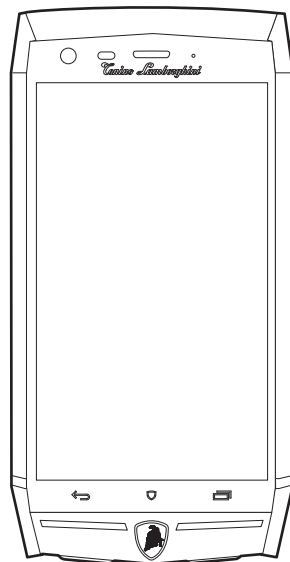

For further information, please refer to the User Guide.


Congratulations on purchasing your *Tonino Lamborghini* smartphone, with 88 TAURI you have just taken your first step into a new dimension where technology and luxury co-exist. Welcome to our World.

- Descriptions in this Guide may differ from your 88 TAURI smartphone or from the software provided by carriers and service providers, and are subject to change without prior notice.
- The accessories supplied have been designed solely for use with your 88 TAURI smartphone and may not be compatible with other devices.
- Third party accessories may not be compatible with your 88 TAURI smartphone. Malfunctions caused by the use of unapproved third party accessories are not covered by Warranty.

## ABOUT THE QUICK GUIDE

The Quick Guide gives you some important safety information, and details of the limited warranty for your phone. It also contains a brief introduction to using your phone. A more detailed User Guide is available on the website at [www.lamborghini-mobile.com](http://www.lamborghini-mobile.com)

 **Warning** - *Might cause personal injury.*

 **Caution** - *Might damage your phone or other equipment.*

 **Note** - *Hints, tips or other information.*

**[Buttons]** - *Identifies physical buttons on the phone. For example, **[Power]** button.*


**Keys** - *Identifies soft keys on the phone. For example, **Menu** key.*

## COPY RIGHTS AND TRADE MARKS

- The following are the trademarks of Google Inc.: Android logo, Google™ search, Google Maps™, Google Mail™, YouTube™, Google Play™ store and Google Talk™
- Java is the trademark of Oracle and (or) its branches. Other trademarks might have their respective owners.
- For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, DTS-HD, the Symbol, & DTS or DTS-HD and the Symbol together are registered trademarks, and DTS-HD Premium Sound is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.
- All other trademarks and copyrights belong to their respective owners.

## 88 TAURI OVERVIEW


### Front and Top Views

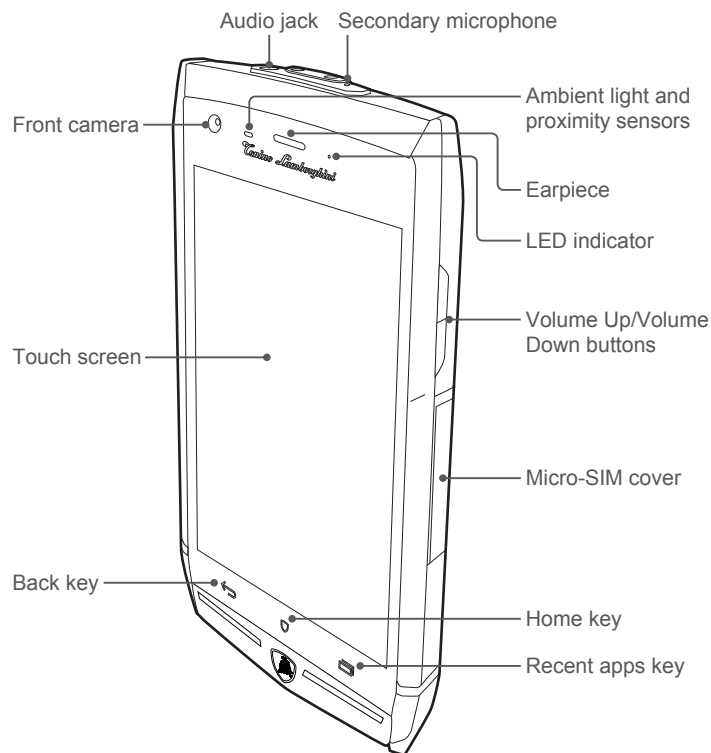

For details on using the buttons and keys, see page 5.

For details about the LED indicator, see page 6.


### Rear and Bottom Views

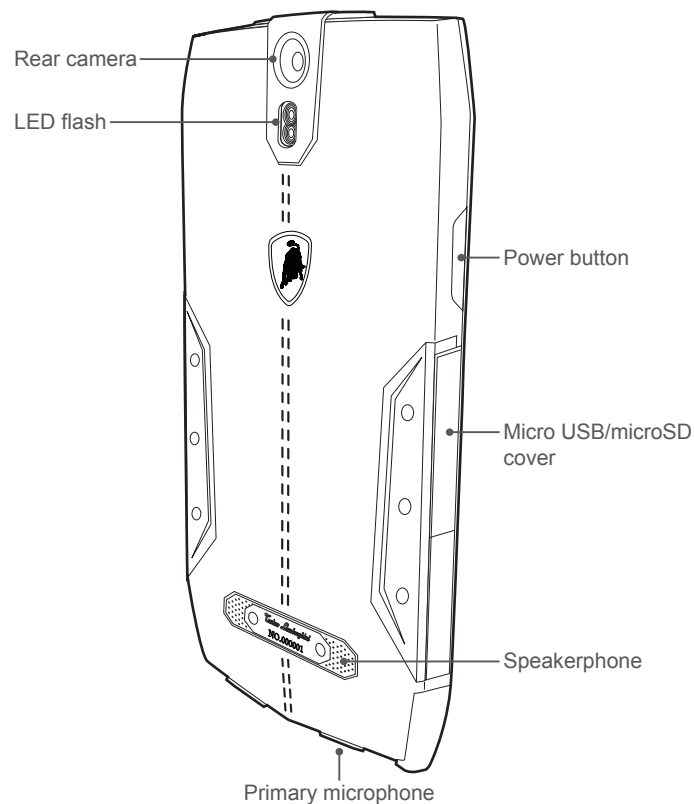


## PREPARING YOUR PHONE FOR FIRST USE


### Inserting Micro-SIM Cards

1. Open the micro-SIM cover.

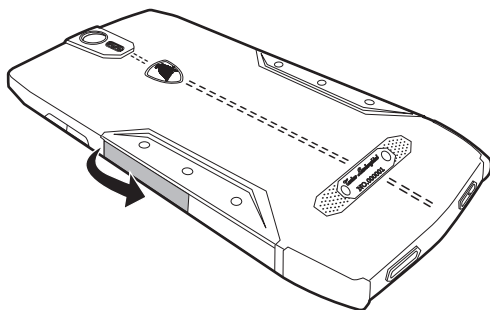


2. With the metal contacts facing down, align the micro-SIM cards with the marks next to the card slots, and fully insert the micro-SIM cards into the card slots, until the micro-SIM cards are locked in place.

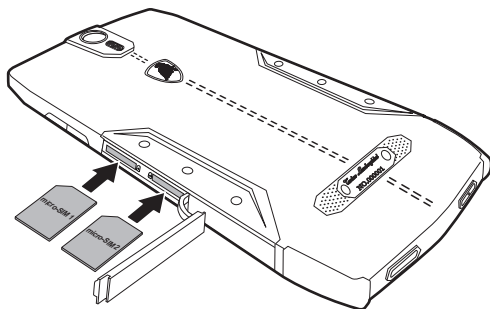


 *To remove a micro-SIM card: Push the micro-SIM card in to release it from the card slot, and then pull out the micro-SIM card.*

### Inserting a MicroSD Card

1. Open the micro USB/microSD cover.

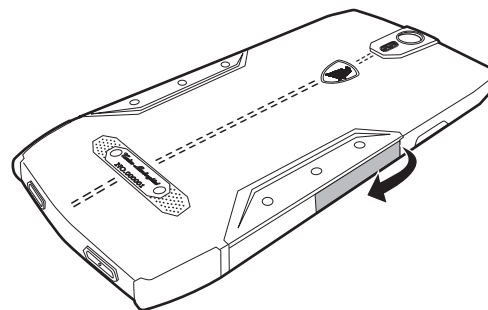


2. With the metal contacts facing down, align the microSD card with the mark above the card slot, and fully insert the microSD card into the card slot.

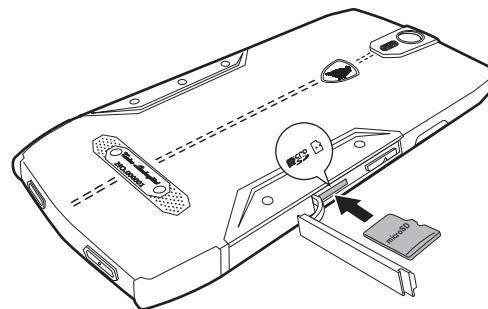

### Charging Your Phone

Please charge your phone prior to first use. Your phone is provided with adaptors that fit EU, UK and US power sockets to enable you to charge your phone in many locations worldwide.

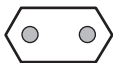

EU



UK



US

Before charging your phone, identify the required power socket type.

- For US type, unfold the pins on the charger until they are securely fixed in open position.
- For EU and UK type, connect the appropriate adaptor to the charger body by sliding the socket adaptor into the charger body until the retaining catch clicks into place.

To remove the socket adaptor from the charger body, slide it aside.

**⚠** Only use a charger that has been approved for use with your phone. Using unapproved charging equipment may damage your phone and invalidate your warranty.


**⚠** Never charge your phone when the phone or the micro USB port is damp or wet.

**📖** The charger provided is for indoor use only, and should only be operated at temperatures between -20°C and 40°C.


**📖** If your phone has not been used for a significant period of time, it may need to be charged for several minutes before the phone can be powered on.

**White or Black adapter will be shipped with product.**

1. Open the micro USB/microSD cover.

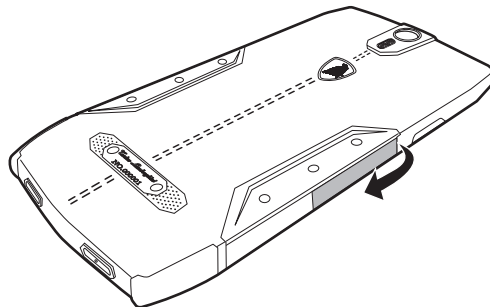

2. Insert one end of the supplied USB cable into the micro USB port on your phone, as illustrated below.

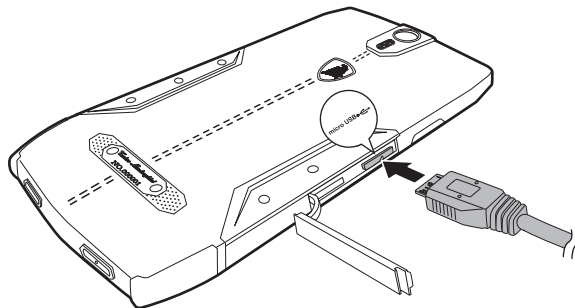

3. Insert the other end of the USB cable into the charger body and plug the charger into an appropriate power source, or connect this end of the USB cable into a USB port on a computer.

**📖** When using a computer to charge your phone, ensure that the computer is turned on and active rather than in sleep or standby mode, to avoid discharging the phone's battery rather than charging it.

4. When the phone is fully charged, disconnect the phone from the charger and disconnect the charger from the power source.

**i** When charging your phone using the USB cable, ensure that you use a USB interface of version 2.0 or higher. Connection to “power USB” is prohibited.

**⚠** Your phone’s battery is non-removable. Don’t attempt to remove the battery.

## Switching Your Phone On and Off

Switch your phone on and off using the **[Power]** button on the left side of the phone.

### To switch your phone on

Press and hold the **[Power]** button until the logo appears. The Tonino Lamborghini and 88 TAURI logos will be displayed during startup.










**i** Always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. Remember to follow any special regulations in force in any area.

**⚠** To disable the wireless features, press and hold the **[Power]** button, and then select **Airplane mode**.

### To switch your phone off

1. Press and hold the **[Power]** button. An Options menu appears.
2. Touch **Power off**.
3. Touch **OK** to switch off your phone.


## Using the Buttons/Keys

Button/Key	Description
Power 	<ul style="list-style-type: none"> <li>• To power your phone on, press and hold until the logo appears.</li> <li>• Briefly press to turn the screen on/off.</li> <li>• Press and hold to open the Options menu, in which you can <b>Power off</b> your phone, turn <b>Airplane mode</b> on/off, or switch to vibrate or silent mode.</li> </ul>
Recent apps 	<ul style="list-style-type: none"> <li>• Touch to open the list of recent apps.</li> <li>• Touch and hold to open available menus.</li> </ul>
Home 	<ul style="list-style-type: none"> <li>• Touch to go to the previous Home screen or the central Home screen.</li> <li>• Touch and hold to open <b>Google Now</b>.</li> </ul>
Back 	Touch to return to the previous screen, or close the on-screen keyboard.
Volume Up/Volume Down 	<ul style="list-style-type: none"> <li>• Press to increase/decrease the volume.</li> <li>• Press the <b>[Volume Down]</b> button repeatedly to switch to vibrate or silent mode.</li> </ul>
Power  + Volume Down 	Press and hold simultaneously to capture a screenshot.
Power  + Volume Up 	Press and hold simultaneously to force the phone to reboot, when it hangs or does not respond.


LED Indicator

Your phone's LED indicator shows battery status and notifies events:



Item	Description	Color
Battery status	The battery is running low.	Blinking red
	The battery is charging.	Solid red
	The battery charge reaches over 95%.	Solid blue
Events	Missed call notifications.	Blinking purple
	Unread message notifications.	Blinking yellow
	Default notifications.	Blinking blue



 When the battery is fully charged, the battery icon on the screen shows 100%.


MAKING AND RECEIVING CALLS

 It is not recommended, and may be illegal, to use your phone while driving. If you need to make or answer a call, or use any of the phone's other features, pull off the road and stop your vehicle in a safe place before using your phone.

Making a Call

1. From the Home or **APPS** screen, touch the **Phone** app icon .
2. Touch the dialpad icon  to switch to dialing screen.
3. Use the dialpad on the screen to enter the number you want to call. The number is shown at the top of the dialpad.



If you enter a number incorrectly, touch  to delete a single digit, or touch and hold  to delete the whole number.


4. Touch  to place the call.

 For details about configuring your **Multi SIM Settings** and using other ways to make a call, see the User Guide.

Answering Calls


When an incoming call is received, you may hear a ringing tone and the phone may vibrate (depending on your settings).

To answer the call, drag the central phone icon  to the Green phone icon  on the right.

 For details about handling multiple calls and changing your call waiting settings, see the User Guide.


Rejecting Calls

If you do not wish to take an incoming call, you can reject it. Depending on your settings the call may be diverted to your voicemail, or to another number. For details, see the User Guide.

To reject an incoming call, drag the central phone icon  to the Red phone icon  on the left.

Hands Free Calling


When you make or receive a call, you can use the speakerphone feature to use your phone hands free.


When dialing or when in a call, touch the Speaker icon  at the bottom of the touchscreen.

The call now uses the speaker on your phone.

## MESSAGING

You can use the **Messaging** app to exchange text and multimedia messages with other messaging service users.

 *Messaging and multimedia messaging are network services. For details on enabling these services, contact your service provider.*



 *Use of data services such as messaging, uploading and downloading, auto-syncing, or using location services may incur additional costs. To avoid unexpected charges, select an appropriate data tariff plan. For details, contact your service provider.*


This section describes how to perform some of the basic tasks when working with messages. For details about composing multimedia messages and configuring message settings, see the User Guide.

### Composing Messages

You can use your phone to send text messages, or multimedia messages that contain text, pictures, recordings, audio files, videos or slideshows.

#### To compose a new text message



1. From the Home or **APPS** screen, touch the **Messaging** app icon .
2. Select the **New message** icon  at the bottom left of the screen.
3. In the **To** field, enter the name of a contact from your Contacts list, or a phone number. As you enter the name or number, matching contacts appear.

 *If you enter an email address, the phone automatically converts the message to a multimedia message. For details, see the User Guide.*

4. Continue to enter the name or number, or touch the name of the contact you want to send the message to.
5. Touch the **Type message** field to open the on-screen keyboard and enter your message.

6. Touch the Send icon  to send the message.

#### To continue a message thread

1. From the Home or **APPS** screen, touch the **Messaging** app icon .
2. Touch the thread you wish to continue.  
The thread window opens showing the messages that have been exchanged.
3. Touch the **Type message** field to open the on-screen keyboard and enter your message.
4. Touch the Send icon  to send the message.


For details about how to send Multimedia messages from a Text thread, see the User Guide.

### Receiving Messages


When you receive a new message, a notification icon appears in the status bar.

#### To read a new message



1. When the status bar shows notifications, swipe down from the status bar at the top to open the notification drawer
2. Touch the message notification.  
The message thread opens.

 *If you have already exchanged messages with the same person, previous messages are included in the thread.*

#### To respond to a message

Touch the **Type message** field to open the on-screen keyboard. Enter the text of your reply and touch the Send icon .

## Quick Guide

 To see other options, touch and hold the **Recent apps** soft key  at the bottom right of the screen.

## Deleting Messages

You can delete a single message, delete an entire thread or delete all message threads.

### To delete a single message

1. When the thread is open, touch and hold the message you want to delete. The **Message options** menu appears.
2. Touch **Delete**. A confirmation dialog appears.
3. To confirm deletion, touch **Delete**, or touch **Cancel** to keep the message.

### To delete an entire thread

1. In the **Messaging** app's home page, touch and hold the thread you want to delete.
2. A message appears at the top of the screen confirming the number of threads selected.
3. Touch the Trash icon at the bottom of the screen. The **Delete** confirmation dialog appears.
4. To confirm deletion, touch **Delete**, or touch **Cancel** to keep the thread.

## WORKING WITH APPS

Your phone is supplied with a number of pre-installed features and apps. You can access the features and apps from the Home screen.

For details about the apps loaded onto your phone, see the User Guide.

## SAFETY INFORMATION

When using your phone and accessories, the safety precautions below must be taken to avoid possible legal liabilities and damages. Retain and follow all safety and operating instructions, and observe all warnings in the User Guide.

To reduce the risk of bodily injury, electric shock, fire and damage to the equipment, observe the following precautions.

This device has a non-removable Lithium ion (Li-ion) battery and is supplied with a micro USB to USB cable, which can be used with the charger provided and connected to an appropriate power source, or to the USB port in a computer or similar device using USB version 2.0 or higher.

**⚠** *Ensure that you adhere to the following safety points. Failure to do so may result in permanent damage to the battery, phone or charger, and may cause injury or damage to people and property. For additional Safety Information please see the User Guide.*

- Only use an approved charging device. Using an unapproved charging device may cause damage to the battery, phone or charger, may cause injury to people or property and carries a risk of explosion.
- The charger supplied is for indoor use only.
- To reduce the risk of fire or burns do not attempt to open, disassemble or service the battery.
- Do not expose the phone, battery or charger to temperatures above 50°C (122°F).
- Connecting your phone to equipment, such as a laptop or desktop computer that is inadequately grounded can result in an electric shock.
- When connecting your phone to an electrical device, always ensure that the device is adequately grounded to earth before connecting your phone. See the device's user guide for details.
- Keep the device dry and away from water or any liquid as it may cause a short circuit.
- Keep the accessories out of reach of babies and small children.

## Operating Environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Use only the supplied or approved parts. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

## Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your phone.

## Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm (6 inches) be maintained between a hand-held wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

If you have been fitted with a pacemaker:

- Always keep the phone more than 15 cm (6 inches) from your pacemaker when the phone is switched on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

## Other Medical Devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so.

## Hearing Aids

Some wireless phones may interfere with some hearing aids. In the event of such interference, consult your service provider.

## Potentially Explosive Atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

You are advised to switch off the phone when at a refuelling point or service station. Observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include (but are not limited to) below deck on boats; chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

## Aircraft

Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network and may be illegal. In the United States, FCC regulations currently prohibit using a telephone connected to a wireless network while in the air.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, or legal action, or both.

## Quick Guide

### Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, air bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle. Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area.

### Traffic Safety

In some countries it is prohibited to use a handheld device such as a mobile phone while driving, even with a hands-free accessory. Always ensure that you adhere to the relevant legislation.

Do not use a hand-held phone while driving a vehicle. If using a hand-held phone, park the vehicle safely before using the phone in any way.

Do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

### Protect from Direct Sunlight

Do not leave your phone in places where the temperature may exceed 50°C (122°F), such as in a vehicle, on a window sill or behind glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time, as this may cause damage to the product, overheat the battery or pose a risk to the vehicle.

### Disposal



**(Discarded electronic and electric devices) (Applicable to EU or other European countries who has independent recycle system)**

This sign seen on the product, its accessories or the technical data indicates that this product and its accessories (like the charger, headset, USB cable) shall not be disposed together with the other domestic wastes after they service time is over.

To avoid harm to the environment or to people's health inflicted by the improper control of wastes, please dispose these items separately from other wastes, and recycle them under responsibility, so as to maintain sustainable use of materials and resources.

Residential users shall contact the distributor of this product or the local authority to obtain the detailed information on how to dispose and recycle these items so as to protect the environment.

Commercial users shall contact the supplier and refer to the provisions in the contract. Do not mix this product with other commercial wastes for disposal.

#### European Union notice

Products with CE marking comply with the R&TTE Directive (99/5/EC), the EMC Directive (2004/108/EC), and the Low Voltage Directive (2006/95/EC) issued by the Commission of the European Community.

#### SAR information

Head: 0.807 W/kg@10g

Body: 0.326 W/kg@10g

#### Body-worn Operation

This device was tested for typical body-worn operations. A minimum separation distance must be maintained between the user's body and the handset, including the antenna:

1.5 cm to comply with the RF exposure requirements in Europe

#### Notice:

Any changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



**Label Notice:**

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

**SAR Body-worn Operation**

This device was tested for typical body-worn operations. A minimum separation distance must be maintained between the user's body and the handset, including the antenna: 1 cm to comply with the RF exposure requirements in the U.S.

**SAR information**

0.696 W/kg@1g (head), 0.900 W/kg@1g (body)