

136mm x 89mm

CRAFTSMAN®

INSTRUCTION MANUAL | GUIDE D'UTILISATION | MANUAL DE INSTRUCCIONES

20V Max* Bluetooth® Mini Speaker**

Minialtavo con Bluetooth^{MD} ** de 20 V máx.*

Mini haut-parleur Bluetooth® 20 V Max***

CMXCREF1900003



IF YOU HAVE QUESTIONS OR COMMENTS, CONTACT US.
POUR TOUTE QUESTION OU TOUT COMMENTAIRE, NOUS CONTACTER.
SI TIENE DUDAS O COMENTARIOS, CONTACTENOS.

1-888-331-4569

WWW.CRAFTSMAN.COM

Definitions: Safety Alert Symbols and Words

This instruction manual uses the following safety alert symbols and words to alert you to hazardous situations and your risk of personal injury or property damage.



DANGER: Indicates an imminently hazardous situation which, if not avoided, **will** result in **death or serious injury**.



WARNING: Indicates a potentially hazardous situation which, if not avoided, **could** result in **death or serious injury**.



CAUTION: Indicates a potentially hazardous situation which, if not avoided, **may** result in **minor or moderate injury**.



(Used without word) Indicates a safety related message.

NOTICE: Indicates a practice **not related to personal injury** which, if not avoided, **may** result in **property damage**.



WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.



WARNING: Never modify the product or any part of it. Damage or personal injury could result.



WARNING: To reduce the risk of injury, read the instruction manual.

COMPONENTS

- (1) Power Button
- (2) Volume Controls
- (3) Play Button
- (4) LINK Button
- (5) LINK Status Indicator
- (6) Bluetooth® Status Indicator
- (7) Carabiner
- (8) Strap
- (9) 3 Loops

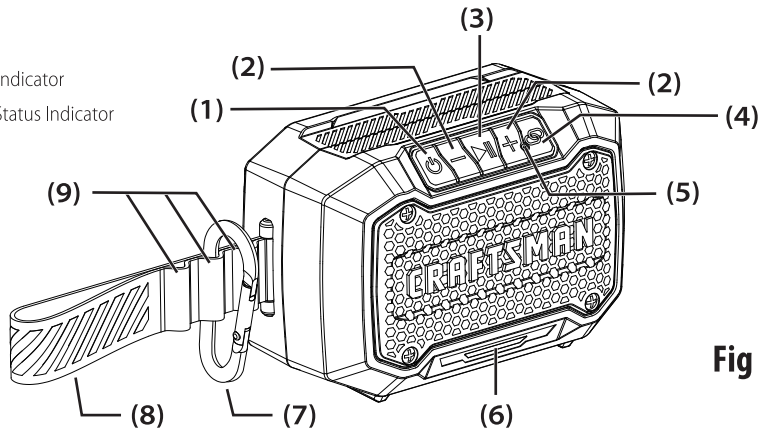 


Fig A

IMPORTANT SAFETY INSTRUCTIONS



WARNING

- a. *Read these instructions.*
- b. *Keep these instructions.*
- c. *Heed all warnings.*
- d. *Follow all instructions.*
- e. *Do not use this speaker near water.*
- f. *Clean only with a dry cloth.*
- g. *Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.*
- h. *Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.*
- i. *Refer all servicing to qualified service personnel. Servicing is required when the speaker has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the speaker, the speaker has been exposed to rain or moisture, does not operate normally, or has been dropped.*
- j. *Speaker shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the speaker.*
- k. *Do not use under wet conditions or in presence of flammable liquids or gases.*
- l. *Do not use the speaker as a shelf when hanging on Versatrack wall.*

Safety Instructions for Speaker

- Remove the battery pack. Switch off before leaving it unattended. Remove the battery pack when not in use, before changing accessories or attachments and before servicing.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- No exposed flame sources, such as lighted candles, should be placed on the speaker.

The label on your tool may include the following symbols. The symbols and their definitions are as follows:

V	volts	sfpmin	surface feet per minute		Class II Construction (double insulated)	2 	two phase alternating current
Hz	hertz	SPM	strokes per minute	n_0	no load speed	2N 	two phase alternating current with neutral
min	minutes	OPM	oscillations per minute	n	rated speed	3 	three phase alternating current
 or DC	direct current	A	amperes		earthing terminal	3N 	three phase alternating current with neutral
	Class I Construction (grounded)	W	watts		safety alert symbol		
.../min	per minute	 or AC	alternating current		visible radiation		
BPM	beats per minute	 or AC/DC	alternating or direct current		avoid staring at light		
IPM	impacts per minute						
RPM	revolutions per minute						

	 wear respiratory protection		 rated current of the appropriate fuse-link in amperes
	 wear eye protection		 time-log miniature fuse-link where X is the symbol for the time/current characteristic, as given in IEC 60127-3
	 wear hearing protection		
	 read all documentation		
.../min or ...min ⁻¹	Revolutions or Reciprocations per minute	IPXX	 IP symbol

BATTERIES AND CHARGERS

The battery pack is not fully charged out of the carton. Before using the battery pack and charger, read the safety instructions below and then follow charging procedures outlined. When ordering replacement battery packs, be sure to include the catalog number and voltage.

READ ALL INSTRUCTIONS

Important Safety Instructions for All Battery Packs

 **WARNING:** Read all safety warnings, instructions, and cautionary markings for the battery pack, charger and product. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

- **Do not charge or use the battery pack in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Inserting or removing the battery pack from the charger may ignite the dust or fumes.
- **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws, or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.

- **NEVER force the battery pack into the charger. DO NOT modify the battery pack in any way to fit into a non-compatible charger as battery pack may rupture causing serious personal injury.**
- Charge the battery packs only in CRAFTSMAN chargers.
- **DO NOT** splash or immerse in water or other liquids.
- **Do not store or use the speaker and battery pack in locations where the temperature may reach or exceed 104 °F (40°C) (such as outside sheds or metal buildings in summer).** For best life store battery packs in a cool, dry location.
- **NOTE: Do not store the battery packs in a tool with the trigger switch locked on. Never tape the trigger switch in the ON position.**
- **Do not incinerate the battery pack even if it is severely damaged or is completely worn out.** The battery pack can explode in a fire. Toxic fumes and materials are created when lithium-ion battery packs are burned.
- **If battery contents come into contact with the skin, immediately wash area with mild soap and water.** If battery liquid gets into the eye, rinse water over the open eye for 15 minutes or until irritation ceases. If

medical attention is needed, the battery electrolyte is composed of a mixture of liquid organic carbonates and lithium salts.

- **Contents of opened battery cells may cause respiratory irritation.** Provide fresh air. If symptoms persist, seek medical attention.



WARNING: Burn hazard. Battery liquid may be flammable, seek medical attention.



WARNING: Fire hazard. Never attempt to open the battery pack for any reason. If the battery pack case is cracked or damaged, do not insert into the charger. Do not crush, drop or damage. Do not use a battery pack or charger that has received a puncture to the battery pack. Do not use a battery pack or charger that has received a sharp blow, been dropped, run over or damaged in any way (e.g., pierced with a nail, hit with a hammer, stepped on). Damaged battery packs should be returned to service center for recycling.

Storage Recommendations

1. The best storage place is one that is cool and dry, away from direct sunlight and excess heat or cold.

2. For long storage, it is recommended to store a fully charged battery pack in a cool dry place out of the charger for optimal results.

NOTE: Battery packs should not be stored completely depleted of charge. The battery pack will need to be recharged before use.

Battery Pack Cleaning Instructions

Dirt and grease may be removed from the exterior of the battery using a cloth or soft non-metallic brush. Do not use water or any cleaning solutions.

The RBRC® Seal

The RBRC® (Rechargeable Battery Recycling Corporation) Seal on the nickel cadmium, nickel metal hydride or lithium-ion batteries (or battery packs) indicates that the costs to recycle these batteries (or battery packs) at the end of their useful life have already been paid by CRAFTSMAN. In some areas, it is illegal to place spent nickel cadmium, nickel metal hydride or lithium-ion batteries in the trash or municipal solid waste stream and the Call 2 Recycle® program provides an environmentally conscious alternative.

Call 2 Recycle, Inc., in cooperation with CRAFTSMAN

and other battery users, has established the program in the United States and Canada to facilitate the collection of spent nickel cadmium, nickel metal hydride or lithium-ion batteries. Help protect our environment and conserve natural resources by returning the spent nickel cadmium, nickel metal hydride or lithium-ion batteries to an authorized service center or to your local retailer for recycling. You may also contact your local recycling center for information on where to drop off the spent battery. RBRC® is a registered trademark of Call 2 Recycle, Inc.

Transportation



WARNING: Fire hazard. Do not store or carry the battery pack so that metal objects can contact exposed battery terminals. For example, do not place the battery pack in aprons, pockets, tool boxes, product kit boxes, drawers, etc., with loose nails, screws, keys, etc. **Transporting batteries can possibly cause fires if the battery terminals inadvertently come in contact with conductive materials such as keys, coins, hand tools and the like.** The US Department of Transportation Hazardous Material Regulations (HMR) actually prohibit

transporting batteries in commerce or on airplanes in carry-on baggage **UNLESS** they are properly protected from short circuits. So when transporting individual battery packs, make sure that the battery terminals are protected and well insulated from materials that could contact them and cause a short circuit. **NOTE:** LI-ION batteries should not be put in checked baggage.

Important Safety Instructions for All Battery Chargers



WARNING: Read all safety warnings, instructions, and cautionary markings for the battery pack, charger and product. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

- **DO NOT attempt to charge the battery pack with any chargers other than a CRAFTSMAN charger.** CRAFTSMAN charger and battery pack are specifically designed to work together.
- **These chargers are not intended for any uses other than charging CRAFTSMAN rechargeable batteries.** Any other uses may result in risk of fire, electric shock or electrocution.

- **Do not expose the charger to rain or snow.**
- **Pull by the plug rather than the cord when disconnecting the charger.** This will reduce the risk of damage to the electric and cord.
- **Make sure that the cord is located so that it will not be stepped on, tripped over or otherwise subjected to damage or stress.**
- **Do not use an extension cord unless it is absolutely necessary.** Use of improper extension cord could result in risk of fire, electric shock or electrocution.
- **When operating a charger outdoors, always provide a dry location and use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- **An extension cord must have adequate wire size (AWG or American Wire Gauge) for safety.** The smaller the gauge number of the wire, the greater the capacity of the cable, that is, 16 gauge has more capacity than 18 gauge. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. When using more than one extension to make up the total length, be sure each

individual extension contains at least the minimum wire size. The following table shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gauge. The lower the gauge number, the heavier the cord.

Minimum Gauge for Cord Sets

Volts		Total Length of Cord in Feet (meters)			
120 V		25 (7.6)	50 (15.2)	100 (30.5)	150 (45.7)
240 V		50 (15.2)	100 (30.5)	200 (61.0)	300 (91.4)
Ampere Rating		American Wire Gauge			
More Than	Not More Than				
0	6	18	16	16	14
6	10	18	16	14	12
10	12	16	16	14	12
12	16	14	12	Not Recommended	

- **Do not place any object on top of the charger or place the charger on a soft surface that might block the ventilation slots and result in excessive internal heat.** Place the charger in a position away from any heat source. The charger is ventilated through

slots in the top and the bottom of the housing.

- **Do not operate the charger with a damaged cord or plug** - have them replaced immediately.
- **Do not operate the charger if it has received a sharp blow, been dropped or otherwise damaged in any way.** Take it to an authorized service center.
- **Do not disassemble the charger; take it to an authorized service center when service or repair is required.** Incorrect reassembly may result in a risk of electric shock, electrocuting or fire.
- **Disconnect the charger from the outlet before attempting any cleaning. This will reduce the risk of electric shock.** Removing the battery pack will not reduce this risk.
- **NEVER** attempt to connect 2 chargers together.
- **The charger is designed to operate on standard 120V household electrical power. Do not attempt to use it on any other voltage.** This does not apply to the vehicular charger.

 **WARNING:** Shock hazard. Do not allow any liquid to get inside the charger. Electric shock may result.

 **WARNING:** Burn hazard. Do not submerge the battery pack in any liquid or allow any liquid to enter the battery pack. Never attempt to open the battery

pack for any reason. If the plastic housing of the battery pack breaks or cracks, return to a service center for recycling.



CAUTION: Burn hazard. To reduce the risk of injury, charge only CRAFTSMAN rechargeable battery packs. Other types of batteries may overheat and burst resulting in personal injury and property damage.



CAUTION: Under certain conditions, with the charger plugged into the power supply, the charger can be shorted by foreign material. Foreign materials of a conductive nature, such as, but not limited to, grinding dust, metal chips, steel wool, aluminum foil or any buildup of metallic particles should be kept away from the charger cavities. Always unplug the charger from the power supply when there is no battery pack in the cavity. Unplug the charger before attempting to clean.

Charging a Battery

NOTE: To ensure maximum performance and life of lithiumion battery packs, charge the battery pack fully before first use.

1. Plug the charger into an appropriate outlet before inserting battery pack.
2. Connect the charger and battery pack, making sure the battery is fully seated. The (charging) light will blink continuously indicating that the charging process has started.
3. The completion of charge will be indicated by the light remaining ON continuously. The battery pack is fully charged and may be removed and used at this time or left in the charger.

NOTE: To remove the battery pack, some chargers require the battery pack release button to be pressed.

Indicators



Charging



Fully Charged



Hot/Cold Pack Delay



A charger will not charge a faulty battery pack. The charger refusing to light could indicate a problem with the charger.

NOTE: If the charger refuses to light, take the charger and battery pack to be tested at an authorized service center.

Hot/Cold Pack Delay

When the charger detects a battery pack that is too hot or too cold, it automatically starts a Hot/Cold Pack Delay, suspending charging until the battery pack has reached an appropriate temperature. The charger then automatically switches to the pack charging mode. This feature ensures maximum battery pack life.

A cold battery pack may charge at a slower rate than a warm battery pack.

Important Charging Notes

1. Longest life and best performance can be obtained if the battery pack is charged when the air temperature is between **65°F-75°F (18°-40°C)**. DO NOT charge when the battery pack is below **+ 40°F(+4.5°C)**, or above **+104°F(+40°C)**. This is important and will prevent serious damage to the battery pack.
2. The charger and battery pack may become warm to the touch while charging. This is a normal condition, and does not indicate a problem. To facilitate the cooling of the battery pack after use, avoid placing the charger or battery pack in a warm environment such as in a metal shed or an uninsulated trailer.
3. If the battery pack does not charge properly:
 - a. Check operation of receptacle by plugging in a lamp;
 - b. Check to see if receptacle is connected to a light switch which turns power off when you turn out the lights;
 - c. Move the charger and battery pack to a location where the surrounding air temperature is approximately **65°F -75°F (18°-24°C)**;
 - d. If charging problems persist, take the tool, battery pack and charger to your local service center.
4. The battery pack should be recharged when it fails to produce sufficient power on jobs which were easily done previously. DO NOT CONTINUE to use under these conditions. Follow the charging procedure. You may also charge a partially used pack whenever you desire with no adverse effect on the battery pack.

- Foreign materials of a conductive nature such as, but not limited to, grinding dust, metal chips, steel wool, aluminum foil, or any buildup of metallic particles should be kept away from charger cavities. Always unplug the charger from the power supply when there is no battery pack in the cavity. Unplug the charger before attempting to clean.
- Do not freeze or immerse the charger in water or any other liquid.

Charger Cleaning Instructions



WARNING: Shock hazard. Disconnect the charger from the AC outlet before cleaning. Dirt and grease may be removed from the exterior of the charger using a cloth or soft non-metallic brush. Do not use water or any cleaning solutions.

Wall Mounting

These chargers are designed to be wall mountable or to sit upright on a table or work surface. If wall mounting, locate the charger within reach of an electrical outlet, and away from a corner or other obstructions which may impede air flow. Use the back of the charger as a template for the location of the mounting screws (purchased separately) at least

1" (25.4 mm) long, with a screw head diameter of 0.28-0.35" (7-9 mm), screwed into wood to an optimal depth leaving approximately 7/32" (5.5 mm) of the screw exposed. Align the slots on the back of the charger with the exposed screws and fully engage them in the slots.

Versatrack

CRAFTSMAN chargers can be mounted to the wall using CRAFTSMAN Versatrack Trackwall. Hooks and accessories are sold separately. Please refer to the Versatrack Trackwall accessory sheet for further information.

SAVE THESE INSTRUCTIONS FOR FUTURE USE

COMPONENTS (FIG. A)

Refer to Figure A at the beginning of this manual for a complete list of components.

Intended Use

This speaker is designed for household use.

This Bluetooth® speaker is designed to play/stream audio via a wireless Bluetooth® connection

DO NOT use under wet conditions or in presence of flammable liquids or gases.

DO NOT let children come into contact with the speaker.

Supervision is required when inexperienced operators use this speaker.

ASSEMBLY AND ADJUSTMENTS



WARNING: To reduce the risk of serious personal injury, turn unit off and remove the battery pack before making any adjustments or removing/installing attachments or accessories.

An accidental start-up can cause injury.

Inserting and Removing the Battery Pack from the Bluetooth® Mini Speaker (Fig. B)

NOTE: Make sure your battery pack (10) is fully charged.

To Install the Battery Pack into the Unit

1. Align the battery pack (10) with the rails inside the speaker's battery port (11) (Fig. B).
2. Slide it in until the battery pack is firmly seated and ensure that you hear the lock snap into place. Be sure that it does not disengage.

To Remove the Battery Pack from the Unit

1. Press the battery release button (12) and firmly pull the battery pack out of the battery port.

2. Insert battery pack into the charger as described in the charger section of this manual.

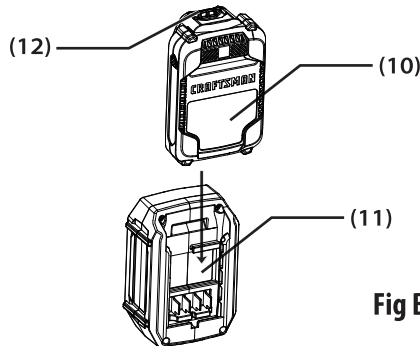 


Fig B

OPERATION



WARNING: To reduce the risk of serious personal injury, turn unit off and remove the battery pack before making any adjustments or removing/installing attachments or accessories. An accidental start-up can cause injury.

Instructions for Use (Fig. C)



WARNING: Always observe the safety instructions and applicable regulations.

Power Button

To turn on the speaker, press the power button **(1)**.

To turn the speaker off, press the power button **(1)**.

Volume Adjustment

When the speaker is paired to a Bluetooth® device the “-/+” buttons **(2)** can be used to increase or decrease volume on the audio device.

Track Change

When the speaker is paired to a Bluetooth® device the “-/+” buttons **(2)** can be pressed and held to skip or go to previous tracks on the audio device.

Play and Pause

Press “Play” button **(3)** once to play or pause music.

Disconnect Device

Long press “Play” button **(3)** to disconnect Bluetooth from the device.

Factory Reset

Press and hold “-” and “+” buttons **(2)** to unpair the speaker from the device and power off.

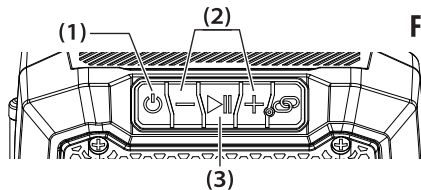 


Fig C

Playing Audio (Fig. D)

Audio can be played through the speaker via a Bluetooth® connection to a compatible Bluetooth® device.

Pairing Speaker with a Bluetooth® Audio Device

1. Place the speaker and the Bluetooth® audio source within 3 feet (1m) of each other.
2. Turn on the speaker by pressing the power button **(1)**.
3. The Bluetooth® audio device must have Bluetooth® turned on to automatically pair. (Please consult your device's instruction manual for specific pairing instructions.)
4. During this time, the speaker is trying to find a previously paired device. If found, the Bluetooth® status indicator will stay lit without any blinking.
5. Confirm pairing on your device. Set your device to search/scan for available BLUETOOTH® signals, then select “CMXCREF1900003”.

NOTE: If pairing is not confirmed within 10 minutes, the speaker will automatically shut down.

6. Once pairing is successful, the Bluetooth® status indicator (6) will turn solid. The speaker will now play audio.

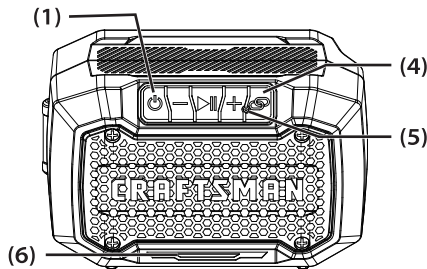 


Fig D

Bluetooth® Status Indicator

Indicator	Status/Mode
Blue - Rapid Blinking	Speaker is in pairing mode and discoverable by your device
Blue - Solid Light	Speaker is connected with a device
Purple / Red - Rapid Blinking	Low Battery (Primary / Secondary)
No Light	Speaker is off

Connecting a Previously Paired Bluetooth® Audio Device

If a Bluetooth® device has been previously paired to the speaker, it should automatically reconnect when speaker is powered on. After 4 seconds, the speaker will go into connecting mode. This is indicated by the Bluetooth® status indicator (6) blinking rapidly. Once the previously paired Bluetooth® device is recognized and connected, the Bluetooth® status indicator will stop blinking and turn solid. If connection does not occur and you are unable to stream audio, please follow the instructions for **Pairing Speaker with a Bluetooth® Audio Device**.

NOTE: The Bluetooth® audio device must have Bluetooth® turned on to automatically pair.

Timeout Functionality

To conserve battery life, the speaker is designed to power off automatically after 2 hours of inactivity. If the speaker powers off due to inactivity of any kind, refer to ***Connecting a Previously Paired Bluetooth® Audio Device.***

NOTE: Optimum Bluetooth® streaming range is roughly 50 feet (15m) (line of sight) to the speaker but distances up to 260 feet (80m) are possible.

Physical obstacles, other wireless devices or electromagnetic devices may affect the connection quality.

If Bluetooth® connection is lost due to exceeding time of separation, exceeding the optimum distance, obstacles or otherwise, reconnecting your device with the speaker may be necessary.

Linking to Another Craftsman Speaker (Fig. E)

 
- Press and hold LINK button **(4)** on PRIMARY SPEAKER.
- Power on additional speaker(s) and press the LINK button.
- LINK Button Light:
 - White – Primary Speaker
 - Green – Secondary Speaker
- Volume change:
 - Primary Speaker – control all speakers' and Bluetooth device's volume.
 - Secondary Speaker – control its volume only
 - Bluetooth Device – control all speakers' volume
- Changing Track:
 - Primary Speaker – can skip song or go back to previous song.

Disconnect Linking


- To disconnect LINKING, press and hold Primary or Secondary Speaker's LINK button **(4)**. LINK Status Indicator will turn off.
- To exit LINKING on the secondary device, press and hold the LINK button. The device will enter Bluetooth pairing mode. The primary speaker will remain in LINKING mode.

NOTE:

- When powered on, a previously linked primary speaker enters linking mode (solid white indicator), and the secondary speaker links automatically (solid green indicator).
- If the primary speaker is off, the secondary speaker searches for a link (blinking green). Press and hold the link button to stop the search and switch to Bluetooth pairing mode.
- Powering off the primary speaker will also power off all secondary speakers.

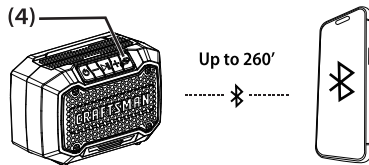

 
Remark: Maximum Bluetooth range achievable in open, unobstructed areas.

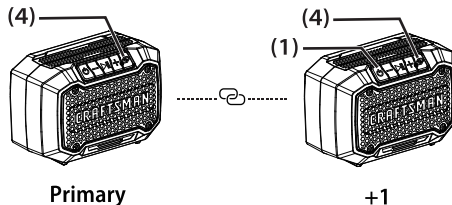




Primary

 Up to 160'

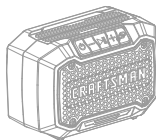

+1

 Up to 160'

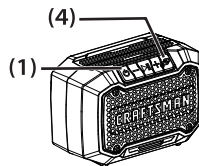

+2



+3

Connect 100+ Craftsman Mini or Clamp Speakers.

Remark: Maximum Bluetooth range achievable in open, unobstructed areas.

Fig E

MAINTENANCE



WARNING: To reduce the risk of serious personal injury, turn unit off and disconnect it from power source by removing the battery pack before making any adjustments or removing/installing attachments or accessories. An accidental start-up can cause injury.

Accessories



WARNING: Since accessories, other than those offered by CRAFTSMAN, have not been tested with this product, use of such accessories with this speaker could be hazardous. To reduce the risk of injury, only CRAFTSMAN recommended accessories should be used with this product.

Recommended accessories for use with your speaker are available at extra cost from your local dealer or authorized service center. If you need assistance in locating any accessory, please contact CRAFTSMAN, call **1-888-331-4569**.

Repair

The charger and battery pack are not serviceable. There are no serviceable parts inside the charger or battery pack.



WARNING: To assure product SAFETY and RELIABILITY, repairs, maintenance and adjustment (including power cord repairs, and brush inspection and replacement, when applicable) should be performed by a CRAFTSMAN factory service center or a CRAFTSMAN authorized service center. Always use identical replacement parts.

Cleaning



WARNING: Blow dirt and dust out of all air vents with clean, dry air at least once a week. To minimize the risk of eye injury, always wear ANSI Z87.1 approved eye protection when performing this.



WARNING: Never use solvents or other harsh chemicals for cleaning the non-metallic parts of the tool. These chemicals may weaken the plastic materials used in these parts. Use a cloth dampened only with water and mild soap. Never let any liquid

FREE WARNING LABEL REPLACEMENT

If your warning labels become illegible or are missing, call **1-888-331-4569** for a free replacement.

LIMITED LIFETIME WARRANTY

We're here to help. If you are not satisfied with this product or have questions on how to use it, please contact us. **YOU DO NOT NEED TO CONTACT THE RETAILER.** Please contact one of our service representatives, using the contact info listed below. Please provide the product number when contacting us.

PLEASE CALL CUSTOMER SERVICE: 1-888-331-4569,
8:00 a.m.-5:00 p.m. PT, Monday - Friday.

FCC regulatory conformance:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Warning: Changes or modifications made to this device not expressly approved by E-filite Incorporated may void the FCC authorization to operate this device.

RF Exposure:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.

CRAFTSMAN BATTERY AND CHARGER SYSTEMS

Chargers . Chargeurs . Cargadores de baterías

Battery Cat #	Output Voltage	Charger		
		CMCB100	CMCB102	CMCB104
CMCB201	20	C	C	C
CMCB2011	20	C	C	C
CMCB202	20	C	C	C
CMCB204	20	C	C	C

"C" Indicates that the battery pack is compatible with that specific charger. Read the instruction manual for more specific information.