



Magnetic Wireless Speaker

BXMA1901176



PLEASE READ BEFORE RETURNING THIS PRODUCT FOR ANY REASON.



WARNING: TO REDUCE THE RISK OF INJURY, USER MUST READ ALL INSTRUCTIONS BEFORE OPERATING THIS PRODUCT

SAVE THESE INSTRUCTIONS


Thank you for purchasing the Magnetic Wireless Speaker!

With this speaker, you can:

- Enjoy convenient, wireless, hands-free calls
- Control wireless music
- Switch between calls and music
- Connect up to 100+ Black+Decker Magnetic Wireless Speakers

Package Contents

- Magnetic Wireless Speaker
- Type C to Type C Cable, 2ft
- 3.5mm AUX Cable, 2ft
- User Manual

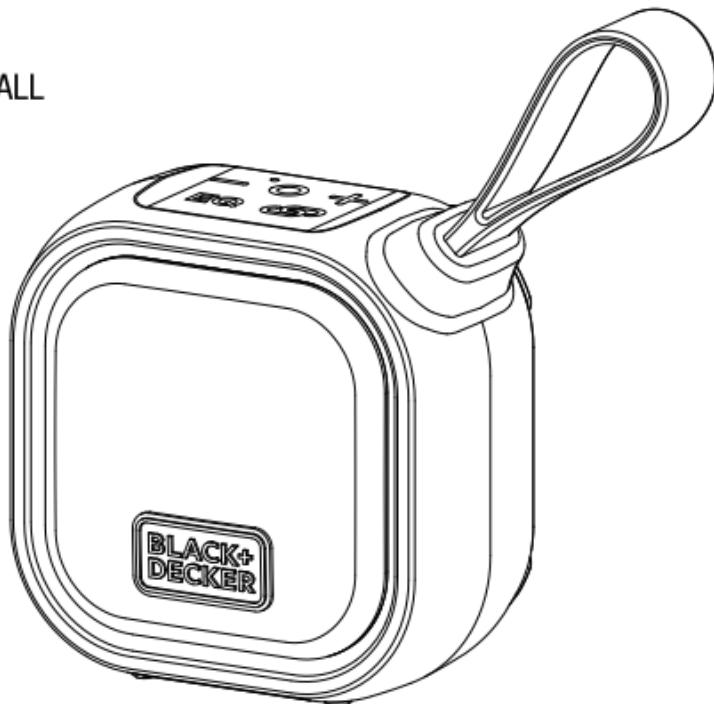



COMPONENTS AT A GLANCE

Magnetic Wireless Speaker

- ① On/Off Button
- ② Volume/Track Controls
- ③ EQ Modes Button
- ④ Link Button
- ⑤ Linking LED Indicator
- ⑥ Bluetooth Connection LED Indicator
- ⑦ Microphone
- ⑧ Lanyard
- ⑨ Type C Charging Port
- ⑩ Aux In
- ⑪ Port Cover
- ⑫ Magnetic Foot
- ⑬ Passive Radiator

Charging Cable:

- ① Type C to Type C

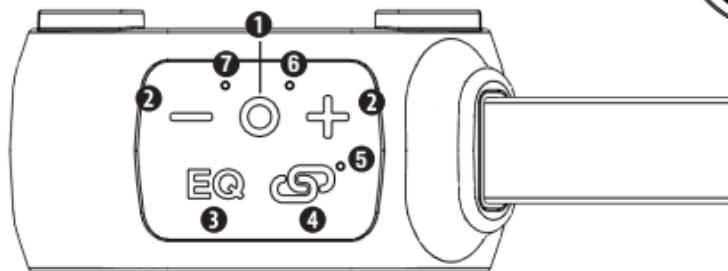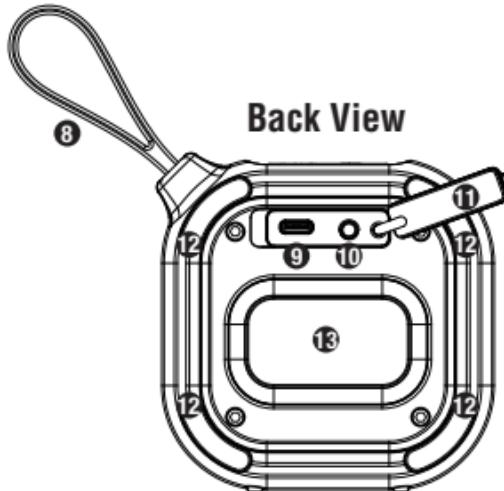

Top View

DEFINITIONS: SAFETY GUIDELINES

The definitions below describe the level of severity for each signal word. Please read the manual and pay attention to these symbols.

- ▲ **DANGER:** *Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.*
- ▲ **WARNING:** *Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.*
- ▲ **CAUTION:** *Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.*
- ▲ **NOTICE:** *Indicates a practice not related to personal injury which, if not avoided, may result in property damage.*

▲ **WARNING: DO NOT** leave speaker in any location with excessive heat.

▲ **WARNING: DO NOT** charge or use the speaker in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

▲ **WARNING: DO NOT** modify the battery in any way to fit a noncompatible charger as the speaker may rupture causing serious personal injury.

▲ **WARNING: DO NOT** splash or immerse in water or other liquids.

▲ **WARNING: DO NOT** store or use the speaker in locations where the temperature may reach or exceed 105° F (40°C) (such as outside sheds or metal buildings in summer). For best life, store speaker in a cool, dry location. The speaker should not be disposed of as municipal solid waste. To recycle it, contact your local hazardous waste processor or contact Call 2 Recycle® on their website, call2recycle.org, or by phone at 877-273-2925 to find the nearest drop-off location for lithium-polymer batteries.

▲ **WARNING:** Burn hazard. Battery liquid may be flammable if exposed to spark or flame.

▲ **WARNING:** Fire hazard. Never attempt to open the battery pack for any reason. If the battery pack is cracked or damaged, do not insert the charging cable. Do not crush, drop or damage the battery. Do not use the speaker if it has received a sharp blow, been

dropped, run over or damaged in any way (e.g. pierced with a nail, hit with a hammer, stepped on).

Damaged batteries should be returned to a service center for recycling.

GETTING STARTED

CHARGE THE SPEAKER

Connect one Type C end of the charging cable into the speaker and the other Type C end into a power source. **Make sure the speaker is fully charged before using it for the first time.**

⚠ WARNING: Use only with a Listed Class 2 USB power adapter that is compliant with applicable country regulations and international/regional safety standards. Using adapters that do not meet applicable safety standards could result in injury.

⚠ WARNING: Observe the safety instructions of the charger being used to power this device.

PAIR THE SPEAKER WITH YOUR BLUETOOTH DEVICE

- Press and hold the speaker's ON/OFF button (1) to turn the speaker on. If not previously paired, the speaker will automatically enter pairing mode.
- Turn on the Bluetooth function of your Bluetooth device and pair the speaker with your Bluetooth device.

THE FOLLOWING DIRECTIONS SHOW YOU HOW TO FIND THE SPEAKER ON BLUETOOTH DEVICE

Turn on the Bluetooth function of your Bluetooth device and select "**BLACK+DECKER WIRELESS SPEAKER**".

PAIR THE SPEAKER WITH ANOTHER BLUETOOTH DEVICE

If you have another Bluetooth device that you want to pair with the speaker, make sure the Bluetooth function in any other previously paired or connected devices is turned off. Then follow the steps in "PAIR THE SPEAKER WITH YOUR BLUETOOTH DEVICE."

CONTROLS

To turn speaker ON:

Press and hold the ON/OFF button

To turn speaker OFF:

Press and hold the ON/OFF button

RECONNECTING TO A DISCONNECTED DEVICE

- If previously connected to a Bluetooth device, the speaker will automatically reconnect with that device when powered on.
- If the Bluetooth device is outside the speaker's distance range, the speaker will not automatically reconnect.

AUX IN

- Insert audio cable to AUX IN (10) to change to AUX mode.
- Press Volume Controls (2) to increase or decrease the volume.
- Press the ON/OFF button (1) to mute.

LINK TO ANOTHER BLACK+DECKER MAGNETIC WIRELESS SPEAKER

1. Press the LINK button (4) on the PRIMARY SPEAKER. The LINK LED indicator (5) will light up in white.
2. Power on the SECONDARY SPEAKER(s) and press the LINK button (4). The LINK LED indicator (5) will flash green while searching for the PRIMARY SPEAKER. Once linked, the indicator will turn solid green.
 - Primary Speaker: Controls volume, play, pause, and previous/next for all connected devices.



Secondary Speaker(s): Can only adjust its own volume or power off.

Primary speaker can connect to 100+ secondary speakers.

DISCONNECT LINKING

- To disconnect LINKING, press the LINK button (4) on either the Primary or Secondary Speaker. The LINK LED indicator (5) will turn off.

NOTE:

- If you long press the LINK button on a Secondary Speaker, it will exit LINKING mode and enter Bluetooth searching status.
- The Primary Speaker will remain in its previous connection status.

MANAGE YOUR MUSIC:

Play or Pause music: Press the ON/OFF button (1) once

- **Forward (next song):** Press and hold "+" button for 2 seconds
- **Volume increase:** Press "+" button
- **Backward (previous song):** Press and hold "-" button for 2 seconds
- **Volume decrease:** Press "-" button

CALL CONTROLS

USE THE ON/OFF BUTTON

- **Answer/Hang up:** Press the ON/OFF button (1)
- **Reject incoming call:** Press and hold the ON/OFF button (1) for 2 seconds
- **Voice Control - Siri/Google:** Double-click the ON/OFF button (1)

BLUETOOTH CONNECTION INDICATOR GUIDE

Using the Speaker

- **Pairing to a Bluetooth device:**
Flashing quickly in **BLUE**
- **Connected to a Bluetooth device:**
Solid **BLUE**
- **Playing music:**
Solid **BLUE**

Charging the Speaker

- **Charging:** Solid RED
- **Charging completed:** OFF

Low Battery Level

- Flashing in RED

Reset

- Flashing in PURPLE + LINKING LED indicator (5)
Flashing in GREEN for 3 seconds

FACTORY RESET

- Long press the “-” and “+” buttons simultaneously
for 6 seconds.

Note: If your speaker was previously paired, be sure to "Forget this device" or "Unpair" in your Bluetooth device's "paired devices" list before resetting.

TECHNICAL DATA-SPEAKER

Music time: Up to 16 hours

Charging time: Approximately 1 hour and 45 minutes

Rechargeable Li-ion battery: 3.6V 2550mAh

Bluetooth version: 5.3

Compatible Bluetooth profiles:

- HFP
- HSP
- A2DP
- AVRCP

Supported audio code: SBC

BT Operating range: 15m (50ft); up to 80m (260ft) *

Linking Operating range: 15m (50ft); up to 48m (160ft)*

Remark: * Maximum range achievable in open, unobstructed areas

IMPORTANT SAFETY INSTRUCTIONS FOR RECHARGEABLE BATTERY

The battery is not fully charged out of the box. Before using the speaker, read the safety instructions below

and then follow the charging procedures outlined. Do not incinerate the battery module even if it is severely damaged or is completely worn out. The battery can explode in a fire. Toxic fumes and materials are created when lithium batteries are burned. If battery contents come into contact with the skin, immediately wash area with mild soap and water. If battery liquid gets into the eye, rinse water over the open eye for 15 minutes or until irritation ceases. If medical attention is needed, the battery electrolyte is composed of a mixture of liquid organic carbonates and lithium salts. Contents of opened battery cells may cause respiratory irritation. Provide fresh air. If symptoms persist, seek medical attention.

IP67 RATING FOR PROTECTION AGAINST DUST AND WATER

This speaker is splash and water resistant and was tested under controlled laboratory conditions with a

rating of IP67 under IEC standard 60529. Splash and water resistance are not permanent conditions and resistance might decrease as a result of normal wear. Do not attempt to charge wet speaker. To dry your speaker, tap it gently against your hand with the port cover open to remove excess liquid. Leave your speaker in a dry area with some airflow. Placing your speaker in front of a fan blowing cool air directly onto the speaker might help the drying process. Liquid damage is not covered under warranty.

Guaranteed for Life

E-filiate warrants to the consumer that the product and all accessories provided in the sales package ("Product") are free from material defects in material and workmanship when used normally and in accordance with operation instructions.

E-filiate will repair or replace (at E-filiate's option), without charge, a Materially Defective Product. If we

repair or replace a Materially Defective Product under the terms of this warranty, this warranty also applies to repaired or replacement Products. If we repair this Product, we may use new or refurbished replacement parts. If we choose to replace this Product, we may replace it with a new or refurbished Product of the same or similar design. E-filiate will return repaired or replacement Products to you in working condition. We will retain defective parts, or equipment. Repair or replacement of Product is your exclusive remedy. This warranty does not cover Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion, or Product that has been damaged due to repair, alteration or modification by anyone other than an E-filiate authorized representative.

Customer Service:

We're here to help. If you are not satisfied with this

product or have questions on how to use it, please contact us.

You do not need to contact the retailer. Please contact one of our service representatives, using the contact info listed below. Please provide the product number when contacting us.

www.efiliate.com
support@efiliate.com

(800) 592-7031 toll-free
(916) 858-1000
(916) 858-1009 FAX

11321 White Rock Road
Rancho Cordova, CA 957 42 USA

Customer service representatives
are available **8 a.m.-5 p.m. PT, M-F**

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by E-filiate Incorporated for compliance may void the FCC authorization to operate this device.

BLACK & DECKER, BLACK+DECKER, the BLACK & DECKER and BLACK+DECKER logos and product names are trademarks of The Black & Decker Corporation, used under license. All rights reserved.

Los logotipos y nombres de productos BLACK & DECKER, BLACK+DECKER, the BLACK & DECKER y BLACK+DECKER son marcas comerciales de The Black & Decker Corporation y se emplean con licencia. Todos los derechos reservados.

BLACK & DECKER, BLACK+DECKER, les logos BLACK & DECKER et BLACK+DECKER ainsi que les noms de produits sont des marques de commerce de The Black & Decker Corporation et sont utilisés sous licences. Tout droits réservés.