

All trademarks are acknowledged as the property of their respective owners. Unless otherwise stated their use does not imply that the trademark owner is affiliated with Kondor or endorses the products herein.

Please recycle this packaging responsibly.





JB 4184 / Made in China © Kondor™ 2015 Christchurch, Dorset, BH23 4FL, UK



User Manual

 
85mm







Please read this manual carefully before use. Box contents • Tec+ Geo Up • USB charge cable • 3.5 mm to 3.5 mm audio cable • User manual **Functions** 1. Battery charge indicator 2. Power On/Off button 3. Bluetooth LED light indicator 4. Aux-in port 5. USB charging port





Instructions for use

Charging the speaker

It is recommended that you give the speaker a full charge before its first use. When battery is below 30% the battery charge indicator (1) will be flashing red, at this point you need to recharge.

- 1. Plug the micro USB end of the charge cable into the speaker 2. Plug the standard USB cable end into either a computer or
- a USB mains charger 3. The Battery charge indicator (1) will be solid red
- 4. When charging is complete, the red light will go out

Note: It may take up to 3 hours before the speaker is fully charged. Please allow up to 5 hours for the first charge.

Pairing the speaker to your device

Before you can use the speaker via Bluetooth, it will need to be paired to your device.

1. Press the On/Off button (2) for 2 seconds and the speaker

 
To do this:

a solid blue

- will turn on
- 2. The Geo Up will automatically be in pairing mode 3. The Bluetooth LED Light indicator (3) will be flashing
- blue slowly
- 4. Turn your device's Bluetooth ON and search for new devices 5. When the Geo Up appears in the list, select it and if asked
- for a passcode, enter '0000'
- 6. The speaker should then be paired to your device 7. Once paired the Bluetooth LED light indicator (3) will be

[Continued...]





Note: Pairing mode will be active for 10 minutes. After this, the Bluetooth LED Light indicator (3) will turn off. To re-activate pairing mode, turn the speaker off then on again.

To pair additional devices to the speaker, first make sure the Bluetooth on any devices that have already been paired to the speaker is turned off. Then follow the above instructions from step 1.

Playing music on your speaker

 
Bluetooth

If already connected to the speaker via Bluetooth, simply find and play the music on your device and the sound will play through the speaker. Some devices may require you to select the audio output. You should be able to do this by going to the 'Listen via' or 'Play via' menu. If unsure, please refer to your device's manual

Auxiliary

Using the provided cable, you can connect your device directly to the speaker. To use this, simply:

- 1. Press the On/Off button (2) for 2 seconds and the speaker will turn on
- 2. Plug the cable into the speaker's Aux-in port (4) and your device.
- 3. Once Aux-in is connected the Geo Up will automatically go into Aux-in mode
- 4. Once connected the Bluetooth LED Light indicator (3) with
- flash blue 3 times per 5 seconds









•

Changing the volume

Bluetooth

This can only be done on your device.

Auxiliary

This can only be done on your device.

Please note

Your device will have an internal amplifier and if it is playing digital files like MP3s it will also have an integrated DAC (Digital Audio Converter). If you turn the volume up to 100%, your device will be sending a distorted signal. To avoid this, and to get the best quality from the speaker, we recommend that you do not run your device any higher than 95% volume. Some devices output higher than others, so you may need to reduce the volume if you experience distortion.

Hands-free

When in Bluetooth mode you can still answer calls from your device. Once a call is incoming the music will automatically be paused. To answer/dismiss/end a phone call please use your device.

Care for Your Geo Up

Please DON'T:

- Get the Geo Up wet
- Drop the Geo Up as this will invalidate your warranty

changes of hot to cold or vice versa

- Open up the Geo Up There are no user serviceable parts inside
- Expose the Geo Up to extreme temperatures or rapid

Please DO:

• Clean the Geo Up with a soft dry cloth and no detergents







S/N	85 dB
Bluetooth	V3.0
Bluetooth range	up to 10 m
Frequency response	70 Hz – 18 kHz
Drivers	52 mm
Output RMS	4 W @ 4 ohm
Play time	up to 8 hours
Charging time	up to 3 hours

Troubleshooting

If you encounter any problems which can't be solved please email support@kondor.co.uk and we will be happy to help.

The use and operation of this speaker is beyond our control. Warranty of the Geo Up is limited to defects caused by faulty manufacture or defects in materials only. No warranty whatsoever is given or implied for damage caused by the user under any circumstances.

This does not affect your statutory rights.

Please do not attempt to open this product. There are no user serviceable parts inside, in particular if your product has an embedded, non-replaceable battery, do not attempt to access or remove the battery as this may cause personal injury and will damage the product. Making any attempt to open the product or carry out repair voids any and all warranties

We apologise for any inconvenience caused by minor inconsistencies in these instructions,

We apologise for any inconvenience caused by minor inconsistencies in which may occur as a result of product improvement and development.







NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.