


# User Manual

# Precautions

	<p>Please carefully read and observe the terms below:</p> <p>Safe power on</p> <p>Do not use your mobile phone where it is forbidden to use or you might cause a disturbance or danger.</p>
	<p>Safe transportation first</p> <p>Please observe all related local laws and regulations.</p> <p>Do not use your mobile phone while driving.</p> <p>Safe transportation should be considered first when driving.</p>
	<p>Turn off when in the hospital</p> <p>Please follow related limitations.</p> <p>Please switch your mobile phone off when near a medical instrument.</p>
	<p>Turn off on an airplane</p> <p>Please follow related limitations.</p> <p>Do not use your mobile phone on an airplane.</p>
	<p>Turn off when at a gasoline station</p> <p>Do not use your mobile phone at a filling station or around fuels or chemicals.</p>
	<p>Turn off around exposure Area</p> <p>Please observe related limitations and do not use your mobile phone near an area where explosions can occur.</p>
	<p>Backup</p> <p>Remember to make a backup or keep a written record of all important information saved in your mobile phone.</p>
	<p>Use qualified after sales service</p> <p>Only a qualified technician can install or repair your mobile phone. Please contact the authorized service center in case of phone failure.</p>
	<p>Accessories and batteries</p> <p>Only use the authorized accessories and batteries and do not connect to incompatible manufacturers or products.</p>

# Your phone

---

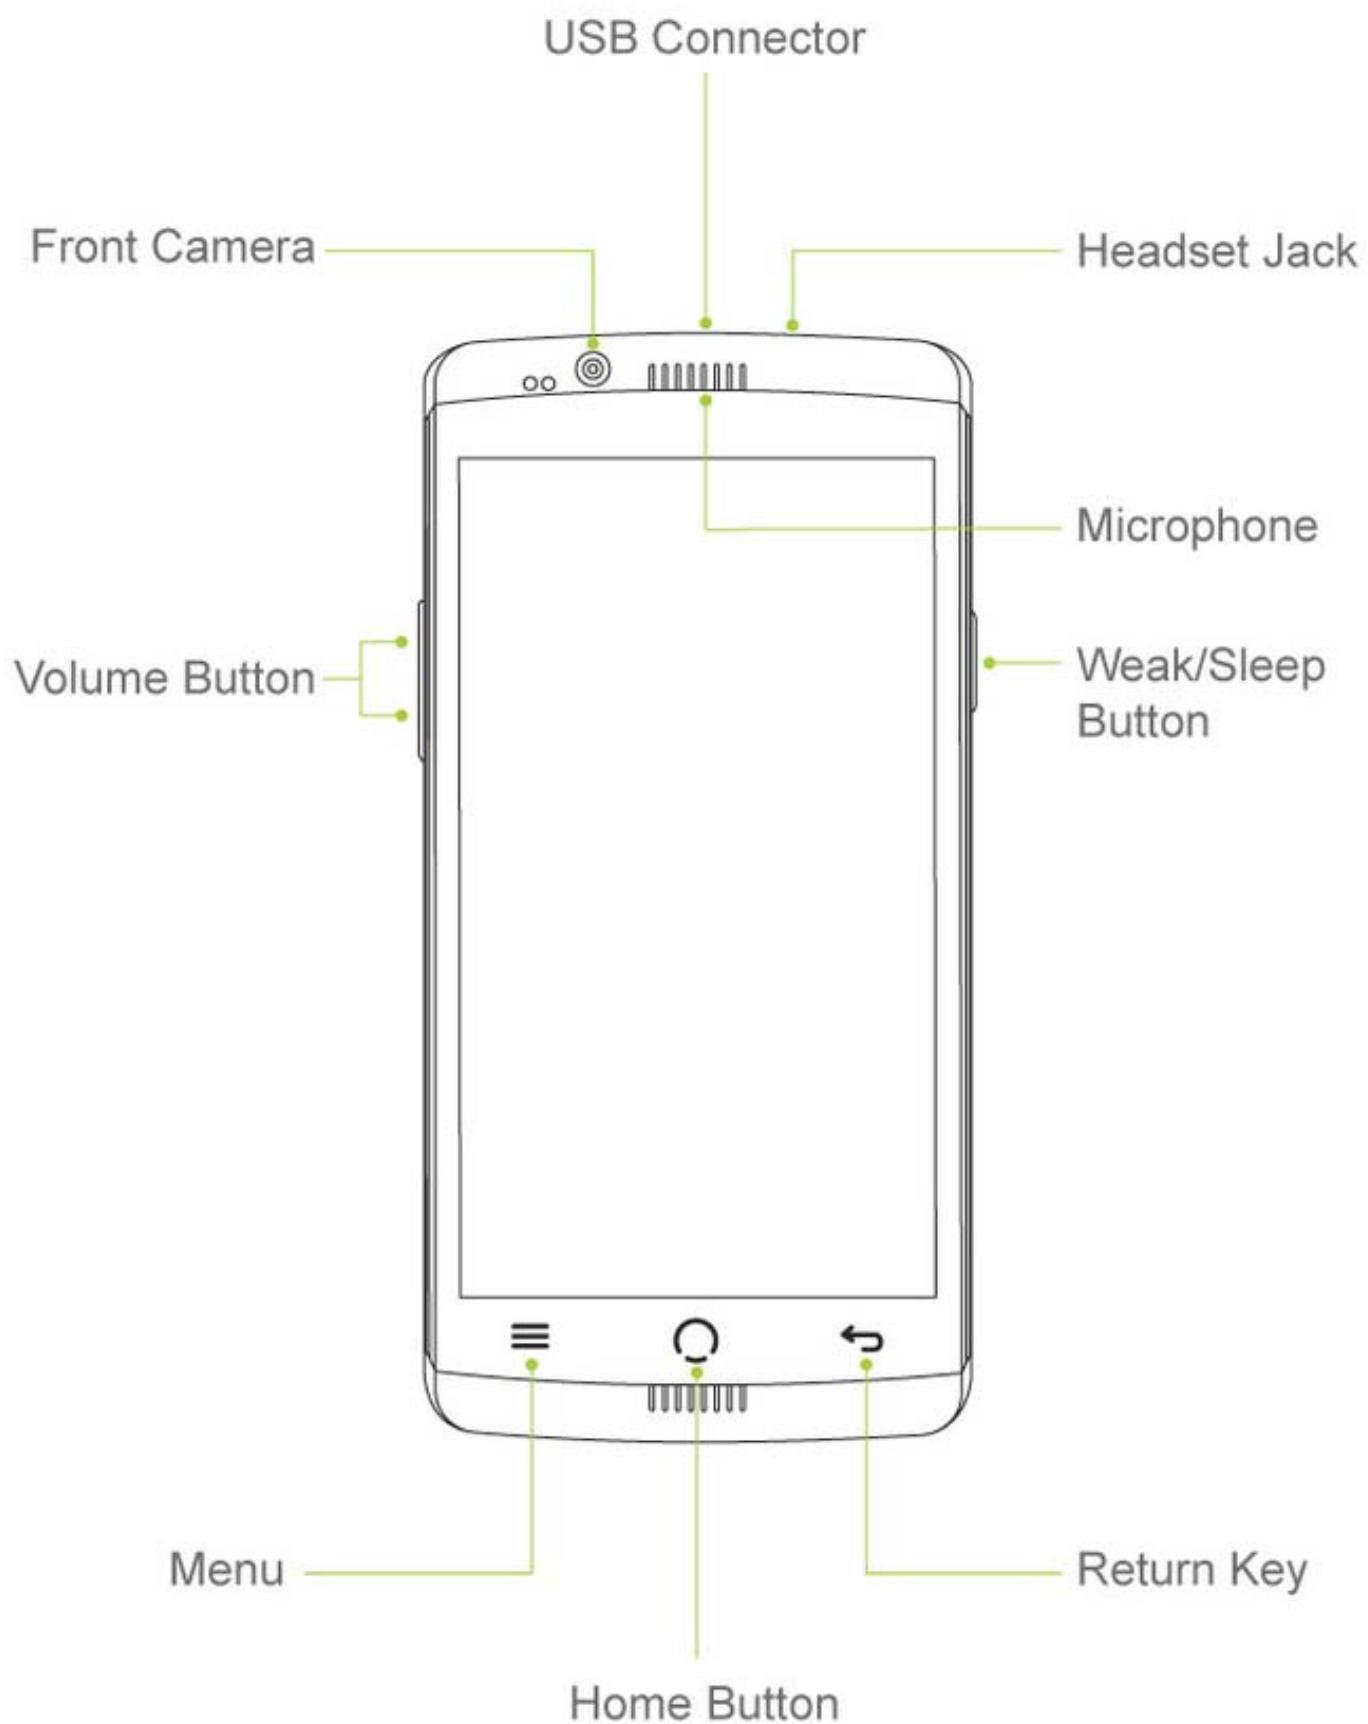

# Your phone

---

## Removing the Battery Cover

1. Hold the device firmly and locate the cover release latch.
2. Place your fingernail in the opening and remove the cover according to the arrow direction.

## Installing the Battery

1. With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place
2. Ensure the battery is inserted in the phone. To charge the battery, plug in the charger connector at your phone (USB interface) and then plug the other end into an AC power socket.

The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged. Disconnect the charger from the phone. Disconnect the charger from the AC power socket.

**Note:** If the battery is powerless, the battery icon will reappear after a few minutes of charging.


## Installing the SIM Card

1. Make sure that the clipped corner of the SIM card is facing the correct direction and the metallic contacts are facing the correct direction. Slide the SIM card into the card slot until it stops.

## Installing the microSD Memory Card

1. Slide microSD card into the SD card slot with the metallic pins facing downwards. Push the card until it locks into place.

# Phone Function

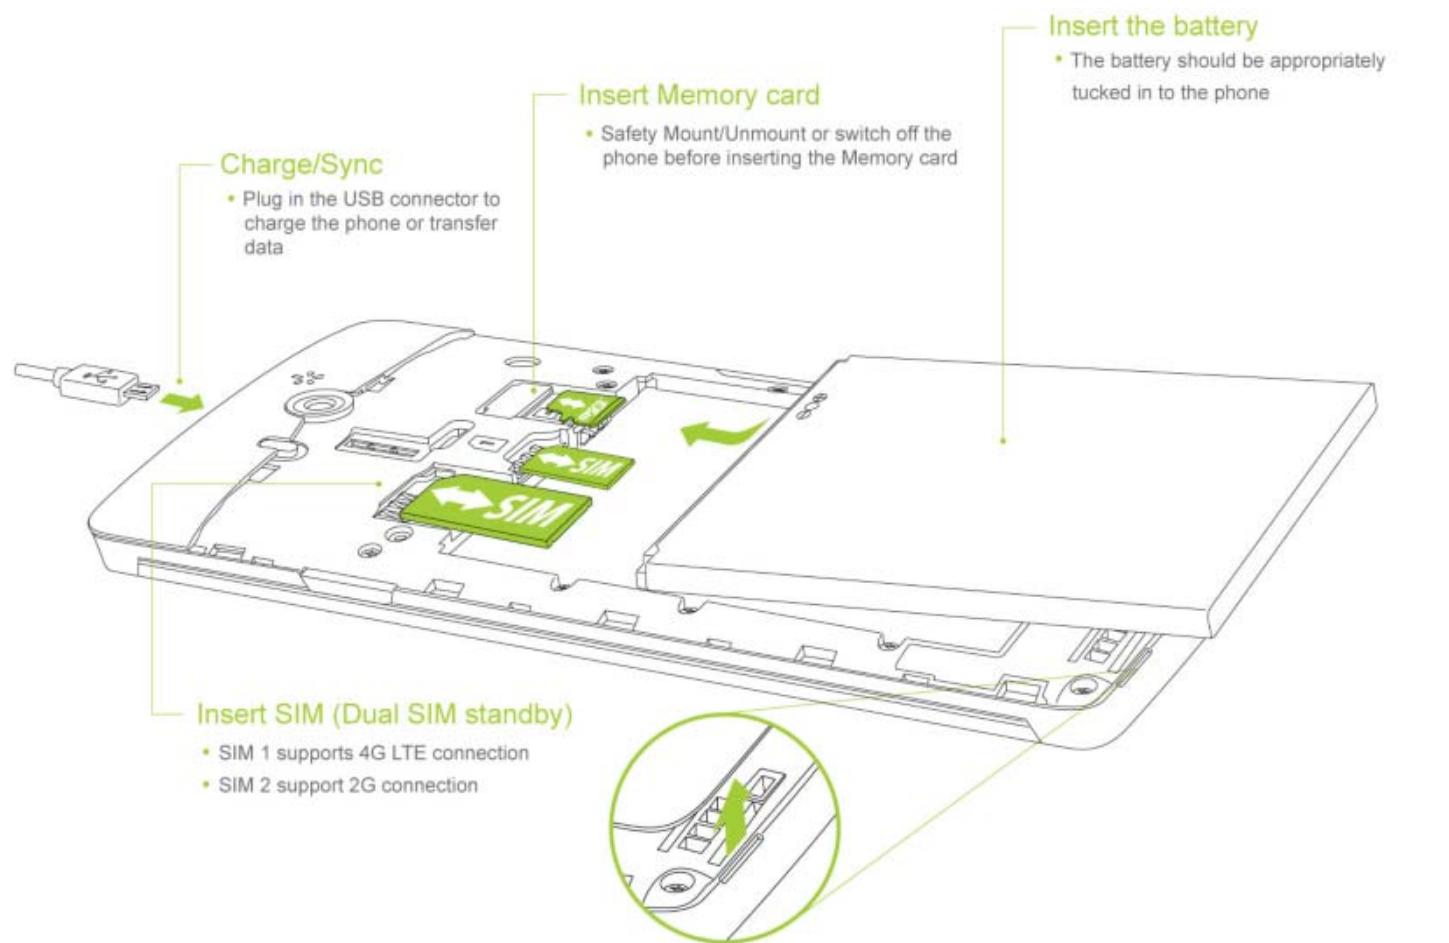

## Locking the Screen


To save your battery, prevent accidental touches or when you want to wipe smudges off your touch screen, put the touch screen to sleep by pressing the Power Key

## Unlocking the Screen


To wake up the touch screen, just press the Power Key again, and then drag the lock icon to the right on the screen to unlock according to the clue on the screen.

# Phone Function

---

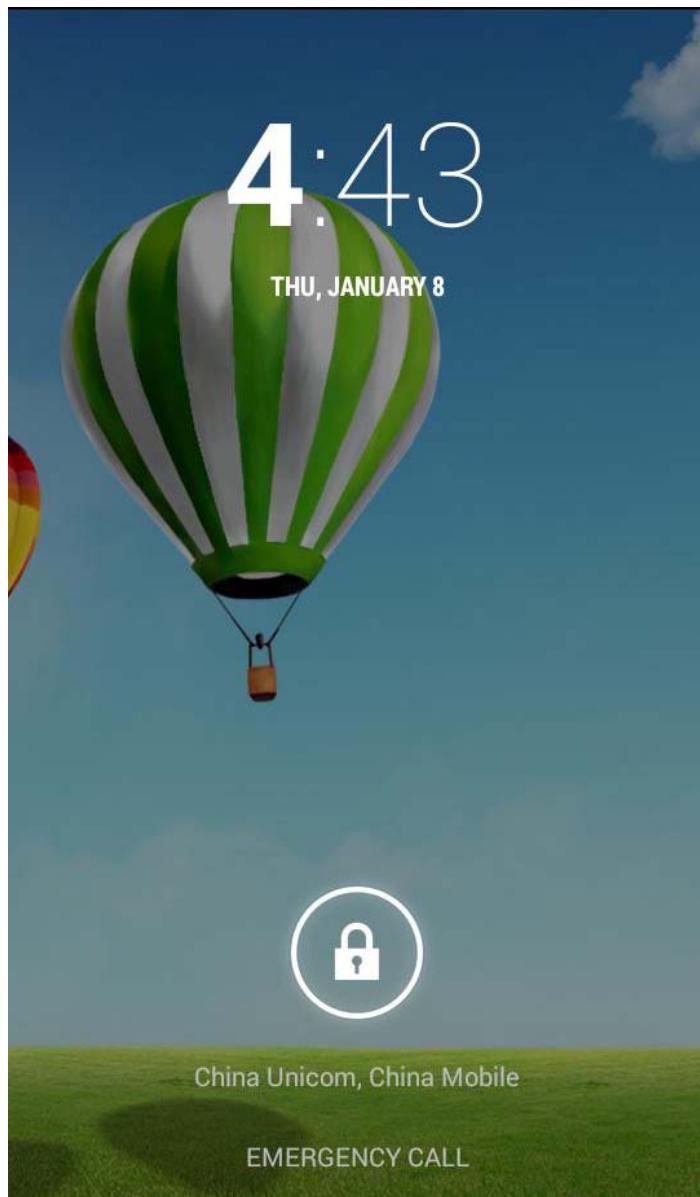

# Phone Function

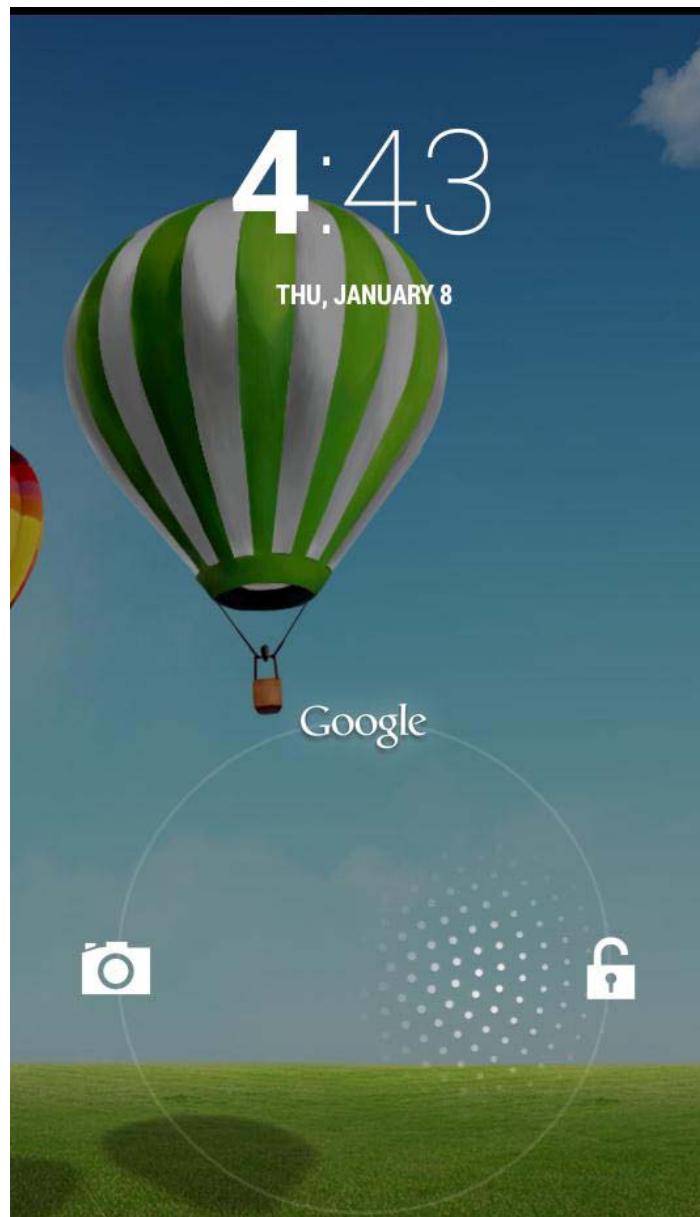


Unlock icon

## Status Bar

The status bar at the top of the screen contains icons that tell you about messages and phone status and shows what's going on in your phone. You can drag down the status bar to open the Notification panel and get more information. In the toolkits you can quickly start the common applications such as Bluetooth, Wi-Fi and so on.


# Phone Function

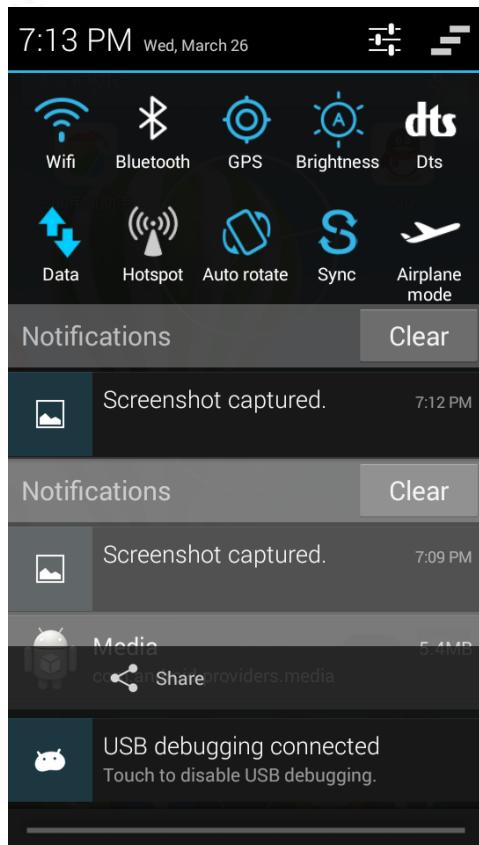

Touch to open the system settings

The Home screen is your gateway to the main features in your phone.

Notifications, Drag down to open the Notification panel

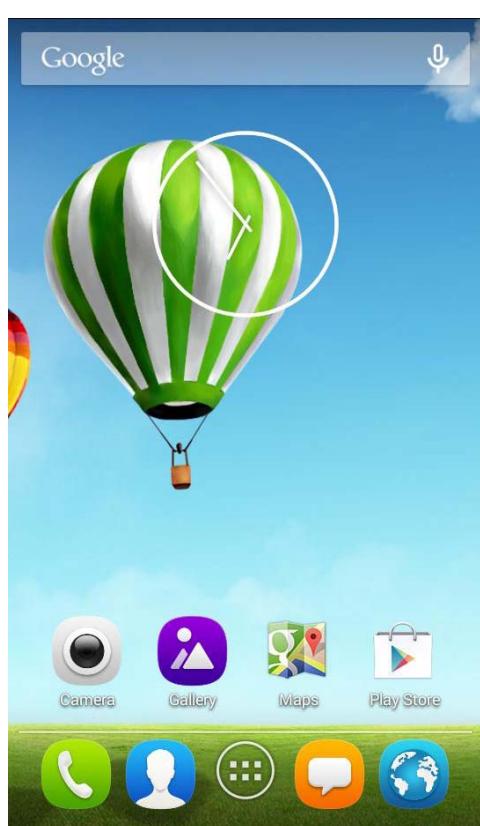


Status bar

Slide the Home screen left or right to view more content in other panels on the Home screen

Launcher  
Touch to enter Main menu  
Browse all the installed applications

# Phone Function

The phone provides you with Options menus.  
Touch the Menu Key to enter customizing:

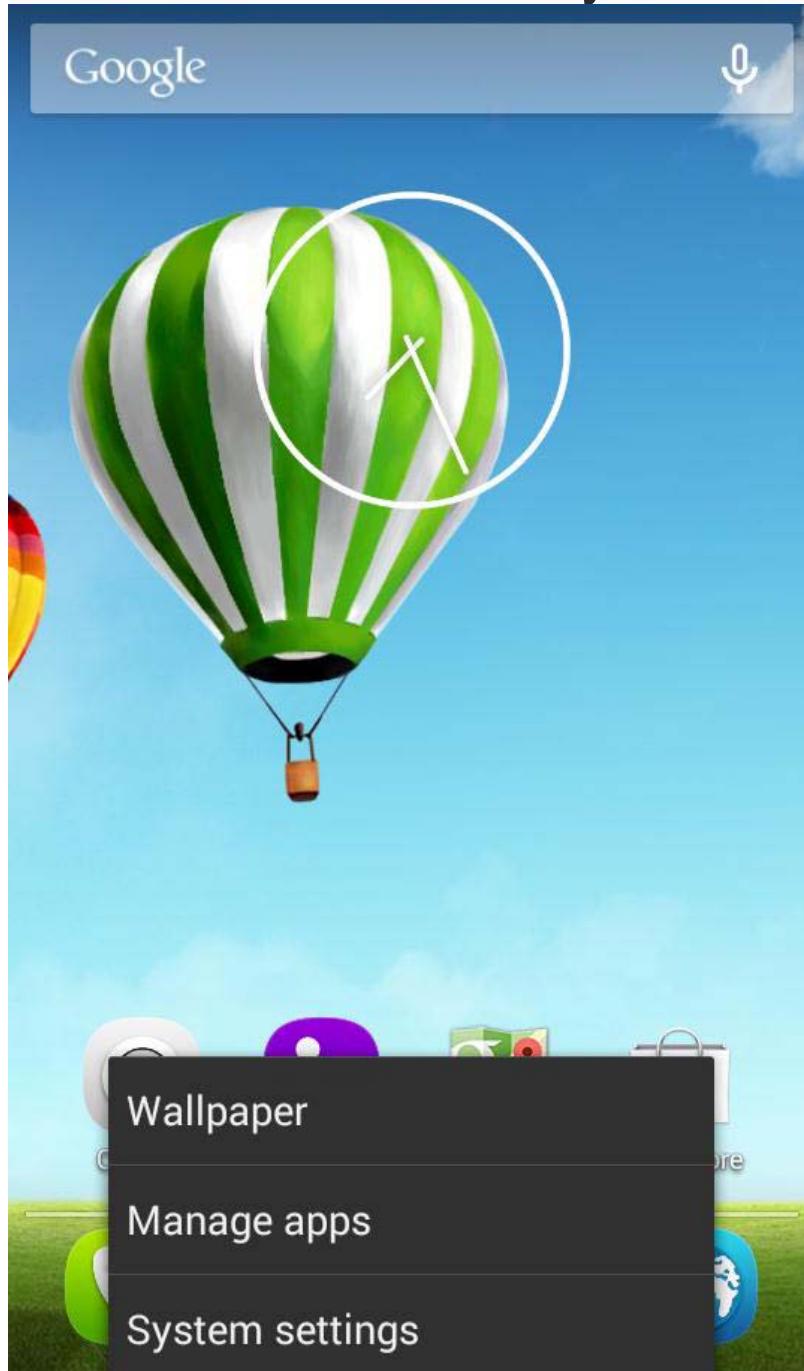

Making a Call

Touch to select a wallpaper, and set it as the wallpaper of Home screen


Touch to enter the Settings, and set the system preferences

Touch to enter the Apps, and manage applications

Touch  to enter the Dial pad.

# Phone Function

The phone offers you several ways of making a call. You can make a call through the Phone, People, Messaging and Call log.

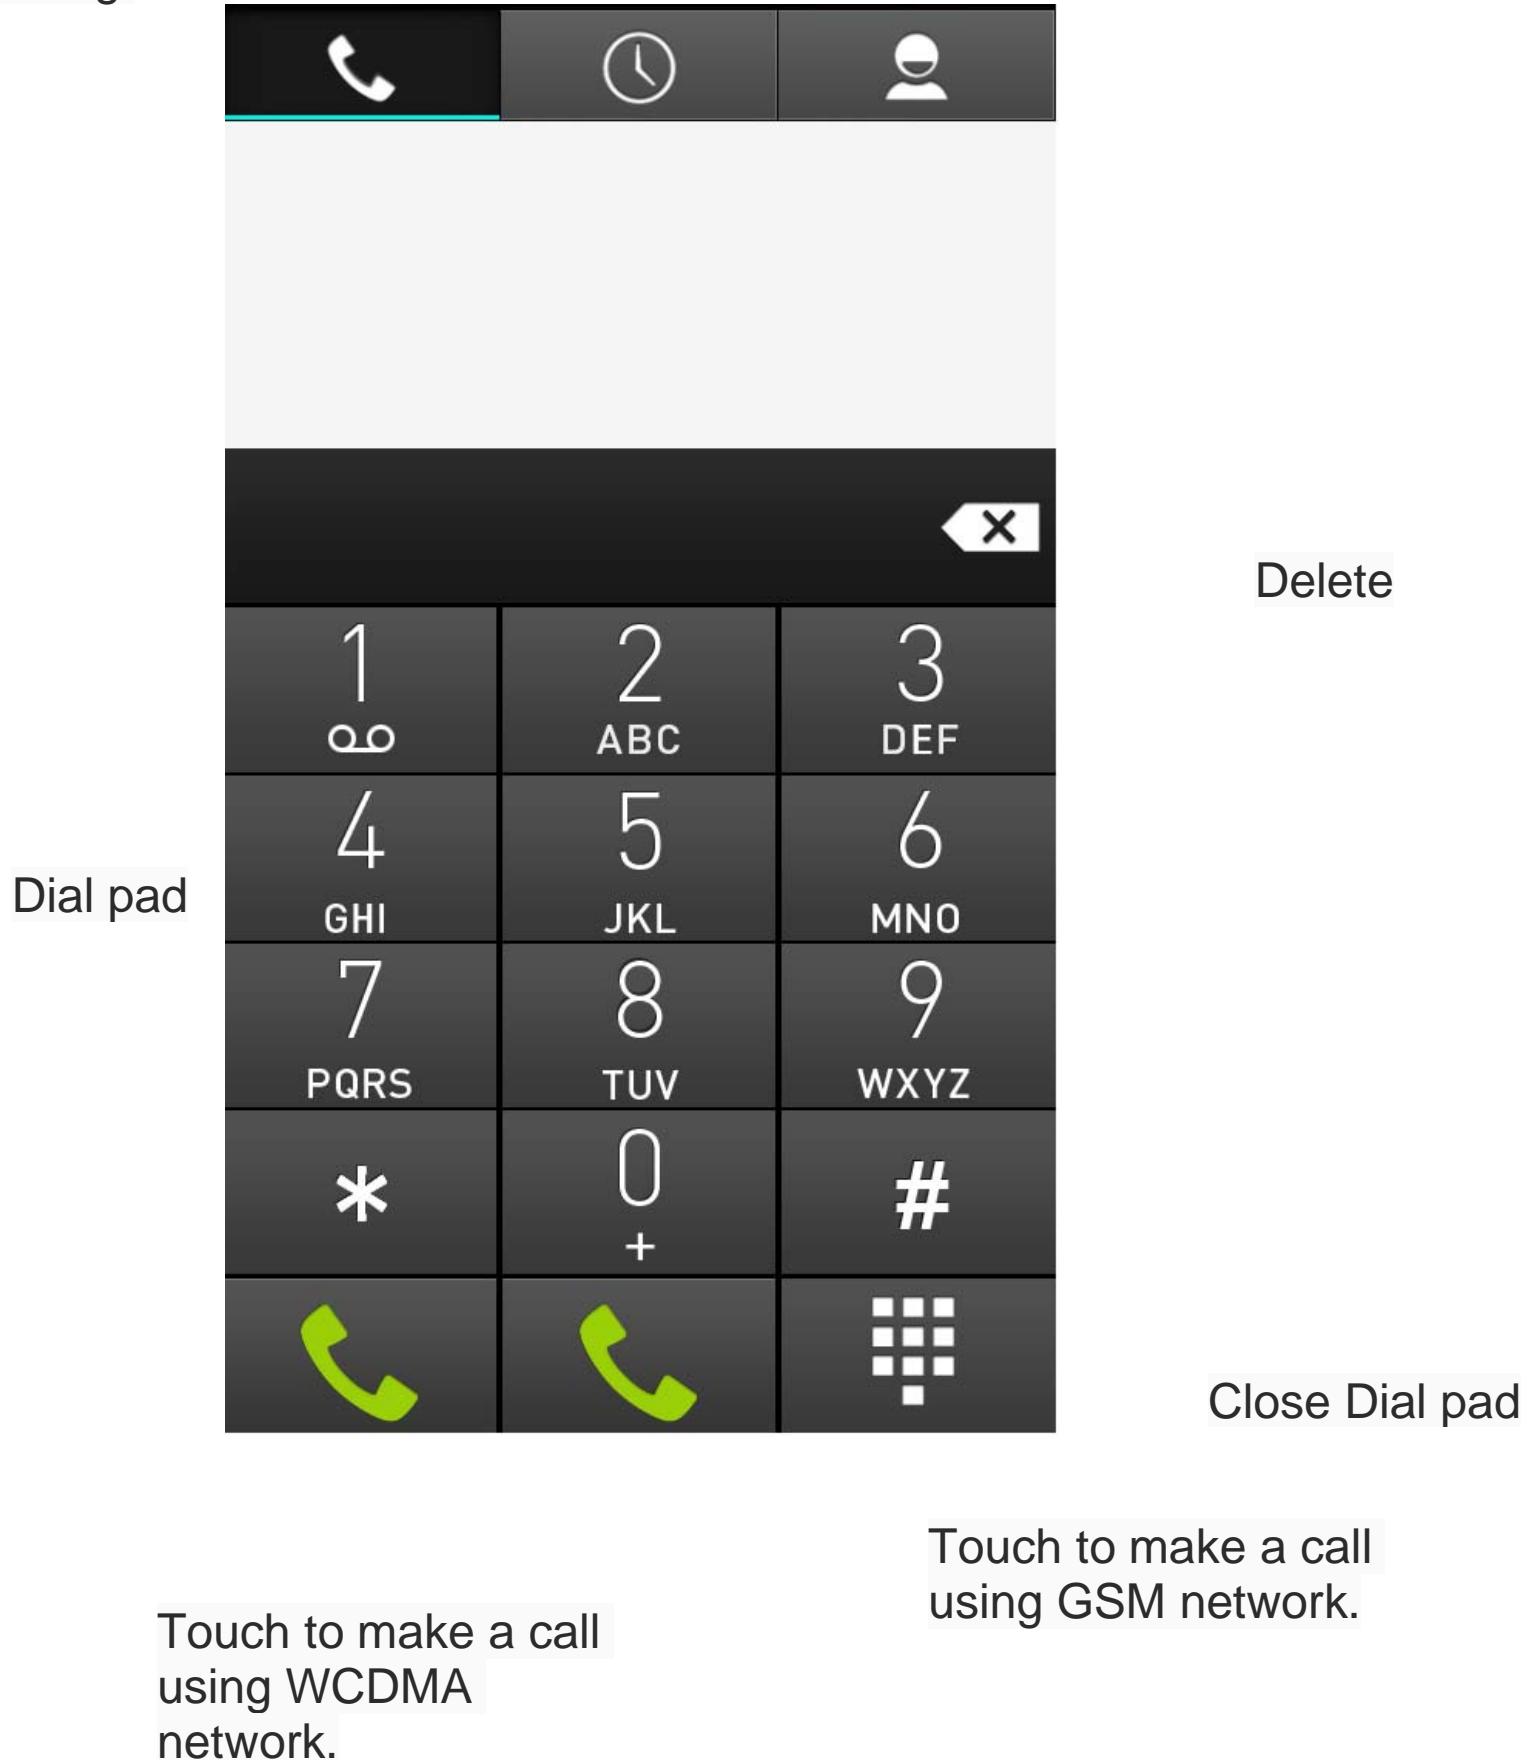


# Connecting to WLAN

## Connecting to WLAN

1. You can connect to the WLAN, and use it to surf the Internet at high speed and download.


Touch Launcher → Settings → WLAN.

2. Turn on the switch to activate WLAN.

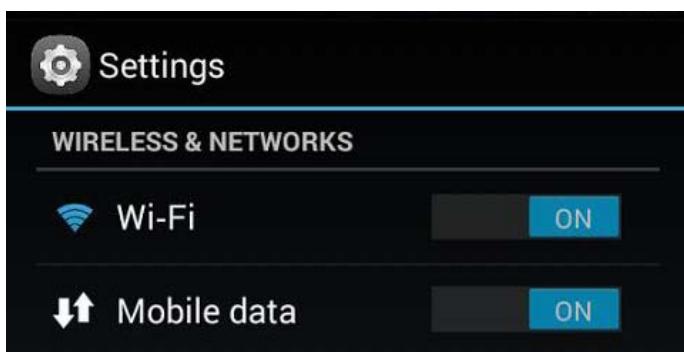


3. Touch WLAN.

4. Choose an available WLAN network to connect

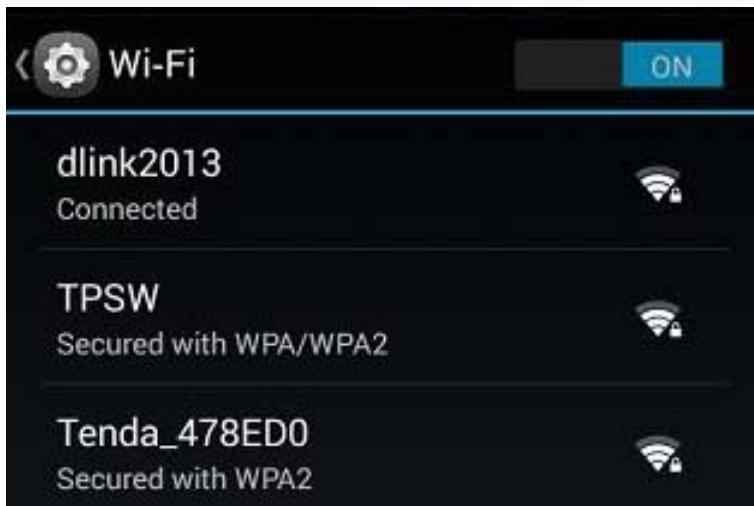

5. Secured networks are indicated with a Lock icon. If the network is secured, you are prompted to enter a password or other credentials (Ask your network administrator for details)

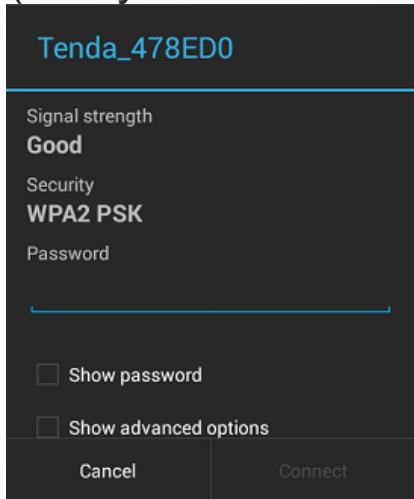


6. Touch "Connect".

# Accessing the Internet

## Using the Browser

Touch  to enter the Browser.


 [www.haier.com/us/products/h](http://www.haier.com/us/products/h) 

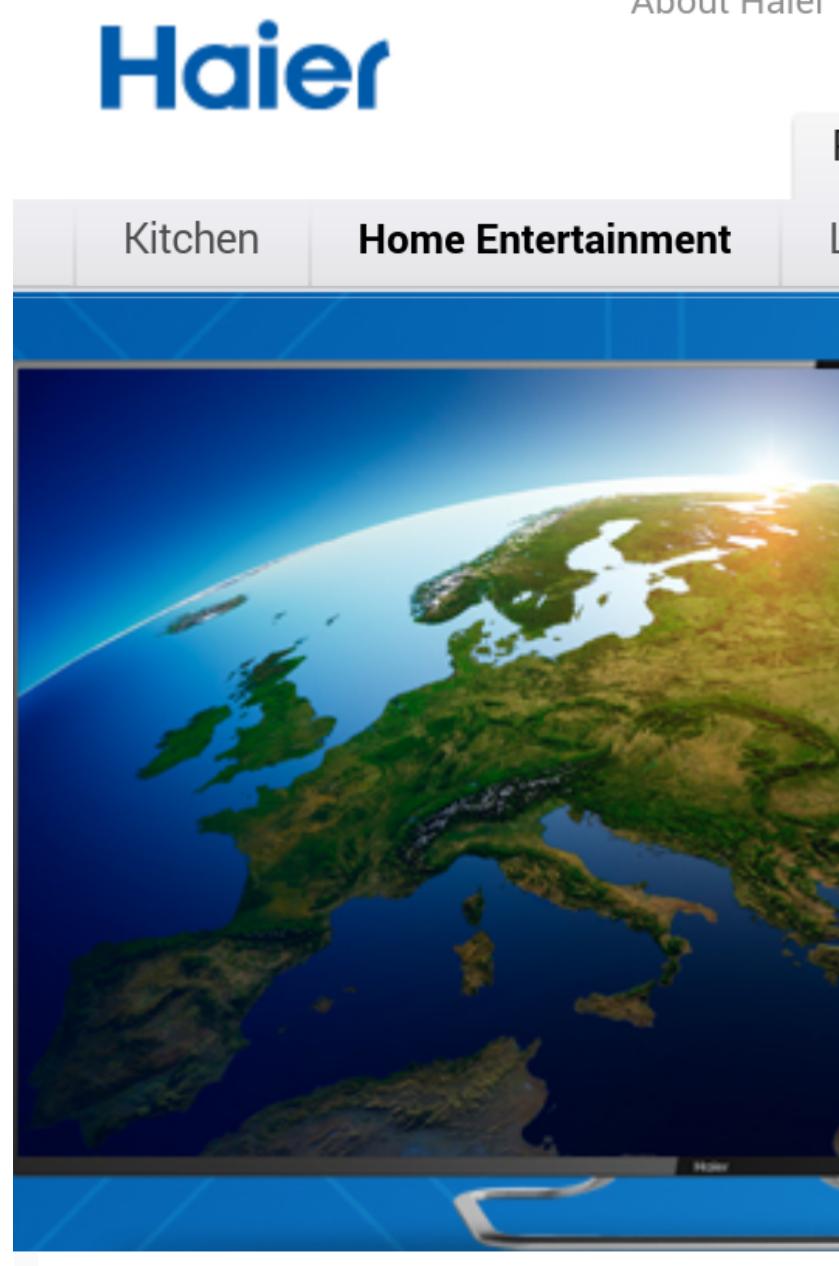

Touch to look through the thumbnails of all web page windows, and switch the web pages

# Accessing the Internet

When you are viewing the web page, touch the Menu Key, the following options are available to you:

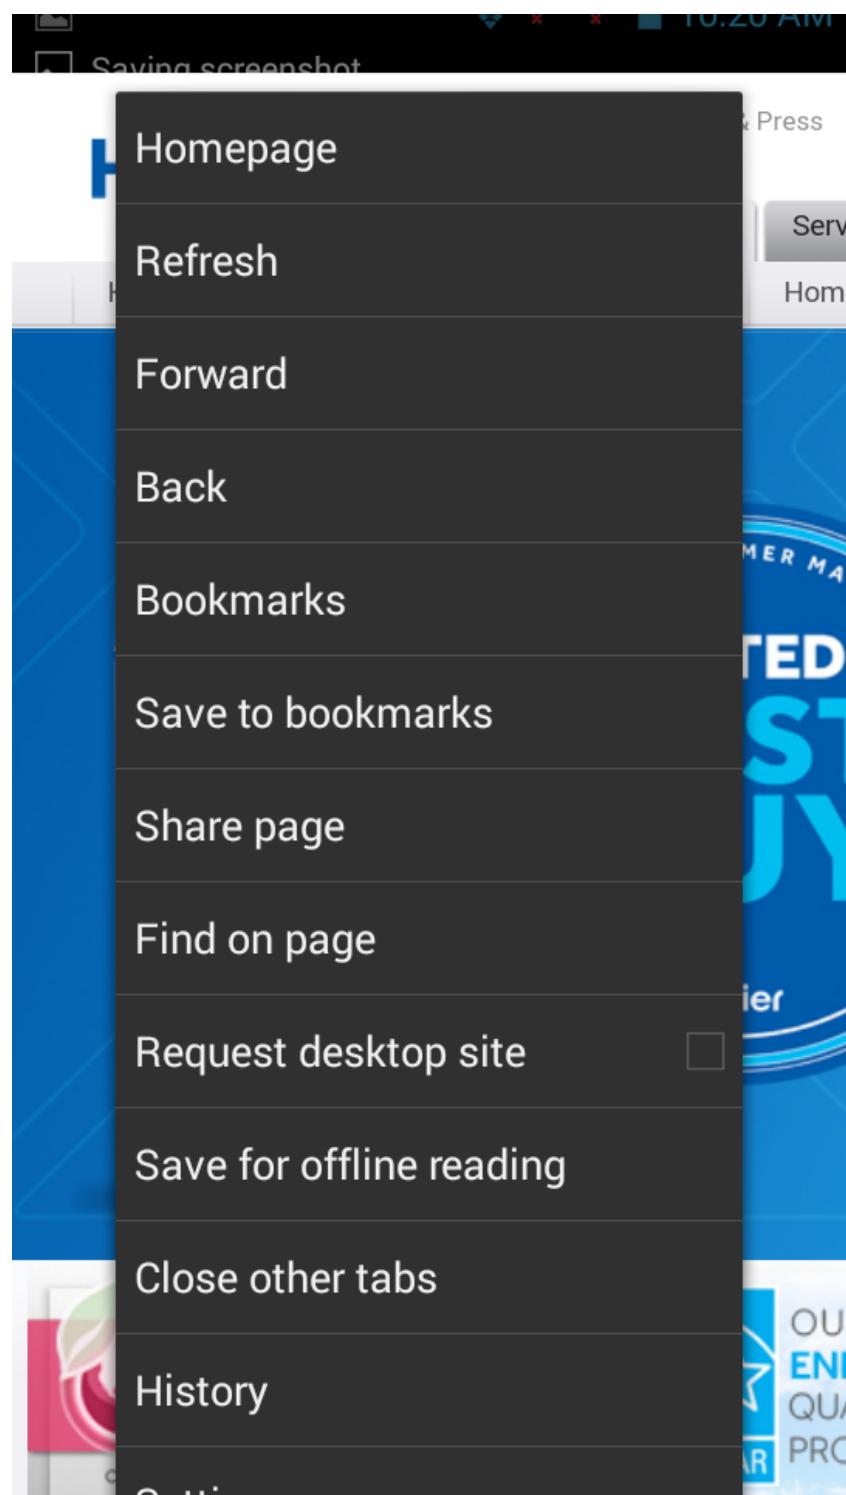

# Taking Pictures/Videos

## Taking pictures and videos

Touch  to enter the Camera.

Flash light switch  
button

Settings  
Quick  
function

Touch to  
select other  
option




Switch before the  
camera

Take picture

# Music Player

## Music Player


Touch  to enter Music.

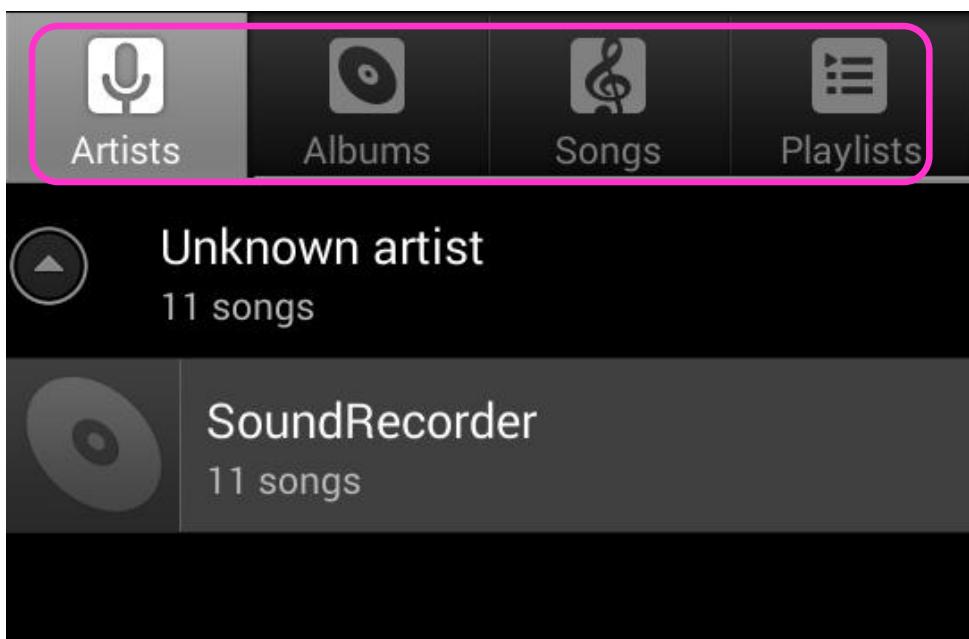

Categories  
Select Playlists,  
Artists, Albums,  
Songs, and so on

The playlist

Shuffle

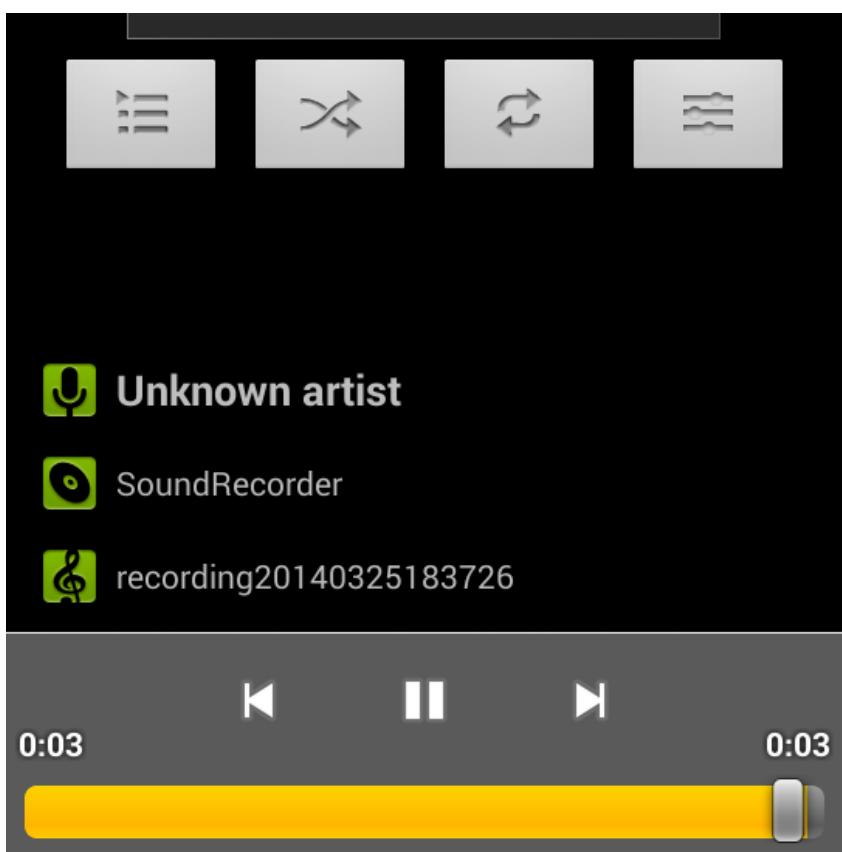

Repeat: Touch to repeat  
the all songs; touch again  
to repeat the current  
song

Play/Pause

Next song

Previous song

# Trouble Solution

Frequently Asked Questions	Cause and Solution
Fail to turn on	Press the Power Key for over 1 second. Check if the battery is properly connected. Please remove and install it again, retry to turn it on; Check if battery is appropriately charged.
Fail to connect network	Weak signal. Please try and move to a location with strong signal and try connecting to the network again; Please ensure that you are not beyond the network coverage of service providers; Please ensure you have a valid SIM card. Please contact your network provider for further information;
Poor quality of calling	Please check if the sound volume is tuned improperly In an area with poor receiving condition, example: basement, the signal might be weak. Try searching a location with stronger signal reception and call again. While using the mobile phone in the peak period of communication, like commute time, you may be unable to call because of line congestion.
SIM Card Error	Dirt on the metal surface of an SIM card. Use clean cloth to wipe the metal touch point on an SIM card. The SIM card is not installed. The SIM card is damaged. Please contact your network service provider.
Callers cannot contact you	Please check if the mobile phone is on and connected with the network. Please check if the Call barring or call divert is activated. Please check if the SIM card is valid.
Fail to set some functions	Wrong operation. The network provider does not support the function, or you have not applied for it.

# FCC Statement

---

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2)This device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate this equipment.  
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# SAR Statement

---

This phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure information and Statement the SAR limit of USA (FCC) is 1.6W/kg averaged over one gram of tissue. Device type (FCC ID: 2ADINNUUX1) has also been tested against this SAR limit. SAR information on this and other device can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. This device was tested for typical body-worn operations with the back and front of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's bodies. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided