

START-UP GUIDE

1. Assembling

1.1. Installing/ removing the battery

1) Installing the battery

With the top of battery (the terminal with pole) facing right toward the contacting points in the battery compartment, press the bottom of battery slightly until it enters into place; Slide battery cover forward along the side slot until it clicks into place.

2) Removing the battery

Long press end key to switch the phone off;
Slide downward the battery cover;
Use your nail to lightly lift the battery away.

1.2. Charging the battery

Your phone is powered by a rechargeable battery. When the battery is weak, the battery sensor informs you. At this time, you need charge the battery. When the battery becomes too weak for the phone to operate, it switches off automatically.

- 1) Open the cover of the multifunction jack on the top of the device.
- 2) Plug the small end of the travel adapter into the multifunction jack.
- 3) Plug the large end of the travel adapter into a power outlet.
- 4) When the battery is fully charged, unplug the travel adapter from the power outlet.
- 5) Unplug the travel adapter from the device.

6) Close the cover to the multifunction jack.

Note:

- (a) During charging, the phone can operate as usual. But the charging time increases.
- (b) Use only approved chargers and cables. Unauthorized chargers or cables can cause batteries to explode or damage your device.
- (c) While the device is charging, the touch screen may not function due to an unstable power supply. If this happens, disconnect the charger from the device.

1.3. T-Flash card use

1.3.1. Installing/Removing T-Flash card

This mobile supports the T-Flash card feature. Make sure that the T-Flash card has already inserted into mobile.

Make contacting points downwards. Ensure the angled corner is positioned correctly and slide the card into the carrier.

1.4. Inserting/Removing the SIM card

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card with subscription details, such as your personal identification number (PIN) and optional services. Contacting points downwards, Ensure the angled corner is positioned correctly and slide the card into the carrier;

Note:

- (a) Be careful when handling, inserting or removing the SIM card, friction or bending may damage SIM card.
- (b) If left unused, keep SIM card out of the reach of small children.
- (c) Keep SIM card away from static, dusty and water.
- (d) When inserting or removing SIM card, always make sure that the phone is switched off before you remove the battery. Or the SIM card memory might be damaged.

1.5. Power On or Off

Make sure the battery is already inserted:

1) Power On: Press and hold the POWER key to turn on the phone. After power on, the phone searches for your network automatically. Some SIM card is protected by the PIN number, if you are asked for inputting the PIN number, please enter it.

2) Power Off: Press and hold the POWER key until the power-off image display.

Note:

- (a) PIN is provided by your service provider. If the PIN is entered incorrectly three times, the SIM card is barred.
- (b) If the phone asks for an unlock code when switched on, enter the unlock code.

2. Phone Appearance and Keys

2.1. Physical Impression

Please refer to the image on the gift box.

2.2. Keys specification

Home

While on any application or screen, press to return to the Home screen. Press and hold to open the recent applications window.

Menu

Press to open a list of actions that you can do on the current screen or dialog box.

Back

Press to go back to the previous screen, or to close a dialog box, menu, or the notifications panel.

Volume

Press upwards or downwards to increase or decrease the volume. Slide down the key fully to enter vibrate mode.

Power

Long press to power on the mobile.
While not on a call, press and hold to open the phone options menu that allows you to turn off or switch your device to silent or airplane mode.
Press to lock the screen.
Press the key and volume down key to capture the screen.

2.3. Use the touch screen

Your device's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen.

To avoid scratching the touch screen, do not use sharp tools.
Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.

Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or when exposed to water.

A quick and easy way to interact with the Home screen and the whole interface of your device is by touch. Basically, the following are the types of actions, called finger gestures, which you would do when interacting with your device:

Touch: When you want to select items such as icons and options or press on-screen buttons, simply touch them with your finger. Apply some pressure with your finger pad when touching them on the screen.

Slide: To slide means to drag your finger vertically or horizontally across the screen.

Touch and hold: Touch an item and hold it for more than 2 seconds to open a pop-up option list.

Drag: Touch and hold your finger with some pressure before you start to drag. When the item magnifies and the device vibrates, drag your finger to any part of the screen to move the item, or drag to the Trash button to delete the item. While dragging, do not release your finger until you have reached the target position.

Double touch: Touch twice quickly with your finger to zoom in or out while viewing photos or web pages.

2.4. Lock or unlock the screen

2.4.1. Lock the screen

To lock, press POWER key.

To save battery power, the device automatically turns off the screen and locked when you leave it idle after a certain period of time.

2.4.2. Rotate the screen

The phone can detect direction by a built-in motion sensor. If you rotate the phone, the screen interface will be rotated with mobile phones automatically.

2.4.3. Unlock the screen

- 1) Press the POWER key to awake the screen.
- 2) Touch and drag the Lock icon to right to unlock, to left to enter the camera.

3) You can choose the type of Screen Unlock you want to use, from Pattern, PIN or Password. For more information, refer to "System Settings-Security-Screen lock".

2.5. Home Screen

After unlock the screen, user can see the Home screen. If a new SIM card is inserted, a prompt box of SIM card label and default SIM card settings will pop up, touch "Change" to change the settings. There are five shortcut functions on the bottom of idle screen. Touch and hold a shortcut key, you can delete it or drag it to other place; you can also drag the icon on the desktop to the shortcut location.

2.5.1. Add items to the idle screen

You can customize the Home screen by adding shortcuts to applications, widgets, folders, wallpapers, video wallpaper or theme.

To add items to the Home screen:

Application: Access the application mode. Touch and hold an application icon, and drag it to the Home screen panel you want. Release the application, the shortcut icon will be added to the Home screen.

Wallpaper: Set the background picture. Touch and hold the screen, select the wallpaper source.

Widget: Add widget. Desktop tool is a small application that can provide convenience features and information on the idle screen. In application mode, touch the "WIDGETS" tab, touch and hold a small tool, drag it to the Home screen.

2.5.2. Manage Home screen folders

Add a folder: in the home screen, touch and hold an application icon, drag it to another application to create a folder.

Rename the folder: in the home screen, click a folder, click the folder name on the bottom of the pop-up box, you can rename the folder.

Delete folder: in the home screen, touch and hold a folder, drag it to the "delete" position, you can delete the folder.

Move the folder to shortcut bar: in the home screen, touch and hold a folder, drag it to the quick shortcut bar.

2.5.3. Move items on the Home screen

1) Touch and hold an item to activate move mode.

2) Drag the item to the location you want when the item is magnified.

2.5.4. Remove items from the Home screen

1) Touch and hold an item. "Remove" appears on the top of the home screen.

2) Drag the item to the "Remove".

3) When the item and the "Remove" turns red, release the item.

2.5.5. Adding Shortcuts from Applications

1) Touch Applications .

2) Touch and hold on an application icon.

3) Navigate to a Home screen panel. Release the Shortcut icon.

2.5.6. Notification Panel

To display the Notification Panel, touch the indicator icons area on the top of the screen

and drag your finger downward to open the notification panel. To hide the panel, touch the bottom frame and drag your finger upward.

In the list, you can access notifications, such as messages, calls, events or processing status. You can also check current status of Wi-Fi, Bluetooth, GPS, Data connection and Airplane mode, and switch the status.

Slide left or right to set the screen parameter and current profile mode. When a user in one hand operation, the screen is too wide, the operation is not easy, click on "One hand easy" feature, left and right tilting the screen, the main screen can move, easy one hand to operate. Click again to close "one hand easy" feature.

Touch ; enter "Settings" interface.

2.6. Access applications

- 1) In idle screen, touch Applications.
- 2) Slide up or down to show other applications.

2.7. Customize your device

Get more from your device by customizing it to match your preferences.

2.7.1. Change the language

- 1) In idle screen, touch, select "System settings-Language & input-Language".
- 2) Select the language.

2.7.2. Set the current time and date

- 1) In idle mode, touch, select "System settings-Date & time".
- 2) Select the time zone, set the time and date and change other options.

2.7.3. Set SIM card information

- 1) In idle mode, touch, select "System settings-SIM management-SIM Information".
- 2) Touch the SIM card, edit SIM name, phone number, set SIM background colour and display numbers.

2.7.4. Set your ringtone

User can set the incoming call ringtone by default, or take the music in phone or SD card as ringtone.

- 1) In idle mode, touch, select "Settings-Audio profiles".
- 2) Touch the profile you need, such as "General".
- 3) Touch "Phone ringtone", touch the ringtone to listen, touch "OK".

If user wants to take the music in phone or SD card as ringtone, in idle mode, touch , select "Music", touch and hold one music file, shows the option list, touch "Use as phone ringtone".

2.8. Copy and paste text

While you are entering text, you can use the copy and paste feature to use text in other applications.

- 1) Touch and hold the text you want to copy until appears.
- 2) Drag the two icons to adjust the selected text.
- 3) Select to copy the text into the clipboard, or to cut the text.
- 4) In another application, touch the text input field.

5) Select "PASTE" to insert the text into the field.

The instruction of icons shows as below:

- Cut
- Copy
- Paste
- Check All

3. Calling

In any dialing interface, user can touch the tab at the bottom to switch function of Phone, Call log, Contacts and Favourites.

3.1. Making a Call

- 1) In idle mode, touch, show the dialing interface
- 2) Enter an area code and a phone number. Touch  to erase a wrong number. Touch and hold 0 key until character "+" appears, and

then you can dial an international number. Touch and hold 1 key to enter voice mail. Touch, save the number to phonebook.

- 3) Press Menu, you can operate the inputting numbers: Speed dial, Send message, People and Settings.

- 4) Touch, select SIM card to make voice call.

- 5) During the call, touch  to end the call.

Note: You can also touch Call log and People to quickly dialing.

3.2. Emergency Call

Only in GSM system coverage, you can make an emergency call, even though the phone is locked, without SIM card, or cannot enrol to the system.

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies. Check with local service providers to make an emergency call.

3.3. Answering a Call

When you receive a phone call from someone in phonebook, the incoming call

screen appears and displays the caller ID icon, name, and phone number of the calling party.

- Answer: drag  right to answer;
- Decline: drag  left to reject the call; drag  up to Decline by sms, the phone will send a default message to the caller. In dialing interface, touch "Menu- Settings - Other Settings - Quick Response ", you can edit the SMS contents.

3.4. Use options during a voice call

User can use the following options while a voice call is in progress:

- 1) To adjust the voice volume, press the Volume up or down key.
- 2) To put a call on hold, touch. To retrieve a held call, touch again.
- 3) To dial a second call, touch and then dial a new number.
- 4) To answer a second call, select "Answer" until it reaches the dot when a call waiting tone sounds. The phone asks whether to end or hold the first call. You must subscribe to the call waiting service to use this feature.
- 5) To mute the microphone during a call, touch.
- 6) To turn the speakerphone on or off, touch to toggle between turning the speaker phone on or off.

7) Touch Menu, "Start recording". You can listen the recording files in "Music-Playlist-My recordings".

8) To make a multiparty call (conference call), make or answer a second call and select merge when connected to the second party. Repeat to add more parties. You must subscribe to the multiparty call service to use this feature.

3.5. Use additional features

You can use various other call-related features, such as Speed dial, FDN mode, Call diverting or Call waiting.

3.5.1. Speed Dial

For the convenience of users dial, providing the speed dial feature on the phone, you can set up to 8 shortcut dial. In any call log or phonebook interface, touch "Menu-Speed Dial", after you set a phone numbers for quick dialing, under the dial pad, press the corresponding number key "2~9" to dial the corresponding phone number.

3.5.2. Use Fixed Dialing Number mode

In FDN mode, your phone will restrict outgoing calls, except for the numbers stored in the FDN list. To activate FDN mode:

- 1) In dialing mode, click "Menu-Settings-Other settings-Fixed Dialing Numbers", touch "Enable FDN".
- 2) When enable FDN, enter the PIN2 supplied with your SIM card and select "OK".

3) Select "FDN list", and add contacts to be used in FDN mode.

3.5.3. Set call forwarding

Call forwarding is as network feature to send incoming calls to another number that you specify. You can set this feature separately for several conditions when you are not able to answer calls, such as when you are already on the phone or when you are outside of the service area.

1) In dialing mode, click "Menu-Settings -Voice call-Call forwarding".

2) Select forward mode.

3) Enter a number to which calls will be forwarded.

3.5.4. Call waiting

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have set the Call Waiting menu option to activate. You will be notified of an incoming call by a call waiting tone. In dialing mode, click "Menu-Settings -Voice call-Additional settings-Call waiting".

4. Call Logs

You can view all calls, dialing calls, received calls and missed calls.

- 1) In idle mode, touch, select.
- 2) Touch, select SIM card.

- 3) Touch "All" view all logs, touch view dialing calls, touch view received calls and touch view missed calls.
- 4) Select a log, view the details. From the detail view, you can dial the number, send message to the number or add the number to the phonebook.
- 5) Touch and hold a log, you can dial the number, sending messages to the number, delete log, or delete all logs or add the number to the phonebook.
- 6) Press Menu, to delete log or set style of view and calling settings.

5. People

This feature allows you to store phone numbers and their corresponding names in the memory of your SIM card and phone's memories. In idle mode, touch, select "People".

5.1. Search

Enter the contact information you want to search. As you enter information, matching contacts will appear on the screen.

5.2. Import the contact from SIM card

- 1) In contact lists, touch "Menu- Import/export";
- 2) Select SIM card, touch "Next";
- 3) Select the copy place, touch "Next";

4) Waiting for loading the contacts of SIM card, select the contact, or touch "Selected", then select "Select all", touch "OK", import the contacts information.

5.3. Search

Enter parts of contact information you want to search, matched contacts will appear on the screen. In contacts list, touch to search the contact, enter the first few letters of the first or last name of the contact you are searching, matching contacts are displayed.

5.4. Adding a Contact

Learn to create and manage a list of your personal or business contacts stored on the phone's memory or a SIM card.

- 1) In contacts list, touch.
- 2) Select the store location, SIM card or phone. Or add a new account.
- 3) Input names, numbers, email, birthday and more of your contacts.
- 4) Touch "DONE", save the contacts.

Note : If add new entry to SIM card; there only need input name and number.

5.5. Delete contact

On the contacts list screen, press Menu key and select "Delete contact". On the Delete

screen, you can operate multiple choices, or Select all.

5.6. Groups

By creating groups of contacts, you can manage multiple contacts and send messages or emails to an entire group. Start by creating a group:

- 1) Touch tab;
- 2) Touch to add a group;
- 3) Choose to create a group account, touch the "Group's name", Enter the group name;
- 4) Touch "Type person's name", input the contacts, or touch, tick off the contacts, touch "OK".
- 5) Touch "Done" to save.

Note : Contacts which saved in SIM card cannot use group function.

5.7. More

5.7.1. Contacts to display

In contacts list, touch "Menu - Contacts to display". Select whether display only contacts in phones or SIM contacts, and sort list.

5.7.2. Accounts

In contacts list, touch "Menu - Accounts". You can add account and sync.

5.7.3. Share visible contacts

In contacts list, touch "Menu - Share visible contacts". Share the contact using BT, Email, SD card and message.

6. Messaging

Learn to create and send text (SMS) or multimedia (MMS) messages, and view or manage messages you have sent or received.

6.1. Create and send a message

- 1) At the Home Screen, tap into the Messaging log.
- 2) On the Messages screen, tap to compose new message.
- 3) Enter the phone number (the message recipient) in the field. Touch to select from Contacts. As you enter the phone number, matching contacts will appear on the screen. Tap a recipient or continue entering the recipient's phone number.
- 4) Tap the text box that contains the text, and then start composing your message.

- 5) If want sent a multimedia (MMS) message, tap you can select Picture, Video, and Audio from the following file attachments.
- 6) Tap to insert symbols. Press Menu to insert quick text, contact and subject.
- 7) When done, tap and choose SIM card to send the message.

6.2. Open and read a text message

Press home, then press and hold the status bar, slide it down to open the Notifications panel. Tap the new message to open and read it. On the All threads screen, tap the text message or message thread to open and read it.

6.3. Open and view a multimedia message

- 1) On the All threads screen, tap a multimedia message or message thread to open it.
- 2) Tap the Play button at the top of a multimedia message to view it.

7. Camera

With the phone camera feature, you can take picture at any time without carrying digital camera. Enter the menu, the display shows the preview image.

In idle mode, touch then select "Camera". Shown as below:

7.1. Capture a panoramic photo

This mode is convenient for photographing landscapes.

Switch to Panorama mode, press Camera key to take the first image and then move your

camera in one direction to overlay focus area to the square.

7.2. Shooting videos

When you open Camera, the preview screen orientation will depend on how you are holding the phone.

7.3. Closing Camera

On the Camera screen, press home or back.

8. Sound Recorder

You can record sound through the menu. The recording files are saved in the memory card. You can use the sound as phone ringtone or message tone; you can see and play the recording files in "Music - Playlists - My recording".

Voice Memos lets you use Phone as a portable recording device using the built-in microphone, Phone or Bluetooth headset mic, or supported external microphone. Recordings using the built-in microphone are mono, but you can record stereo using an external stereo microphone.

9. Music

Music plays digital audio files from the device's storage card. Music supports the following music file formats: MP3, AMR, WMA, MIDI, WAV, AAC, and OGG. All songs

that you capture on your phone are stored on the storage card.
In idle mode, touch, then touch Music.

9.1. Playing songs

You can display the audio playback controls from another app by press and hold the status bar, then slide your finger downward to open the Notifications panel.

Press the menu key until show the function list. Creating playlists: Use playlists to organize your music files. You can create as many playlists as you want on your phone. Tap add to playlist and select new, Enter the playlist name and then tap save, select a category to add songs from to the playlist. Setting a song as ringtone: tap set as ringtone.

9.2. Library

Your music is organized into different categories such as Artists, Albums, Songs and Playlists. Select a category by tapping one of the category tabs at the top of the screen. Tap a song in the category to play it back.

10. Browser

Learn to access and bookmark your favourite web pages. Web service requires a data connection. Contact your operator.

10.1. Browser basic operation

- 1) In idle mode, touch, select "Browser" to launch a specified homepage.
- 2) Touch on the upper side of screen, display all open Web pages, you can:
Touch on one of the pages to switch to that page.
Touch to close the page.
Touch to add a new page.

10.2. Open a Web page

An address bar appears on screen at the upper side in the Browser window.
Type the URL there.

10.3. Set the homepage

In the browser window, touch "Menu-settings-General- Set homepage".
Select a home page in the list, or click on the "other", enter the URL and click "OK".

11. Email

Learn to send or view email messages via your personal or company email account. Add an external e-mail account.

- 1) In idle mode, touch, then touch "Email".
- 2) On the Email setup screen, enter your email address and password, and then touch "Next".

- 3) The wizard automatically sets up your email account. If the email account you want to add is not pre-configured on your device, you will be prompted to manually enter the email account settings, such as the email server, protocol and more. Obtain this information from your email service provider.
- 4) After your account settings have been verified, display your Inbox.
- 5) While on the account Inbox, touch Refresh to update your Inbox.
- 6) Touch "Compose" to create an e-mail.

12. Calendar

Calendar makes it easy to stay on schedule. You can view individual calendars or several calendars at once. You can view your agendas by day, by month, or in a list. You can search the titles, invitees, locations, and notes of events. If you enter birthdays for your contacts, you can view those birthdays in Calendar.

Day: To display the day of calendar in days.

Week: To display the day of calendar in weeks.

Month: To display the day of calendar in months.

Agenda: Display all the agendas.

Press Menu key to add new event, Refresh, Search, Calendars to display, Clear events, Go to and Settings.

13. Clock

In idle mode, touch, then touch "Clock". You can see a time screen. There are four shortcuts at the bottom of the screen: Alarm, Picture show, Music player and Home.

In idle mode, touch, select "Clock". Touch  to set alarm. This feature is used to make phones ringing at a specified time.

- 1) In alarm list, select an alarm event. Or click  to add a new clock.
- 2) Click "ON" to turn on the alarm.
- 3) Touch "Time", up and down slide to set the alarm time, click "OK".
- 4) Touch "Label" to add the clock name.
- 5) Touch "Repeat", select the desired repeat date.
- 6) Touch "CESIUM", select the alarm ringtones. Select ringing tone in system, or select songs in the SD card as an alarm bell. First of all, add the music to ringtones, and then it will appear in the ringtones list. The method of adding music to ringtone refers to "Set your right tone".
- 7) Check the "Vibrate" box to set the phone vibrating when the alarm clock rings.

8) In the alarm list, press Menu, and select "Settings", select Style, Automatic home clock, Home time zone, Silence after, Snooze length, Alarm volume and Volume buttons.

14. File Manager

Find, view and manage files stored on an installed memory card. If the file is associated with an application on your device, you can launch the file in the application.

14.1. Create new folder

- 1) In idle mode, touch, select "File Manager".
- 2) Touch to create new folder.
- 3) Input folder name, select "OK", save the new folder.

14.2. Move or copy folder

- 1) Touch and hold the folder you want to move or copy. Or touch "selected", touch "Select All" or "Deselect All".
- 2) Select "Copy" or "Cut".
- 3) Select the location you want to move or copy to, touch to paste.

15. PC Connections

You can connect your device to a PC as a removable disk and access the file directory. If you insert a memory card in the device,

you can also access the file directory of the memory card by using the device as a memory card reader.

- 1) Insert the memory card in the device.
- 2) Attach your device to the computer with a USB cable. Your device recognizes the connection and displays USB connected in the Status Bar and Notifications Panel.
- 3) Touch "USB connected", at the USB Mass Storage prompt, touch Turn on USB storage".
- 4) Select "OK", start to use.
- 5) Open memory card folder, and copy files between your computer and the memory card.

To disconnect the device to the PC, click the USB device icon on the Windows task bar and click the option to safely remove the mass storage device. Then remove the PC data cable from the PC. Otherwise, you may lose data stored on the memory card or damage the memory card.

16. Install and Uninstall the Applications

Learn how to install and uninstall the applications.

16.1. Install the Applications

To install applications from a non-electronic markets, in the idle mode, touch, select the "Settings-Security", tick off "Unknown sources", mobile phone could install

applications that downloaded from non-electronic markets.

Install from SD card

- 1) Using the optional PC data cable, multi-function socket of the phone connected to the computer.
- 2) Copy the APK application that needs to be installed to the SD card.
- 3) In idle mode, touch, select "File Manager", find the location of APK program, select an application, touch "Install" to install the program to a mobile phone.

16.2. Uninstall the Applications

- 1) In application mode, touch and hold the application you want to uninstall, drag the icon to "Uninstall" on the top of the home screen, you can uninstall the application. Drag the icon to "Uninstall" on the top of the "App info" to view details of the program.
- 2) In idle mode, press Menu, select the "Manage apps", shows applications of Download, SD card and Running. Select applications you want to uninstall touch "Uninstall".

17. Settings

This section explains Settings for customizing your device. In idle mode, touch, select "Settings".

17.1. SIM management

Select SIM card. Select which SIM you will use by default when voice/video calls and data connection. Set roaming and associate contacts with a specific SIM card.

17.2. Wireless & networks

Enable/disable Airplane mode, WLAN, Bluetooth. Set WLAN, BT, VPN, Mobile networks.

17.2.1. Airplane mode

Flight mode allows you to use many of your tablet's features, such as Camera, Games, and more, when you are in an airplane or in any other area where accessing data is prohibited.

Note: When your tablet is in Flight Mode, it cannot access online information or applications.

17.2.2. Wi-Fi Settings

Learn to use your device' s wireless networking capabilities to activate and connect to any wireless local area network (WLAN) compatible with the IEEE802.11 a/b/g/n standards. You can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.

1) Touch "Wi-Fi" switch, enable Wi-Fi function.

2) Select a network from Wi-Fi network list, input password (if necessary). Select "Connect".

3) Touch "ADD NETWORK", add a new Wi-Fi hotspot SSID (Service Set Identifier).

Note: If you turn on Wi-Fi and mobile networks at the same time, Wi-Fi connected first. Mobile network will continue after the Wi-Fi is disconnected.

17.2.3. Bluetooth Settings

Bluetooth is a short-range wireless communications technology for exchanging information over a distance of about 30 feet. You do not need to line up the devices to send information with Bluetooth. If the devices are in range, you can exchange information between them, even if they are in different rooms.

1) Turn the Bluetooth wireless feature on.

2) In the Bluetooth interface, you can see the name of your Bluetooth device, touch the name, and let it visible to all nearby Bluetooth devices.

- 3) If you want to modify your device name, press, select "Rename phone", input the new name and select "Rename".
- 4) Search for available Bluetooth devices. From the list of scanned devices, touch the target device to pair, make sure the target device is showing the same passkey, and then select "Pair".
- 5) If the pairing is successful, touch and hold the file you want to send, select "Share-Bluetooth" in pop up menu, select the paired device and send the file.

Note: Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as 0000. If the other device has a PIN, you must enter it.

17.2.4. Tethering & portable hotspot

USB tethering: Select to active. You can tether your phone to your computer with a USB cable, to share your phone's internet connection with your computer.

Portable Wi-Fi hotspot: You can turn your phone into a portable Wi-Fi hotspot, to share your phone's internet connection with one or more computers or other devices.

Help: Learn more about USB and WLAN tethering.

17.2.5. VPN Settings

Set up and manage Virtual Private Networks (VPNs).

17.2.6. Mobile networks

Enable 3G service

If you insert a SIM card that supports 3G and needs to use 3G Internet access. In the "Settings - WIRELESS & NETWORKS - More - Mobile networks-3G service", touch "Enable 3G", select SIM card. If you only want to use 3G network, touch "Network Mode", select "WCDMA only".

Enable Data connection

Sliding down Notification Panel, touch "Data connection", select the operators to open GPRS or 3G services.

Note: Mobile network is a service provided by your network operator and may result in additional cost. Please consult your network operator for charges.

17.3. Audio profiles

Select different prompt mode for call, message, notification and feedback in different environment, and edit the profile. Predefined profiles are: General, Silent, Meeting or Outdoor.

17.4. Display

Customize the Lock screen notification, Brightness, Wallpaper, Auto-rotate screen, Sleep, Font size.

17.5. Storage

View the SD card & phone storage information.

17.6. Battery

Show the battery percentage and see the use details.

17.7. Apps

Manage applications and sources. View running services and set options for application development.

17.8. Location

Set the use wireless or GPS satellite for finding your location. You can view locations at street level.

17.9. Security

Screen unlock: Set unlock mode, such as pattern, PIN or password.

Lock SIM card: Activate or deactivate the PIN lock feature to require the PIN before using the device.

Change SIM PIN: Change the PIN used to access SIM card.

Visible passwords: By default, the device displays your password as "•" for security. Set the device to display your password as you enter.

Select device administrators: View device administrators installed on your device. You can active device administrators to apply new policies to your device.

Unknown sources: Select to download applications from any source. If you do not select this option, you can download applications only from Android Market.

Credential storage:

Use secure credentials: Use certificates and credentials to ensure secure use of various applications.

Install from SD card: Install encrypted certificates that are stored on a memory card.

Set password: Create and confirm a password for accessing credentials.

Clear storage: Erase the credential contents from the device and reset the password.

17.10. Backup & reset

DRM reset: Delete all DRM licenses.

Factory data reset: Erase all data from your phone's internal storage.

17.11. Date & time

Enable/disable Use network-provided time, or set the time, time zone and date manually. Select hour and date format.

17.12. Schedule power on/off

Set Schedule power on/off time. You can set two items.

17.13. Accessibility

Enable/disable Power button ends call and Quick boot.

17.14. About phone

View the system information of phone.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types Entertainment Tablet (FCC ID: 2ADIZ-X45) has also been tested against this SAR limit. The highest reported SAR values for head, body-worn accessory, product specific (wireless router), and simultaneous transmission conditions are 0.35 W/kg, 0.56 W/kg , 0.67 W/kg, and 0.68 W/kg respectively. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.