

User's Manual of Mobile Phone

SAFETY PRECAUTIONS

Before using your phone, please read the following important information to eliminate or reduce any possibility of causing damage and personal injury

	Do not use wireless phones while driving.
	Switch off wireless devices in aircraft. The signal may cause interference. Using them on aircraft is illegal.
	Do not use mobile phones where blasting is in progress. Follow regulations and rules strictly.
	Do not use mobile phones at a refueling point. Don't use near fuel or chemicals
	Follow regulations or rules in hospital and health care facilities. Switch phone off near medical equipment.
	All wireless devices may get interference that could affect performance.
	Only qualified service personnel can install or repair this device.
	Use only approved accessories and batteries.
	Use only in normal conditions. Do not expose your phone to extreme high temperatures above +60° (+140°F). Do not use anything static to clean your phone.
	Ensure the phone is turned on and in service. Enter the emergency number, then press Pick Up key. Give your location. Do not end the call until told to do so.

Improper use will invalidate the warranty! These safety instructions also apply to original accessories.

- a) Use a wireless hands-free system (headphone, headset) with a low power Blue tooth emitter.
- b) Make sure the cell phone has a low SAR.
- c) Keep your calls short or send a text message (SMS) instead. This advice applies especially to children, adolescents and pregnant women.
- d) Use cell-phone when the signal quality is good.
- e) People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.

CONTENTS

1	PREFACE	5
2	QUICK START GUIDE	6
2.1	ICONS	6
2.2	INSERT SIM CARD AND BATTERY	6
2.3	INSERT MEMORY CARD.....	7
2.4	BATTERY CHARGING	8
2.5	POWER ON AND OFF	9
2.6	SHORTCUTS USE.....	9
3	BASIC FUNCTIONS.....	10
3.1	MAKE AND ANSWER CALLS.....	10
3.2	MESSAGING.....	12
3.3	CAPTURE AND VIEW PHOTO OR VIDEO.....	14
3.4	CAPTURING AN IMAGE.....	14
3.5	CAPTURING A VIDEO	15
3.6	CONNECT TO THE INTERNET	15
4	MAIN MENU.....	16
4.1	BROWSER.....	16
4.2	CALCULATOR.....	16
4.3	CALENDAR.....	17
4.4	CLOCK	17
4.5	DOWNLOADS	17
4.6	EMAIL.....	17
4.7	FILE MANAGER.....	18
4.8	FM RADIO	18
4.9	GALLERY	19
4.10	GMAIL.....	19
4.11	MAPS.....	19
4.12	MUSIC.....	20
4.13	PEOPLE.....	20
4.14	PHONE	21
4.15	PLAY STORE	21
4.16	SEARCH.....	22
4.17	SOUND RECORDER	22
4.18	VIDEO PLAYER	23
5	SETTINGS.....	23
5.1	WIRELESS & NETWORKS:	23
5.2	UNDER THE DEVICE CATEGORY:.....	26
5.3	PERSONAL CATEGORY:.....	28
5.4	MORE	31

1 Preface

Thank you for choosing this mobile phone.

This device will offer you an unprecedented surprise for it can support dual SIM but single standby. Meanwhile, this phone is equipped with a 3 megapixel HD digital camera, a MP3 Mobile Music and a MP4 video player. Enjoy yourself!

Safety

Please go through, and comply with, the following considerations before using this phone.

- ◆ Please take earphone if making or  Answer incoming call while driving or after your car is parked.
- ◆ Anyphone may be susceptible to  interference, which could affect performance.
- ◆ Please use the original battery and  accessories in order to have optimal performance and prevent phone damage. Please don't use unmatched products.
- ◆ To avoid interference with blasting work, please turn off the phone on the  site or where two-way radio must be switched off. Please observe the local rules.
- ◆ If your phone needs to be connected with other device, please read the User Guide of the latter.
- ◆ Please copy or keep a written copy of  the vital information stored in your phone.
- ◆ The phone may interfere with aircraft telecommunication. So please turn it off or switch to flight mode during the flight. 
- ◆ Please turn off your phone near the medical equipment or in the medical facility where anyphone must be out of service. 
- ◆ Please turn off your phone in the gas station or near fuel or chemicals to prevent explosion. 
- ◆ Burning or disposing of phone battery as usual is prohibited, or it may cause life risk or environmental pollution. Please dispose of and recycle it in compliance with the local environmental regulations. 
- ◆ Some small components (e.g. memory card, etc.) shall be out of children's reach; otherwise it may be swallowed or cause other hazards. 
- ◆ Ensure the phone is turned on and within the service area. Enter the emergency number, press the talking key to tell your location. Please don't end the call without permission.

2Quick Start Guide

2.1 Icons

After this phone is turned on, the main screen shows as follows:

Icon	Function	Icon	Function
	Intensity of network signal for Card1 & Card2. The more bars, the more intensive; Open “Flight Mode” menu by touching it.		Flight mode
	Network mark of SIM1 and SIM2; Open “SIM Card Settings” menu by touching it.		Show battery capacity. The more bars, the more powerful; enter “Battery Capacity” menu by touching it.
	Network mark of Cards 1 & 2; Open “Network select” menu by touching it.	 	Call transfer set for Cards 1 and/or 2; enter “Call Settings” menu by touching it.
	Alarm on		Earphone mode
	Message		SMS full
	New broadcast		Message Settings
	Profiles (as refer to mute mode)		Profiles(as refer to Low ringtone mode)
	Profiles(as refer to High ringtone and vibrate mode)		Profile (as refer to vibrate mode)

2.2 Insert SIM card and battery

- Long press the power key for 3s to turn it off;

- Remove the back cover from the gap at the end side of the phone;

Remove the battery. Insert SIM1 (per the mark “**SIM1**” on the card slot. The contactor shall face down (note the notch on the SIM card is in line with the slot). Push the SIM card inwards from the card slot until it absolutely fits the slot. Insert SIM2 in the same manner.

Insert the battery with metallic contact aligned to the phone battery contact and replace the back cover.



Note:

1. This User Guide is designed for both SIM cards inserted by selecting **[Settings→Network→SIM Management]**. If only one card is inserted or no Dual SIM dual standby is set up, the screen and options may differ from this manual.

2.3 Insert memory card

This phone supports the T-Flash memory card. After it is inserted, you can browse or copy, etc. the files stored in the memory card. Also, the disk space of this phone can be expanded.

- Remove the back cover and battery;
- Let the side of the memory card bearing metallic contact face down, insert the narrower end into the slot until absolutely fitted by it, and replace the back cover.



Warning:

Please don't insert or remove the memory card quickly or frequently to avoid damage.

2.4 Battery charging

The phone battery may be charged with travel charger.

- Insert the battery in the phone correctly;
- Charging port is at the right side of this device below the screen, let the charger arrow towards the screen, insert the charger plug into the screen, and connect the charger to the standard power supply socket.

After the charger is inserted, the battery intensity icon on the upper right of the screen, When icon began to dynamic change, which means the battery begins charging. When it is charged full, the icon stops running and the battery icon on the screen comes full.

- After charging is over, cut off the connection between the charger and the standard power supply socket and then that between this device and the charger by pressing the buttons on both sides of the charger.



Note:

1. Please use the standard matched battery and charger to prevent explosion.
2. If the battery is absolutely of no power, the battery icon will appear 2~3min after charging. Charging may take 2~5h depending on the current condition of this device (whether it is started, any call is made, etc.).
3. Please use charger to charge this device. USB wire charging shall be avoided if possible.
4. In order to help the new battery perform best, it shall complete 2~3 charge-discharge cycles. Its initial chargings shall last for more than 10h unceasingly for each.

2.5 Power on and off

2.5.1 Power on

- Long press the power key for 3s to turn on this phone.

2.5.2 Power off

- Long press the power key for 3s to turn off this device.



Warning:

Please don't turn on this phone where it is prohibited or using it may cause interference or danger. In this case, please ensure this phone does not activate the regular power on/off or other functions.

2.6 Shortcuts use

When this device is standby, you may activate some functions quickly if pressing

some key.

Key	Operation	Function
Shortcut 1	Long press	Enter the SIM1 or SIM2 voicemail
Shortcut 2~9	Long press	Enter reventant quick dial , about quick dial

3 Basic Functions

3.1 Make and Answer Calls

3.1.1 Make a Call

Option 1: On the Home Screen tap  → choose the Phone tab → enter phone number → tap .

Option 2: Tap  →  → enter phone number → tap .

Option 3: Tap  → Contacts → tap name of selected contact

: Tap  to erase incorrect digits.

3.1.2 Dial an International Call

For international calls, type (+) followed by the country code and then the complete number.

(+) (Country Code) (complete phone number) then tap .

: Tap and hold  to type "+" and then type the country code, the area code and the telephone number. Then tap the telephone icon to connect.

3.1.3 Dial an Emergency Call

This phone operates using radio signals, wireless and landline networks, but cannot guarantee connection in all locations at all conditions. It is not advisable to rely solely on wireless phones to make emergency calls. To make an emergency call:

Switch your phone on.

Dial emergency number and tap Call.

: Some networks may require that a valid SIM card is properly inserted in the phone before making an emergency call. Emergency numbers vary in every country. Emergency calls may not work in all locations due to network and interference issues. Emergency numbers vary in every country. Emergency calls may not work in all locations due to network and interference issues.


3.1.4 Answer / Reject an Incoming Call

When you receive an incoming call, a notification message appears on the screen.

To accept call, drag  towards 

To reject, drag  towards 

Drag  towards  to send a message instead.

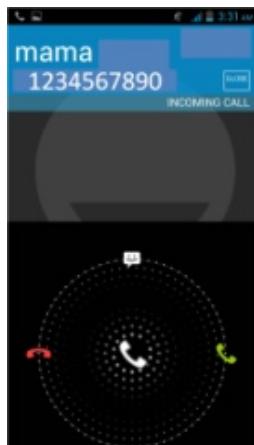


3.1.5 Adjust the Volume

During a call, press the Side Keys to adjust the volume.

Options During a Call

-  - Launch/Hide Dial Pad
-  - Turn speakerphone on/off
-  - Mute
-  - Put a call on hold
-  - Add current call's details to contacts.

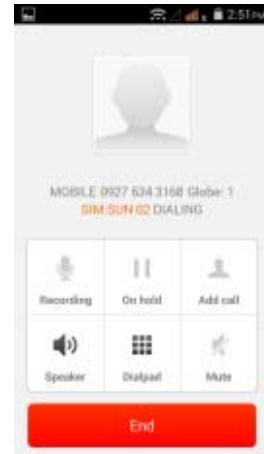

3.1.6 Manage Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing. To manage your contacts, go to  → Contacts [].

 
-  - Create contact. Choose storage → fill out fields → tap Done.
-  - Search. Type name or number of contact you wish to find → Next.
-  - Groups. To add a group, tap  → type group name → insert group members → Done.
-  - Favorites. To add contacts to Favorites, tap chosen contact from list. Then, tap  on the upper right corner of the screen.



3.2 Messaging

To create and send message from home screen, tap

Tap the new message  icon at the bottom left part of the screen.



In TO field, type the recipient's phone number OR tap  to search from contacts.

Type message in the Type message field using the on screen keyboard.




Tap  to insert smileys, etc.

Tap  to send.

: To send MMS, add an attachment to the text message by tapping  and the SMS will automatically be sent as an MMS. Likewise, if the user removes the attachment, the message is reverted back to being sent as SMS.

Message Threads

Instead of inbox, outbox and sent folders, your phone organizes all your messages into “threads,” where messages exchanged with the same number are grouped into a conversation-like folder. Tap a thread to view all messages you had with a certain number or a group.

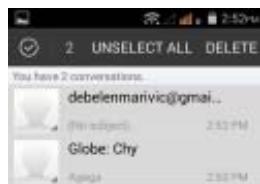

Delete a thread / message

To erase a message tap and hold a specific message → Delete.

To erase an entire thread,

Tap and hold a thread → select conversations to erase → tap



 - select all

 - remove select


 
You can speak to enter text in most places that you can enter text with the onscreen keyboard.

Touch a text field, or a location in text you've already entered in a text field.

Touch the Microphone key on the onscreen keyboard.

When you see the microphone image, speak what you want to type.

Say “comma,” “period,” “question mark,” “exclamation mark,” or “exclamation point” to enter punctuation.

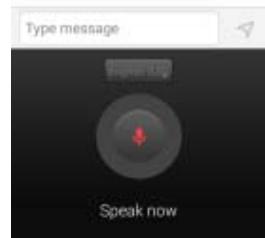

3.3 Capture and View Photo or Video

This mobile phone is equipped with a digital camera that lets you take photos and videos whenever and wherever you like. To capture images, go to → .



3.4 Capturing an Image

Aim the phone at the subject, then tap to take a shot.

- View recently captured image

- Switch to front camera

Swipe the panel on the left side of the screen to adjust settings.

- HDR - Flash mode - Panorama

 - Camera settings including: ZSD, Store location, Continuous shot, Exposure, Self-timer, Sharpness, Hue, Saturation, Brightness, Contrast, Picture size, ISO, AE Meter, Anti-Flicker and Restore default settings.

3.5 Capturing a Video

On Camera mode, tap 

Aim the phone at the subject.

To start/stop recording, select .

 - switch to front camera.

 - launch settings.

3.6 Connect to the Internet

Connect to a wireless network to browse Internet.

Swipe down Notifications panel →  → 

 →  → .

Tap Wi-Fi to display available networks.

 If network connection is successful, the icon  will appear on the status bar.

Some Wi-Fi networks are secured and may prompt you to enter a password before access. Enter the correct security password and tap “Connect.”

4 Main Menu

The Main Menu displays all the applications your phone has. You may access the Main menu by tapping on the Menu icon [⋮] from the Home Screen.

4.1 Browser

To surf the Internet on your phone, go to [⋮] → Browser.

Tap the address bar → type in desired URL → GO

: To change the homepage, tap Menu Key → Settings → General → Set Homepage → choose from options.

Tap Menu Key to access more functions, such as bookmarks, history and others

Tap [⋮] to view all active browsers.



To bookmark a page, tap [⋮] → [★]

To open new tab, tap +

4.2 Calculator

This mobile phone is equipped a calculator to facilitate simple computations using the 4 basic functions. To access, go to [⋮] → Calculator. Tap Menu Key on the Calculator's interface and an advanced panel will pop up for more complex calculations. Enter the numbers using on-screen keyboard and choose the desired operation. Tap Del for corrections and [=] to get the output.

4.3 Calendar

The Calendar application shows the current date/month, and lets you organize your schedule by allowing you to add, edit, delete and view events. You may also add appointments and notes as reminders. Go to  → Calendar. Tap Menu Key for options.



4.4 Clock

This function shows the current time and date, and gives you access to the alarm clock.

Go to  → Clock

Tap  to edit alarms. Tap World Tip to launch the world clock.. Tap Stopwatch for stopwatch. Tap Timer for timer.

4.5 Downloads

This allows you to view a list of downloaded files and apps stored in the internal storage, and those currently being downloaded.

To manage Downloads, go to  → Downloads.

4.6 Email

Send and receive e-mails on your phone. Tap  → Email → set up an account by entering an existing email address and password.

4.7 File Manager

The File Manager lets you view, open and manage the data saved in your phone and Memory card. Go to  →  → choose from Phone Storage / SD Card.

 - Search item

 - display options

 You may also press and hold a folder or file for further options.

4.8 FM Radio

To listen to the radio, go to  → .

 - Switch to loudspeaker

 - Play/stop FM radio

 /  - Fine tune channel

 /  - Search the channel list

 - View channel list

 - Display options: Search channels, Record, Exit FM Radio



 A headset must be connected for the FM radio to work. Press side keys to adjust volume.

4.9 Gallery

To view captured images, recorded video clips, and downloaded images,


Go to  → .

Click on a thumbnail to launch an album.

Tap and hold an image to share (via MMS, Bluetooth, Google+, Email, Gmail or Facebook), delete or view details.

You can also tap  to share photo.

Tap  to edit photo. Tap Menu Key to display other options.

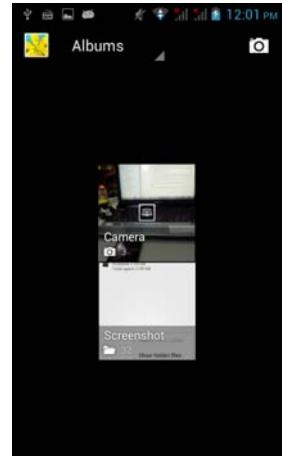

4.10 Gmail

Gmail is Google's web-based email service that allows you to compose, send and receive messages on your phone. Depending on your synchronization settings, Google Mail on your device is automatically synchronized with your Google Mail account on the web. To access this, go to  → .

4.11 Maps

This function allows you to view or find your current location, get directions and other information regarding different places. Go to  → .

To zoom in, double-tap a location.

To scroll, swipe the screen up, down, left or right with your fingertips.

Tap an icon to display information regarding a location.

4.12 Music

Use the Music to play music and audio files. Go to  → .

The songs are categorized into tabs: Artists, Albums and Songs.

To create a playlist, press & hold chosen song → Add to Playlist.



- Displays playlist



- Shuffles tracks



- Repeats playback



- Plays previous or
next track



- Play/pause song



4.13 People

This menu refers to the directory where all the contacts are stored in alphabetical order. You can view, edit, delete, send messages and perform various other functions on each contact in your phonebook. The People menu allows you to store, locate and view your saved contacts. Aside from these, People also allow you to copy edit and delete a contact. Go to  → .

: You can also send SMS / MMS or call a contact directly from People, as well as store several details (e-mail, pictures, phone numbers, etc.) for each contact if saved in the phone's memory.

For related information, see 'Manage Contacts' on page 11.

To import contacts from email to phone or the other way around

Go to  → .

Tap Menu Key → Import/Export.

Select where to import and export → Next

Mark contacts to import/export → Copy.



: You may choose “Select All” if you are trying to import/export all your contacts

4.14 Phone

The Phone menu has three tabs. The Dialer, Call Log and Contacts tabs.

To access this, tap on the Home Screen.

The Dial tab directs you to the dial pad where you can make calls. Please refer to “Make A Call” on page 10 for related information. The Call Log tab gives you access to your phones call history. To view this, tap the Call Log tab at the top part of the screen, and your call logs will be listed.

→ Missed call

→ Received call

→ Outgoing call

→ send message

→ view contact details

To clear log, tap Menu Key → Delete → select call to be deleted → → OK

For further settings, tap Menu Key → Settings → (Voice call, Video Call, Fixed Dialing Numbers, Minute Reminder, Quick responses)

4.15 Play Store

Play store allows you to find and download applications and fun games for your device.

Quick Start Guide

The Quick Start Guide contains four (4) useful tips to managing your phone and introduces you to basic gestures and phone management, such as the swiping the home screen, adding widgets, viewing contacts, launching the status bar.

4.16 Search

This function lets you search for any file you wish to find be it stored in your phone's messages, apps, music folder, contacts, or the Web.

 
Go to  → . Type your search on the search bar and tap →.

: Another way to search: On the Home Screen, tap  and type query. Tap Go to start search.

: Please make sure that your phone's Wi-Fi connection if you wish to search for something on the Internet.

4.17 Sound Recorder

Record sound and other audio files on your phone by going to



Tap  to start recording and press  to stop recording. To play the recently recorded sound, press .

After playback, you may opt to discard or save the recorded file.

To view the recorded files, tap 



4.18 Video Player

This displays and lets you view all video files stored in your phone and in your Memory Card.


To access, tap  → Video Player → tap a video to Play.

To Pause/Play, just tap on the video.

Tap Menu Key → Stop to stop playback.

Tap  to share on Facebook, Messaging, Bluetooth, Google+, Email and Gmail.

Tap  to view full screen.

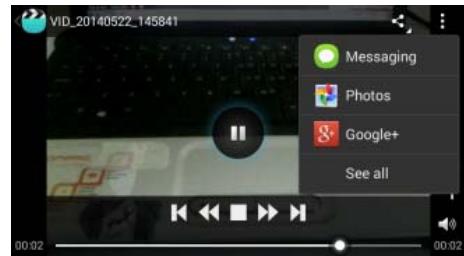

5 Settings

5.1 Wireless & Networks:

5.1.1 SIM Management

Your device supports two SIM cards, which can be managed by accessing the SIM Management sub-menu. You can view/change the roaming settings of the cards using this menu.

Go to  →  → SIM Management.

5.1.2 Wi-Fi

This allows you to switch your phone's Wi-Fi ON or OFF. Check the status by looking at the  in the status bar.

5.1.3 Bluetooth

Switch the Bluetooth function ON so you may establish wireless connection with other compatible devices with the Bluetooth technology. The Bluetooth may be used to send and receive different kinds of files. With the Bluetooth technology you may establish wireless connection with a compatible PC to enhance communication.

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

Tap  > . Click  next to the Bluetooth menu to turn it on,

When Bluetooth is on, the  icon will appear in the status bar.

Tap Bluetooth. Your phone will show all visible Bluetooth devices in range.

Tap the device you want to pair with and operate according to the message prompt.

When the owner of the device to be paired accepts the connection, the pairing is completed.

TIPS: Tap your device name to make your phone discoverable if other devices try to pair with your phone.

5.1.4 Data Usage

This lets you monitor your data usage per month.

Switch ON the mobile data usage function so you can monitor your mobile usage per month. You may also opt to set a limit on your mobile data usage.

⚠: Your phone's calculations may differ from the accounting of your mobile network service provider. It is not advisable to rely solely on the phone's calculations.

5.1.5 Airplane Mode

It is also known as the “Flight Mode,” which is advisable when riding aircrafts. This function, when turned ON, disables all wireless connection to any network. However, with the airplane mode, you can make use other functions of your device such as playing music, watching videos and capturing images and videos.

5.1.6 VPN

This allows you to set up and manage Virtual Private Networks (VPNs). Tap Add VPN to set up a VPN connection via the following settings:

- Add PPTP VPN: Set up a connection to a VPN with Point-to-Point tunneling protocol.
- Add L2TP VPN: Set up a connection to a VPN with Layer 2 tunneling protocol.
- Add L2TP/IPSec PSK VPN: Set up a connection to a VPN with pre-shared key-based Layer 2/IPsec tunneling protocol.
- Add L2TP/IPSec CRT VPN: Set up a connection to a VPN with Certificate-based Layer 2/IPsec tunneling protocol.

⚠: You must set a lock screen pattern before you can use credential storage. To set up a lock screen pattern, settings, go to  →  → Security → Screen Lock → choose lock method.

5.1.7 Tethering and Portable Hotspot

Tethering is a method for connecting a computer or other devices to the Internet via an Internet-capable mobile phone, such as this one. It will share your phone’s connection, making it a WLAN hotspot; however, network charges may apply, and you cannot use your phone’s W-Fi capability when it is working as a hotspot. Go to

 →  → More → Tethering and Portable Hotspot. ⚡: For further information, go to Tethering and Portable Hotspot → Help.

5.1.8 Disable the Wi-Fi Hotspot

Tap  →  → More → Tethering & portable hotspot → un-tick the Portable Wi-Fi hotspot check box.

5.1.9 Mobile Networks

The Mobile Networks Settings lets you control the settings of your subscriptions, and data settings as well. It also lets you enable or disable access over mobile networks and connect or disconnect to data services when roaming.

5.1.10 USB Internet

This lets you share PC internet to your phone via USB cable. To access:

Open network connections on PC


Right click connection you want to share and click Properties.

Click sharing tab, select “Allow other network users to connect through this computer’s internet connection” (choose newly added network which represents USB internet if ‘Home networking connection appears’).

5.2 Under the Device category:

5.2.1 Audio Profiles

This menu lets you customize your phone's settings to suit your activities, lifestyle and environment. The mobile phone is equipped with multiple user profiles that you can customize tones for incoming calls, messages. The Cherry Mobile CRUIZE 2 is equipped with four (4) pre-set profile options: General, Silent, Vibration and Outdoor. Tap a profile to change its settings. To access these, go to  →  → Profiles. You may add a new profile by tapping •.

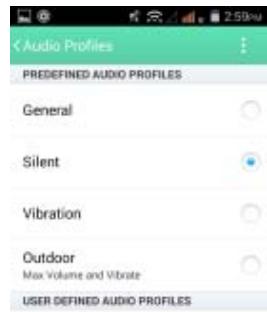

Under the Audio profiles menu is the BesAudEnh, an audio enhancer which boosts the capability of headphones or speakers attached to the phone.

5.2.2 Display

In this sub-menu, you can change the settings for the phone's lock screen notifications, scenes, theme. Wallpaper, auto-rotate screen activation, brightness, clock display, font size, landscape launcher and sleep settings.

 Please note that there is another way to customize your phone's appearance i.e. change the wallpaper. On idle mode, tap and hold any clear part of the Home screen and a series of options on changing the wallpaper will appear. To change, just follow the prompt on the screen.

5.2.3 Language & Input

Use the Language & Keyboard settings to select the language for the text on your device and for configuring the onscreen keyboard. You may also add words to your personal dictionary. To access this, go to  →  → Language and Input. It also lets you activate/deactivate the spell checker, Android keyboard and Google voice typing. It also lets you manage settings for the voice search, text-to-speech output and the pointer speed.

5.3 Personal category:

5.3.1 Location Access

The device uses the Global Positioning System satellite and allows apps that have asked your permission to use your location information. Furthermore, through the Wi-fi & mobile network location, it lets apps use Google's location service to estimate your location faster. Anonymous location data will be collected and sent to Google. It can also use your location to speed up process when searching for places using GPS and improving Google search results. To access this, go to  →  → Location

5.3.2 Date & Time

This lets you choose whether to automatically update your phone's date and time or otherwise. You may also automatically synchronize your phone's date and time according to your time zone.

In this sub-menu, you may also set the date, time, time zone, time and format. To access this go to  →  → Date & Time.

5.3.3 Scheduled Power On/Off

This allows you to set a specific time that will automatically switch your phone on or off.

: Before entering an area where the use of mobile phones is forbidden, make sure that the scheduled power-on function is deactivated to avoid inconvenience.

5.3.4 Security

This allows you to protect your device from unauthorized users by setting the PIN code or entering a password before being able to access the phone.

5.3.5 Screen Lock

Please refer to “Locking/Unlock your Phone” on page 3.

Disabling Screen Unlock Security

If you have created an unlock pattern, PIN or password, you can disable it.

Tap  →  → Security → Screen lock.

Draw the screen unlock pattern or enter your PIN/ password you have created if required.

Tap None.

5.3.6 Encrypt Phone

This requires a numeric PIN or password to decrypt your phone each time you switch it ON.

: Encryption takes an hour to accomplish. For more info, tap  →  → Security → Encrypt your phone.

5.3.7 Set up SIM Card Lock

This prevents unauthorized individuals from using your SIM card. The SIM Card lock feature requires user to enter PIN to use phone. To activate  →  → Set up SIM card Lock → tick Lock SIM Card

5.3.8 Protect Your Phone with a PIN or Password

Create a PIN or Password

Tap  →  → Security → Screen lock.

Tap PIN or Password.

Enter desired PIN or Password → Continue → Re-enter PIN or Password → OK

Make Passwords Visible

When typing passwords, characters typed in usually appear in masked characters such as (*) With this option, you will be able to see what letters/numbers/symbols you type when entering a password.

5.3.9 Backup & Reset

If activated, this sub-menu allows you to back-up your data, WLAN passwords and other settings to Google servers.

The Factory Data Reset erases all data in your phone's internal storage including your accounts, system and app data, downloaded apps.

To access this, go to  →  → Backup & Reset → Factory Data Reset → Reset Phone → Erase Everything

5.3.10 Accounts

The Accounts sub-menu allows you to add corporate, e-mail, Facebook, Twitter and Google accounts, synchronize them with your phone, send and receive data anytime, either automatically or manually. To access this, go to  →  → Accounts.

5.4 More

5.4.1 Accessibility

You can use the Accessibility settings to configure any plug-ins you have installed on your device. To access this, go to  →  → Accessibility. You may enable or disable the following services on your phone by marking/unmarking the following options' checkbox:

Magnification gestures – see Magnification Gestures on page ____.

Power button ends call – end a call by pressing the Power Key once.

Speak passwords – allows you to enter passwords by speaking them instead of typing using the onscreen keyboard.

Touch and hold delay

Enhance web accessibility

Quick boot

5.4.2 About Phone

This allows you to view system information including system & software updates, status, legal information, model number, Android version, baseband version, kernel version, build number and custom build version. Tap  →  → About Phone.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types Mobile Phone (FCC ID: 2ADIZ-X50) has also been tested against this SAR limit. The highest reported SAR values for head, body-worn accessory, product specific (wireless router), and simultaneous transmission conditions are 0.50 W/kg, 0.83 W/kg , 0.88 W/kg, and 1.11 W/kg respectively. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.