

Please read this user's guide before using your new tower speaker.

User's Guide



Package Contents

- Tower speaker
- RCA Cable
- Pedestad
- LINE-IN Cable
- AC Adapter
- Remote Control
- User's Guide
- Screws

Features

- Provides powerful sound to enhance your listening experience
- Easy to connect to your devices
- Remote for convenient controlling from a distance

Note: The power source must supply 16V DC. Its center tip must be set to positive and its plug must fit the DC IN jack. Using an adapter that does not meet these specifications could damage the tower speaker or adapter.

Important Safety Instructions


- 1. Read these instructions. Keep these instructions.
- 2. Heed all warnings.
- 3. Follow all instructions.
- 4. Do not use this tower speaker near water.
- 5. Clean only with dry cloth.
- **6.** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **8.** Use only attachments/accessories specified by the manufacturer.

- **9.** Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit the tower speaker.
- **10.**Unplug this tower speaker during lightning storms or when unused for long periods of time.
- 11.Refer all servicing to qualified service personnel. Servicing is required when the tower speaker has been damaged in any way, such as if the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the tower speaker, it has been exposed to rain or moisture, it does not operate normally, or it has been dropped.

Warnings and Precautions

- To reduce the risk of electric shock, do not remove cover(or back). There are no user serviceable parts inside.
- Do not expose the tower speaker to dripping or splashing liquids. Do not place objects filled with liquids (such as water-cup or glass) on the tower speaker.
- The mains plug is used as the disconnect device. It shall remain readily operable and should not be obstructed during intended use. To completely disconnect the tower speaker from supply mains, the main plug of the product shall be disconnected from the mains socket outlet completely.
- Using the tower speaker near fluorescent lighting may cause interference with the remote. If the tower speaker is behaving erratically, move away

Connections POWER/MODE **POWER** Power On/Off V-/+ MODE(Bluetooth, Usb, FM Radio, AUX In) Play/Pause Display **Next Song** PRV Song

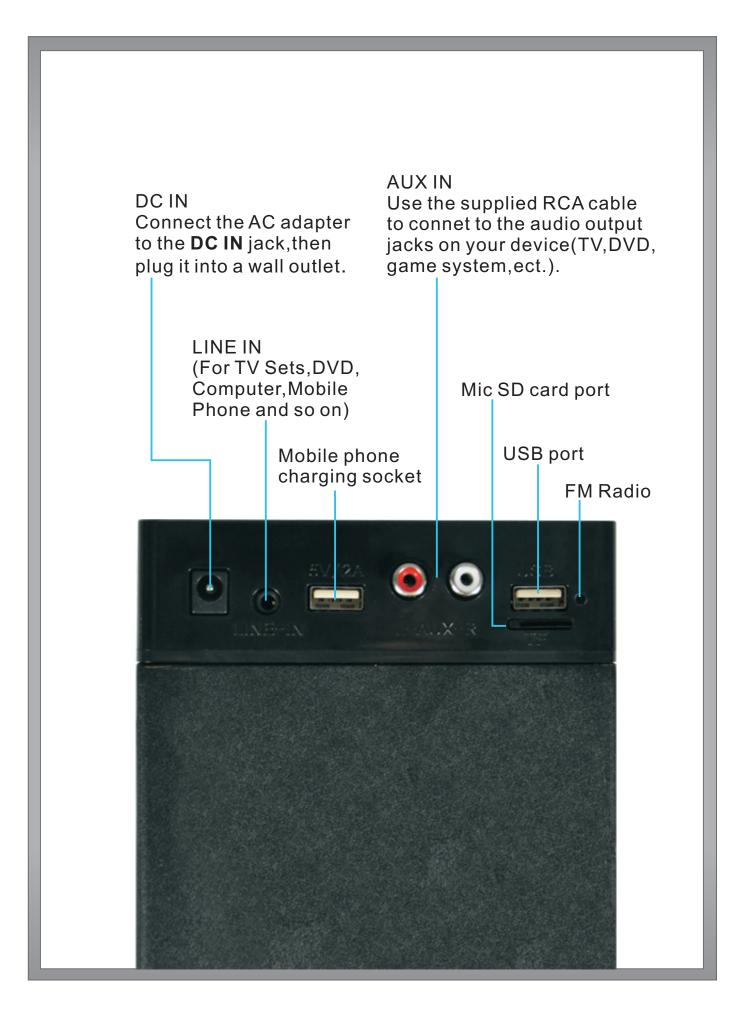

Installing the pedestal to the Tower Speaker

For installing the pedestal to the tower speaker, you may need twist drill, several screws (supplied).

- 1.Place the pedestad under the tower speaker.Make sure the holes of tower speaker is exact to match the holes of the pedestal.
- 2.Install the screws on the punched holes already in the tower speaker.

Using the Tower speaker

After you connect the AC adapter, the tower speaker enters standby mode.

- 1. Turn on your device and turn down its volume.
- 2. The tower speaker enters to "BLUETOOTH" mode.
- **3**. Press **LINE** or **AUX** or mp3(MIC-SD/USB) on the remote mode to switch to LINE or AUX mode or BT mode or mp3 mode(MIC-SD/USB).
- **4**. After starting playback on your device, adjust the device and tower speaker volume to a comfortable level.

Note:

■ The tower speaker enters standby mode if you pause it for more than 15 minutes.

Instructions of Remote



Troubleshooting

Problem	Solution
No sound	Make sure the AC adapter is plugged into a working outlet and firmly connected to the tower speaker. Check the connection of your device to the tower speaker.
Distorted sound	Check your source device to see if it is causing the distortion. Set the device and tower speaker volume to a low level.
Unbalanced sound	If the volume remains low even when the tower speaker's volume is turned all the way up, check the source device to make sure it is connected via a variable output. Make sure the output is not turned down too low.

Specifications

Power Input DC 16V

Output (RMS) $18w \times 2 + 30w$ Frequency Response 60-20k(Hz)

Speaker Units 5.25"subwoofer+3"Mid-Tweeter×4

Audio Input aux in/line in/usb/mic sd

/bluetoot v2.1

Other Functions FM Radio/Power charge for cell

phone

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Limited Warranty

Gosinggo warrants this product against defects in materials and workmanship under normal use by the original purchaser for one(1) year after the date of purchase, GOSINGGO MAKES NO OTHER EXPRESS WARRANTIES. This warranty does not cover: (a) damage or failure caused by or attributable to abuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a Gosinggo Authorized Service Facility; (c) consumables such as fuses or batteries;(d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs;(f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the sales receipt as proof of purchase date to the place of purchase. Gosinggo will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of Gosinggo.

New or reconditioned parts and products may be used in the performance of warranty service. You will be charged for repair or replacement of the product made after the expiration of the warranty period. GOSINGGO EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, GOSINGGO SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF GOSINGGO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. You may contact Gosinggo:

Gosinggo,

1 of 3/F(NO.50 Chengnan 4th Road, South District), No.3 Factory, Yuanshangzai Industrial Zone, the side of NO.105 Nation Road, Hengmei Village, South District, Zhongshan City

For product support, call 0086-760-88858903

Federal Communications Commission (FCC) Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

RF exposure warning

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment must not be collocated or operating in conjunction with any other antenna or transmitter.