

■ Product Introduction



This wireless equipment has a possibility of mixing electric waves and cannot provide the services on life and safety

Thank you for purchasing INNO Device Bluetooth wireless Speaker. This product supports Bluetooth 2.1 and easy to hand carry, to provide high quality sound by simplified control. From your Bluetooth devices, you can play your music library to the product without connecting wires also by AUX cable. This product is targeting home-use (class B) electromagnetic wave instrument and can be used in any place.

The life time of battery may decrease slowly by repeating charging and discharging cycles. Play time is based on 1/2 volume.

Certification Information and Warnings



FCC ID : 2ADLCBTSPKFLASK

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures;

Product Data

Name of Product	Bluetooth wireless stereo Speaker
Model	INNO-FLASK
Power	5V DC +/- 5%, 1A
Size(without Cover)	138mm X 67mm X 24.4mm (W X D X H, without case)
Internal Battery	3.7V DC / 750 mAh Li-ion (play 10 hours)
Power	3W X 2 at 10% THD
Connection	Micro USB (Charging) / AUX Input (3.5mm)
Bluetooth	Bluetooth V2.1, Class2, A2DP
Used Frequency	2,402~2,480 MHz
Proper Temperature	-20°C ~ +50°C
Manufacturer / Country	HAJEN Co., Ltd. / China


* Series models per colors: INNO - FLASK(BK)
INNO - FLASK(BL)
INNO - FLASK(OR)
INNO - FLASK(WH)

Composition of Product


Contents of Box

- Product
- User Manual
- Micro USB Cable for charging
- The USB Cable is not for telecommunication.
- AUX cable and power adaptor are not provided.


Front

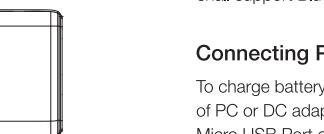


Left

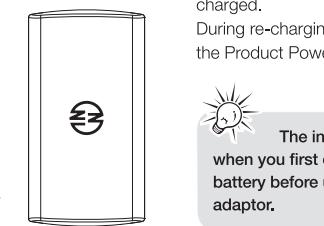

Right

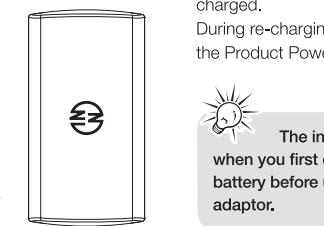

Case

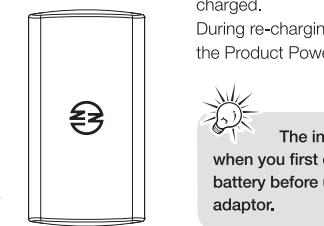

Before You Begin

This Product can provide you a music enjoyment by wireless stream audio contents from your mobile devices such as smartphone, MP3 player tablet or PC. You can roam around the house, office or outdoor to listen great music since the product has a rechargeable battery inside. Also, you can directly connect the devices using AUX line out. The device shall support Bluetooth higher than ver.2.1 and A2DP.

Connecting Power and Charging

To charge battery, connect supplied USB cable to USB port of PC or DC adaptor with USB Port and the other end to Micro USB Port of the right hand side of the Product. From the connection, the internal battery will start to be charged.

During re-charging, AUX source can playback regardless of the Product Power status.



The internal battery may not be fully charged when you first open the Product. Please full charge the battery before use. Please use safety approved power adaptor.

Operation and Indication

1.1.1 Power Knob

- Power Knob: Power On / Off
Sliding the knob up and down makes the system on and off. (It takes 2 sec to "On" after slide the knob.)

Pairing Button

- Short press (0.5sec) : Pause and Play
- Press and hold more than 2sec: Enter to Pairing mode
- Press and hold more than 5sec: Enter to Device reset mode *1

*1 If there is system error, use this function.

LEDs

- White LED (Bluetooth indicator)
Power ON: Slow blinking (0.5Hz)
Wait pairing mode: Fast blinking (2Hz)
Bluetooth paired: Always ON

Red LED

- Battery in-charging: Always ON
Battery low: LED flash 6times/1min
Battery full charged: LED off
Bluetooth Device reset: LED flash 5times

Tone sound

- When power ON: 'Bebebeep' tone up.
- When power OFF: 'Bebebeep' tone down.
- When a Bluetooth device paired: 'Bebebeep' tone up

2.5 BT Pairing

- Pairing and connecting with a Bluetooth device.
- Turn on the system
White LED will slowly (0.5Hz) blink and search for the paired device.
- Press and hold the pairing button more than 2 sec to enter pairing mode. White LED will begin to blink fast (2Hz).
- Select "INNO FLASK" shown on the list of the Bluetooth device. If "INNO FLASK" does not appear on the device's display, repeat from 2.

Set a speaker unit with the case as show in the figure.

Safety Instructions

As with general electronic product, precautions should be observed during handling and use.

- Read this instruction carefully and keep it.
- Heed all warnings and follow the instruction.

- Do not use the Product near water.

- Clean only with dry cloth.

- Do not block front or rear grilles.

- Do not install near any heat sources such as stoves.

- Protect the power (USB) cable from pressing by heavy substances or pulled by excessive power.

- Only use on horizontal and flat place.

- Unplug the Product during lightning storms or when unused for long periods of time.

- Contact a designated AS center when the power (USB) cable damaged, spilling liquid on Product, exposing Product to rain for long time, serious damage on Product by dropping it.

- Keep away magnetic recording devices from the Product as there may be a small amount of magnetic flux leakage.

- Only use under 50°C of environment to prevent any damage to built-in battery.

Do not dispose on the household waste, as the product contains a built-in battery and should be treated and disposed according to regulations on waste disposal.

Sudden movement from cold to hot environment may cause moisture or condensing on the Product and degrade system performance and decrease product life span.

Protect product from direct sunlight.

Do not use solvents to clean the Product and keep away from dusty environment.

AC adaptor is not supplied with the Product. Damages caused by improper power adaptors are not compensated.

Always leave sufficient space around the Product for ventilation. Do not place Product in or on a bag in a bag that may prevent air flow throughout opening.

Don't place lighter, candle, cigarette, etc. on the Product.

Be care that heavy objects do not fall on the Product.

To completely disconnect the power input, the USB cable should be disconnected from the Product.

Use of the Product in moderate climates.
Use under extreme temperature may degrade system performance and product life span.

Troubleshooting

Q: The Product is not turned on.

A: Make sure built-in battery is fully charged.
Check that the USB cable is not damaged and USB port of adaptor or PC is normal.

Q: The Product is not charged.

A: Make sure the USB cable, plug is not damaged.
Check the USB cable is connected to PC or adaptor USB port properly.

Q: No sound or sound is very low.

A: Make sure the Bluetooth wireless connection is correct and playback has been successfully started.
Make sure the volume on your Bluetooth device is turned up.

Q: Paired device can not reconnect to the Product.

A: Delete "INNO FLASK" from the list on your Bluetooth device.
Repeat the pairing procedures again.
A re-connection may fail due to the pairing information has been deleted from your Bluetooth device.

Note in some device you may be prompted to enter a passkey. The passkey is "0000".

This can be different for different devices.

Warranty

INNO Device Co., Ltd. warrants to the original retail buyer of this product, under normal use and condition, to prove the defective in material or workmanship within 12 month from the date of original purchasing. But the warranty for built-in battery is for 6 month.

BEFORE AS CLAIM

Properly pack your unit including supplied accessories. We recommend using the original packing materials when you return the product to AS center.

TO OBTAIN PROPER REPAIR OR REPLACEMENT WITHIN THE TERMS OF THIS WARRANTY, THE PRODUCT TO BE RETURNED WITH PROOF OF WARRANTY COVERAGE (E.G. DATED BILL OF SALE) OR VISIT THE AS CENTER WITH THEM. IF THE DEFECTIVE IS PROVEN AS A USER'S RESPONSIBILITY, THE COST OF DELIVERY AND REPAIR CAN BE CHARGED.

This warranty does not extend to the problem of compatibility with user's device nor the problem by using abnormal adaptor or cable. Also it does not apply to the problem by mis-handling, waterlogged or by removal of the Series labels or disassembled by non-qualified person.

Company's liability is limited to the purchase price paid by purchaser for the product.

The contents within this publication can be changed by INNO Device for improvement of internal design, operation, performance or reliability without prior notice. INNO Device has no responsibility on inevitable, direct, indirect and accompanying injuries by faults or omission of this publication.



INNO Flask

Pocket Bluetooth Speaker



INNO Device Co., Ltd.

(USpace1, Sampyeong-dong)

660, Daewangpangyo-ro,

Bundang-gu, Seongnam-si, Gyeonggi-do, Korea

TEL : +82 31 724 2590

CS : +82 31 724 2591


FAX : +82 31 724 2594

E-mail : cs@innodevice.com

www.innodevice.com

DESIGN BY INNO California

Manufactured in China

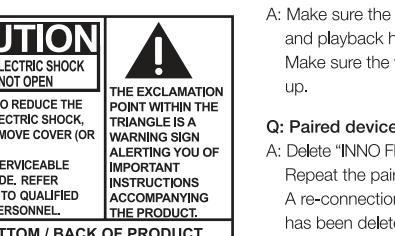

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.