



## USING THE BLUETOOTH

You can use Bluetooth to stream any audio from any Bluetooth devices with A2DP. Enjoy music as well as enhanced audio for movies, videos, TV, games and apps from your connected Bluetooth device.

1. Turn on audio by pressing the POWER button on your clock.
2. To switch to BLUETOOTH mode press SOURCE button repeatedly until the display shows "bt". The unit will start searching any available device and the BLUETOOTH LED indicator will flash.
3. Enable Bluetooth on your devices.
4. In your device, select an option to add a new Bluetooth device.

**NOTE:** Adding a Bluetooth Device varies on different mobile devices, tablet and computer. See your Bluetooth device manual for specific information.

5. Start the pairing on your device. Do this by selecting "CA-50i" from the list of available devices shown your device screen. This will connect automatically once paired. The BLUETOOTH LED indicator will keep light up.

**NOTE:** The auto pairing will search for 2 minute for available device. If nothing is paired, the unit will stop searching.

6. To re-connect or disconnect from unit, press and hold the BLUETOOTH for 3 seconds.

**NOTE:** You will need to disconnect any connected Bluetooth devices from the unit to stream from a different Bluetooth device. Bluetooth will automatically disconnect if you are out of the range.

7. Turn off audio by pressing the POWER button on your clock.



## BATTERY INSTALLATION

Four (4) 'AAA' batteries are used to back-up clock and alarm time settings.

1. Open the battery door by pushing in on the tabs, then removing the door.
2. Insert (4) 'AAA' batteries as shown.
3. Replace the battery door back on the compartment.

**Note:** The batteries are used to backup the clock and alarm times when the AC adapter is disconnected or there is a power failure. When replacing the batteries, do not disconnect the AC power adapter, otherwise the current time and alarm will be erased.

## BATTERY PRECAUTIONS



Follow these precautions when using the batteries in this device:

1. Warning - Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
2. Use only the size and type of batteries specified.
3. Be sure to follow the correct polarity when installing the batteries as indicated. A reversed battery may cause damage to the device.
4. Do not mix different types of batteries together (e.g Alkaline, Rechargeable, and Carbon-zinc) or old batteries with fresh ones.
5. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
6. Do not try to recharge a battery not intended to be recharged - it can overheat and rupture.



## CONTROLLING BLUETOOTH PLAYBACK

You can control music playback of your Bluetooth device wirelessly from your clock.

1. Press PLAY/PAUSE button to play or pause the music playback.
2. Press BACKWARD and FORWARD button to skip track rewind and forward.
3. Press the Vol+ and Vol - button to adjust the volume level.

**NOTE:** You can also control playback directly from your connected Bluetooth device wirelessly.



## USING AUX-IN

1. Turn on audio by pressing the POWER button on your clock.
2. To connect the auxiliary device: plug the aux-in cable into the 3.5mm AUX-IN jack at the back of the unit.
3. To switch to AUX IN ,press SOURCE button repeatedly until the display shows AUX.
4. To control the playback of the auxiliary device you need to use the device's own controls.
5. You can adjust volume on the unit and the auxiliary device for optimum volume and clarity.
6. Press PLAY/PAUSE button if you want to mute the music playback.
7. Turn off audio by pressing the POWER button on your clock.



## SETTING THE ALARMS

1. Press and hold the ALARM 1 button for 2 seconds, the display will blink.
2. To set the hour, repeatedly press the HR button to program the desired hour setting, making sure to correctly choose AM or PM.
- To set the minutes, repeatedly press the MIN button to program the desired minutes setting.
4. Press "ALARM 1" to confirm.
5. Press HR and/or MIN buttons to set the volume of alarm. Press the ALARM 1 button to confirm.
6. Press HR and/or MIN buttons to set the time of snooze (5/10/15). And press "ALARM 1" to confirm.
7. The Alarm 1 indicator on the display will turn solid confirming the programmed alarm time is set.
8. Follow the same procedure using the alarm 2 button for setting ALARM 2.

**NOTE:** if during the adjustment, no key is activated in 10 seconds, the current display will be automatically stored.

Only can set the alarm in standby mode.



## TURNING OFF THE ALARM

1. To silence the alarm with snooze, press the SNOOZE button. The alarm will stop, and will sound again after 5/10/15 minutes (based on the snooze time setting). The alarm indicator will flash.
2. To silence the alarm for the day, press ALARM 1/ ALARM 2 buttons, the alarm will be stop. The ALARM 1 indicator will remain on the display confirming the alarm is set for the next day.
3. To cancel the alarm, press ALARM 1 button to cancel. The ALARM 1 indicator will disappear from the display.

**NOTE:** Same procedure applies for ALARM 2. The alarm will sound for 60 minutes and then shut off if there is no operation. The alarm will activate the next day To set the snooze delay, press HR and/or MIN buttons to set the time of snooze between 5 to 15 minutes and press ALARM 1 button to confirm.



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



**DANGEROUS VOLTAGE:** The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of unsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



**ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**FCC WARNING:** This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made. The manufacturer is not responsible for any radio or TV interference, caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

**ATTENTION: POUR ÉVITER LES CHOC ÉLECTRIQUES, INTROUDUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISES ET POUSSER JUSQU'AU FOND.**

## SAFETY PRECAUTIONS

- a. Do not expose this unit or the AC/DC adapter to dripping or splashing water. Keep liquid-filled objects, such as vases, away from this unit and AC/DC adapter.
- b. To ensure that this unit is completely disconnected, unplug it from the wall.
- c. Ensure that the AC/DC adapter is easily accessible.
- d. Please note the information printed underneath the unit.
- e. Batteries should not be exposed to excessive heat such as direct sunshine, fire, etc.
- f. Do not impede the ventilation of this unit by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
- g. Keep open flames, such as lighted candles, away from this unit.
- h. Do not place this unit in closed bookcases, racks, or other spaces without proper ventilation.
- i. Use only the same or equivalent type batteries as there is a danger of explosion if the incorrect batteries are used or they are installed incorrectly.
- j. Dispose of batteries properly according to environmental regulations.

## IMPORTANT SAFETY PRECAUTIONS

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Compliance information:** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

**SURGE PROTECTORS:** It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

CAN ICES-3 (B) / NMB-3 (B)

## Specification

1. Bluetooth support profile: A2DP
2. Bluetooth Range: 10M
3. Output Power: 1W
4. Power Adaptor AC input: 100-240 50-60Hz
5. Power Adaptor DC output: 5V 1.5A
6. Battery Backup: 4 x 1.5V "AAA" size batteries (Batteries not included)
7. USB Jack DC output: 5V 1A