

PREMIUM WIRELESS EARBUDS

INSTRUCTION MANUAL

Earbuds Overview



The image shows a pair of black Premium Wireless Earbuds. Each earbud has a black, curved, ergonomic design with a silver-colored circular speaker grille. They are connected by a black cable that features a small, black, rectangular control module with three buttons. The earbuds are positioned against a white background.

Earbuds Overview

The diagram illustrates the features of the earbuds and the charging cable. The earbuds are shown in three views: Front, Back, and Side. The front view shows the LED, Next Song button (+), On/Off Button, Play / Pause Music button, Answer / End Call button, Vol- button, and Previous Song button. The back view shows the Microphone. The side view shows the Micro USB Charging Port. The Micro USB Charging Cable is shown with a USB Plug and a Micro USB Plug.

Front:

- LED
- Next Song (+)
- On/Off Button
- Play / Pause Music
- Answer / End Call
- Vol- / Previous Song

Back:

- Microphone

Side:

- Micro USB Charging Port

Micro USB Charging Cable:

- USB Plug
- Micro USB Plug

Power On/Off
◆ Power on Press and hold down the On/Off Button for 3 seconds and the LED will flash. ◆ Power off Press and hold down the On/Off Button for 4 seconds and the LED will turn off.
Pair Premium Wireless Earbuds with your mobile device
1. Keep the distance between your wireless earbuds and mobile phone (or other devices) within 32.8 Feet. 2. Power on the Premium Wireless Earbuds 3. Activate the Bluetooth function on your phone within range and select "Premium Earbuds" from the list shown. 4. The LED lights blue when paired successfully. ◆ Attention: If the pairing is not successful within 5 minutes, the earbuds will power off, please repeat the pairing procedures to try again.
Reconnect Premium Wireless Earbuds to your mobile device
◆ When powered on, the earbuds will automatically connect with the last successfully paired device.
Disconnect the earbuds from your mobile device
◆ Power off the earbuds; or ◆ Switch off the Bluetooth on your mobile phone; or ◆ Leave the earbuds 60ft away from your mobile phone or further.

Answer / Reject a call	
◆ When you receive a call , press the On/Off Button once to accept the call , or answer the call normally via your mobile phone,	
◆ Long press On/Off Button to reject a call	
End a call	
◆ Press the On/Off Button once to end the call or hang up your mobile phone.	
Functions	
◆ Long press + Button to turn up volume	
◆ Long press - Button to turn down volume	
◆ Short press + Button to advance to next song	
◆ Short press - Button to go back to previous song	
Charging your Earbuds	
◆ LED indicator light turns red when charging your earbuds	
◆ LED indicator light turns off when your earbuds are fully charged	
Technical specification	
Bluetooth version: - - - - -	4.2
Bluetooth operating range: - - - - -	32.8 Feet
Frequency response: - - - - -	20Hz - 20KHz
Playing time: - - - - -	2hrs
Standby time: - - - - -	30hrs
Fully charged time: - - - - -	2hrs
Battery Capacity:- - - - -	60mAh
Rechargeable Li-Ion Battery - - - - -	3.7V

FAQ

- ◆ **If the Premium Wireless Earbuds cannot be paired with your device, please try the following:**
Ensure that your earbuds are in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated.
- ◆ **If the Premium Wireless Earbuds will not turn on:**
Make sure the earbuds are fully charged.
- ◆ **Can I change the battery for the earbuds?**
Premium Wireless Earbuds use a built-in non-detachable battery which cannot be removed.
- ◆ **If the Premium Wireless Earbuds cannot be recharged:**
If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.

 **Li-ion battery charging warning statement:**

The input to the earbuds is 5V 1A.

In order to charge the earbuds in a safe manner and reliable conditions, please only adopt battery pack or USB ports from laptop or computer for charging this product.

Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2ADM5-EP-0455