



Size: 222.75(W) x 105(H)mm

FRONT SIDE

<div><div>OPEN EAR</div><div>TRUE WIRELESS EARHOOKS</div></div> <div>INSTRUCTION MANUAL</div> <div>Thank you for purchasing the Open Ear True Wireless Earhooks. This manual provides more information about the wireless Earhooks, please read the instructions before using.</div> <div></div>	<div>Product Overview</div> <div><div>Open Ear True Wireless Earhooks</div><div>Portable Charging Case</div></div> <div><div><div><div>1</div><div>2</div></div><div><div>3</div></div></div><div><div>4</div><div>5</div></div></div> <div><div>1. Touch Control Area On/Off, Play/Pause Music Answer/End Call</div><div>2. Microphone</div><div>3. Speaker</div><div>4. Charging LED Indicator</div><div>5. USB Type-C Charging Port</div></div>
---	--

Package Contents

1(One) Pair Earhooks  
1(One) USB-Type C Charging Cable  
1(One) Portable Charging Case  
1(One) Instruction Manual

Specifications

Driver Diameter: 10 mm  
Impedance: 32 Ohms  
Frequency Response: 20 Hz - 20 kHz  
Sensitivity: 98 dB +/- 3 dB  
Power Supply: Li-ion Battery 3.7V 30 mAh Per earhook  
Total Playtime: 10 Hours


Charging Time: <2.5 Hours  
Bluetooth Range: 32 Feet  
Bluetooth Version: 5.3  
Charging Case Battery Capacity: 300 mAh  
USB Type-C Charging Cable Included  
USB Type-C Charging Cable Rating 5V/1A Max.

How to wear



Attach the Earhooks to your earlobe gently by following the instructions in the picture.

BACK SIDE

<div>Answer / Reject a call</div> <div>When receive a call, press the button once (on either earhook) to accept the call, or answer the call normally via your mobile phone. Press and hold the button 2 seconds to reject it.</div> <div>End a call</div> <div>To end the call, just press the button at any side of earhooks.</div> <div>Functions</div> <div>Pause / Play Music: Press on Left or Right button. Go back to previous song: Double press on Left button. Advance to next song: Double press on Right button. Voice Assistant: Press and hold on Left or Right button for 2 seconds.</div> <div>Charging your Earhooks</div> <div><div>1. Open the charging case cover.</div><div>2. Insert the Earhooks into the charging case.</div><div>3. The earhooks will start the charge automatically.</div><div>4. LED indicator light of the charging case will be turned on when charging.</div><div>5. Once fully charged, the LED will be off.</div></div> <div>Recharge Charging Case</div> <div><div>⚠ For your safety, please always use appropriate 5V output charger/Adapter to charge the product. <b>DO NOT USE</b> Quick Charging USB Adapter to charge the product, as it might damage the product.</div><div><div>1. Use the USB Type-C charging cable provided with the packaging.</div><div>2. Connect the USB Type-C plug to USB Type-C charging port on the charging case, then connect the USB plug to a wall adapter to begin charging.</div><div>3. The LED on the charging case will be flashing during charge.</div><div>4. Once fully charged, the LED will be stop flashing.</div><div>5. The LED will be on during Earhooks is charging and will be off after fully charged.</div></div><div><b>NOTE:</b><ul style="list-style-type: none"><li>You must select a qualified charger from a regular manufacturer.</li><li>You must charge the charging case and Earhooks if it has been not used for more than 6 months.</li></ul><div><div>USB plugUSB Type-C plug</div></div><div>⚠ <b>CAUTION:</b>The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.</div></div></div>	<div>FAQ</div> <div><b>If the wireless Earhooks cannot be paired with your device, please try the following:</b> Ensure that your Earhooks are in pairing mode or reconnection mode Ensure that Bluetooth search function of your mobile device is activated.</div> <div><b>If the wireless Earhooks will not turn on:</b> Make sure the Earhooks are fully charged. Make sure the protective stickers are removed from the Earhooks.</div> <div><b>Can I change the battery for the Earhooks and the charging case?</b> The wireless Earhooks and the charging case use a built-in non-detachable battery which cannot be removed.</div> <div><b>If the charging case cannot be recharged:</b> If you use a power outlet, ensure that the power supply is connected securely and the outlet works.</div> <div>⚠ Safety instructions for the lithium battery and charging the product</div> <div><div>-The input voltage to the product is 5V 1A.</div><div>-In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product.</div><div>-Only charge the product at ambient temperatures between 10°C/ 50°F and 40°C/104°F.</div><div>- Do not heat above 70°C/158°F, eg. Do not expose to sunlight or throw into fire.</div><div>-Switch off the product after use.</div><div>-Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.</div><div>-In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.</div></div>
--	---