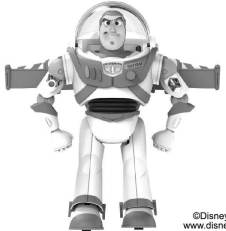 
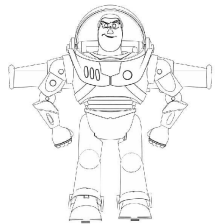 
 
 
 
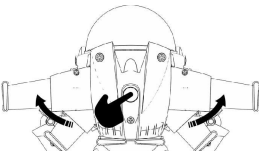 
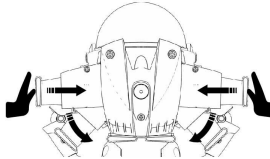 
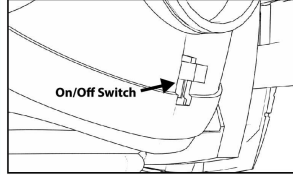 
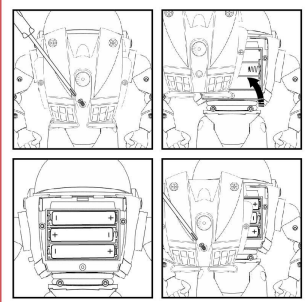 
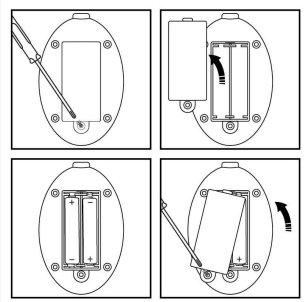 


ET-0050 RC Buzz Lightyear IM

Size : 420 x 110 mm

07APR25

Disney PIXAR TOY STORY BUZZ LIGHTYEAR Remote Control Figure Instruction Manual Thank you for purchasing the RC Buzz Lightyear. This manual provides more information about this product, please read the instructions before using.  ©Disney/Pixar www.disney.com AGES 8+	Product Overview  RC Buzz Lightyear  Remote Control  Instruction Manual	Package Contents RC Buzz Lightyear x 1 Remote Control x 1 Instruction Manual x 1 Specifications Frequency: 27 MHz FCC ID: 2ADM5-ET-0050-27 Power Supply: BUZZ LIGHTYEAR: Requires 3 (Three) x AAA 1.5V Alkaline Batteries(Not Included). Remote Control: Requires 2 (Two) x AAA 1.5V Alkaline Batteries (Not Included). Remote Control  Forward Button	Standard Control Note: To avoid losing control, always pay attention when controlling the RC Buzz Lightyear.  Forward Button Control RC Buzz Lightyear to move forward  Extend the wings of RC Buzz Lightyear	 Push the small wings inside the big wings then retract the wings to original position Power On/Off  On/Off Switch Power On/Off Slide the ON/OFF Switch to ON to turn on the RC Buzz Lightyear. Slide the ON/OFF Switch to OFF to turn off the RC Buzz Lightyear.
Batteries Installation  To install batteries into the RC Buzz Lightyear, unscrew the screws on the battery box cover to open the cover. Insert 3 x "AAA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screws. Notice: When inserting the batteries, you must insert according to the correct polarity, the RC Buzz Lightyear won't function if batteries are reversed.	Batteries Installation  To install batteries into the RC Buzz Lightyear Remote Control, unscrew the screw on the battery box cover to open the cover. Insert 2 x "AAA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw. Notice: When inserting the batteries, you must insert according to the correct polarity, the RC Buzz Lightyear Remote Control won't function if batteries are reversed.	Performance Tips 1. Do not drive the RC Buzz Lightyear on grass, sand or go through water. 2. Do not drive the RC Buzz Lightyear in windy or rainy weather. 3. Do not drive the RC Buzz Lightyear into any sharp object. 4. Keep fingers, hair and loose clothing away from RC Buzz Lightyear. Care and Maintenance Always use dry and soft cloth to clean this product. Avoid immersing these toys in water, otherwise, the electronic parts may be damaged. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition. IMPORTANT: BATTERY INFORMATION CAUTION: 1. TO AVOID BATTERY LEAKAGE a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings. b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries. c. Remove exhausted or dead batteries from the product. d. Remove batteries if product is not to be played with for a long time. e. Do not short-circuit the supply terminals. 2. Should this product cause, or be affected by local electrical interference, move it away from other electrical equipment. Reset (switching ON/OFF again or removing and re-inserting batteries) if necessary.	For AAA Batteries WARNING: TO AVOID BATTERY LEAKAGE 1) The batteries used with this product are small parts and should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone American Association of Poison Control Centers (1-800-222-1222). 2) Always purchase the correct size and grade of battery most suitable for intended use. 3) Do not mix old and new batteries, alkaline, standard (Carbon - Zinc) or rechargeable (Nickel-cadmium) batteries. 4) Clean the battery contacts and those of the device prior to battery installation. 5) Ensure the batteries are installed correctly with the regard to polarity (+ and -). 6) Always remove batteries if consumed or if product is to be left unused for a long time. Warning This product is suitable to be used by people who has operating experience in remote toy or aged no less than 8 years old. Please do not put the product in your mouth to prevent choking hazard of small parts. Please do not put the finger into available interspaces. Please do not play the product in a brutal way such as throwing, crashing or twisting it. Please store the smaller-sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents. Avoid placing the batteries in places in high temperatures and avoid exposure to heat. When young children are operating the product, it shall be ensured that the adults are playing and making sure the product control is within the viewing range of the Control (or instructor) so that it makes the control of the toy more convenient. When the product is not in use, please switch off the power supplies of the toy, and remove the batteries from the product. Please note that we won't take any responsibility for any wrong operation as this may result in severe injury or loss of property, and we cannot control the operating process during the time when the user assembles or uses this product. Once this product is sold, we won't be responsible for any safety responsibility during the time the user operates or uses controls this products.	FCC Statement This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or experienced radio/TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. FCC ID: 2ADM5-ET-0050-27 FC Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 MADE IN SHANTOU, CHINA Keep All Relevant Information for Future Reference Item# ET-0050