

Date: 14 SEP 2023
Product: ET-0800 IM

Size: 13.7(W) x 8.66(H)in
350(W) x 220(H)mm



Product Overview		Package Contents		Operate Your Boat	
AGES 8+	REMOTE CONTROL TURBO MASTER SPEED BOAT	Remote Control	Remote Control Turbo Master Speed Boat x 1	Forward	
Instruction Manual		Instruction Manual	Remote Control Power Supply: 3 x AA 1.5V Batteries (Not Included)	Press the forward button to control the boat move forward	
Thank you for purchasing the Remote Control Turbo Master Speed Boat. This manual provides more information about this product, please read the instructions before using.		Cover Lock Switch	Remote Control Power Supply: 2 x AA 1.5V Batteries (Not Included)	Left	
		Boat Cover	Frequency: 27 MHz (Green Boat)	Press the left button to control the boat turn left	
		Propellers	40 MHz (Blue Boat)	Right	
		On/Off Switch	49 MHz (Red Boat)	Press the right button to control the boat turn right	
Boat Power On/Off		Battery Compartment	Remote Control	Backward	
<p>Rotate the Cover Lock Switch to unlock the cover. Slide the ON/OFF Switch to ON to turn on the Remote Control Turbo Master Speed Boat Put the cover back in place and lock it.</p>				Press the back button to control the boat move backward	
Batteries Installation-Boat		Batteries Installation-Remote Control	Performance Tips	Warning	FCC Statement
<p>To install batteries into the Remote Control Turbo Master Speed Boat, rotate the switch to right to open the boat cover. Insert 3 x AA 1.5V batteries into the battery box. Batteries should be placed as shown on the diagram. Put back in place the boat cover and rotate the switch to lock the cover.</p>		<p>To install batteries into the Remote Control, unscrew the screw on the battery box cover to open the battery compartment. Insert 2 x AA 1.5V batteries into the battery box. Batteries should be placed as shown on the diagram. Put back in place the battery box cover and tighten the screw.</p>	<p>For AA Batteries</p> <p>A WARNING TO AVOID BATTERY LEAKAGE</p> <ol style="list-style-type: none"> 1. Be sure to insert the batteries correctly, and always follow the toy/game and battery manufacturers' instructions. 2. Do not mix old and new batteries, alkaline, standard (carbon-zinc), or rechargeable batteries. 3) Always remove weak or dead batteries from the product. 4) Remove the battery if the product is left unused for a long period of time. <p>Notice: When placing the batteries, you must insert according to the correct polarity, the Remote Control Turbo Master Speed Boat won't function if batteries are reversed.</p>	<p>This product is not suitable to be used by people who has operating experience in remote toy or aged no less than 8 years old.</p> <p>Please do not put the product in your mouth to prevent choking hazard of small parts.</p> <p>Please do not put the finger into available interstices.</p> <p>Please do not play the product in a brutal way such as throwing, crashing or testing it.</p> <p>Please store the smaller-sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents.</p> <p>Avoid placing the batteries in places in high temperatures and avoid exposure to heat.</p> <p>When using children are operating the product, it shall be ensured that the adult are guiding and making sure the product control is within the viewing range of the controller (or instructed) so that it makes the control of the toy more convenient.</p> <p>When the product is not in use, please switch off the power supplies of the toy and remove the batteries from the product.</p> <p>Please note that we won't take any responsibility for any wrong operation as this may result in severe injury or loss of property, and we cannot control the operating process during the time when the user assembles or uses this product.</p> <p>Once this product is sold, we won't be responsible for any safety responsibility during the time the user operates or uses controls this products.</p>	<p>This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> • Relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the local radio/TV technician for help. <p>RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p>FCC ID: 2ABDM-ET-0800-01 (Green Boat) 2ABDM-ET-0800-02 (Blue Boat) 2ABDM-ET-0800-03 (Red Boat)</p> <p>Distributed by: NTE Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made in Shantou, China</p> <p>Keep All Relevant Information for Future Reference</p> <p>ITEM# ET-0800</p>