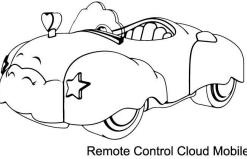
 
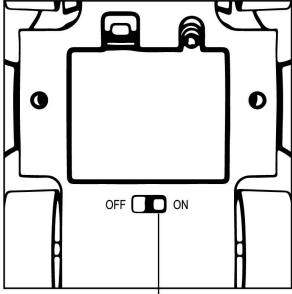
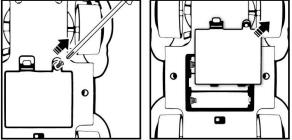
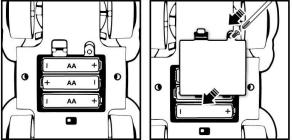
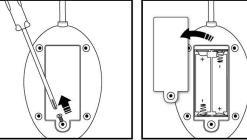
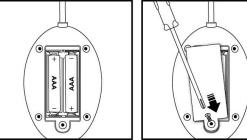


ET-0825 Remote Control Cloud Mobile™ with Cheer Bear™

Size : 420 x 110 mm

08 Mar 2024

 Remote Control Cloud Mobile™ with Cheer Bear™ Instruction Manual <small>Thank you for purchasing the Remote Control Cloud Mobile™ with Cheer Bear™. This manual provides more information about this Remote Control Cloud Mobile™ with Cheer Bear™, please read the instructions before using.</small>	Ages 8+ Product Overview  Remote Control Cloud Mobile™  Cheer Bear™ Sitting Figure 	Package Contents Includes: 1(One) Remote Control Cloud Mobile™ 5.24in. x 7.75in. x 3.52in. (13.3cm x 19.7cm x 3.52cm) 1(One) Cheer Bear™ Sitting Figure 2.28in. x 1.65in. x 3.1in. (5.8cm x 4.2cm x 7.8cm) 1(One) Remote Controller 8.66in. x 2.2in. x 1.37in. (22cm x 5.6cm x 3.5cm) 1(One) Instruction Manual	Place the Cheer Bear™ Sitting Figure <small>Place the Cheer Bear™ Sitting Figure on the Remote Control Cloud Mobile™. Check if the figure is fixed on the Remote Control Cloud Mobile™ before playing.</small>	Standard Control <small>Note: To avoid losing control, always pay attention when controlling the Remote Control Cloud Mobile™ with Cheer Bear™.</small>	Power On/Off 
Batteries Installation For Remote Control Cloud Mobile™   <small>To open the batteries cover, turn the Remote Control Cloud Mobile™ upside down. Remove the screw on the battery box cover to open the cover. Insert 3(Three) X AA 1.5V Alkaline Batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw.</small>	Batteries Installation For Remote Controller   <small>To open the batteries cover, turn the Remote Controller upside down. Remove the screw on the battery box cover to open the cover. Insert 2(Two) X AAA 1.5V Alkaline Batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw.</small>	Performance Tips <ol style="list-style-type: none"> 1. Do not drive the Remote Control Cloud Mobile™ with Cheer Bear™ on grass, sand or go through water. 2. Do not drive the Remote Control Cloud Mobile™ with Cheer Bear™ in windy or rainy weather. 3. Do not drive the Remote Control Cloud Mobile™ with Cheer Bear™ into any sharp object. 4. Keep fingers, hair and loose clothing away from Remote Control Cloud Mobile™ with Cheer Bear™. Care and Maintenance <small>Always use dry and soft cloth to clean this product. Avoid this product from being exposed to sunlight or heat. Avoid immersing these toys in water, otherwise, the electronic parts may be damaged. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition.</small>	IMPORTANT: BATTERY INFORMATION For AA Batteries WARNING: TO AVOID BATTERY LEAKAGE <ol style="list-style-type: none"> 1) Be sure to insert the batteries correctly, and always follow the toy/game and battery manufacturers' instructions. 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. 3) Always remove weak or dead batteries from the product. 4) Remove the battery if the product is left unused for a long period of time. For AAA Batteries WARNING: TO AVOID BATTERY LEAKAGE <ol style="list-style-type: none"> 1) The batteries used with this product are small parts and should be kept away from small children who still put things in their mouth. If they are swallowed, please see a doctor and have the doctor phone American Association of Poison Control Centers (1-800-222-1222). 2) Always purchase the correct size and grade of battery most suitable for intended use. 3) Do not mix old and new batteries, alkaline, standard (Carbon-Zinc) or rechargeable (Nickel-cadmium) batteries. 4) Clean the battery contacts and those of the device prior to battery installation. 5) Ensure the batteries are installed correctly with the regard to polarity (+ and -). 6) Always remove batteries if consumed or if product is to be left unused for a long time. 	Warning <small>This product is suitable for individuals with operating experience in remote toys or those aged 8 years old and above.</small> <small>Please do not put the product in your mouth to prevent choking hazards from small parts.</small> <small>Avoid inserting your fingers into available interspaces.</small> <small>Do not engage in rough play with the product, such as throwing, crashing, or twisting it.</small> <small>Store smaller-sized product accessories in places that are out of reach of children to prevent accidents.</small> <small>Avoid placing batteries in areas with high temperatures or exposing them to heat.</small> <small>When young children are operating the product, it is essential to ensure that adults are guiding them and maintaining visual control of the toy for convenient control.</small> <small>When the product is not in use, please switch off the power supply and remove the batteries.</small> <small>Please note that we cannot be held responsible for any injuries, property damage, or loss resulting from incorrect operation during the assembly or use of this product.</small> <small>Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.</small>	FCC Statement <small>This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</small> <small>Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</small> <small>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</small> <ul style="list-style-type: none"> • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or experienced radio/ TV technician for help. <small>RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</small>

 FCC ID: 2ADMS-ET-0825-27

Item# ET-0825

TM & © 2024 TCFC

Distributed by 1616 Holdings, Inc.
 701 Market Street, Suite 200
 Philadelphia, PA 19106

Made in Shantou, China

Keep all relevant information for future reference