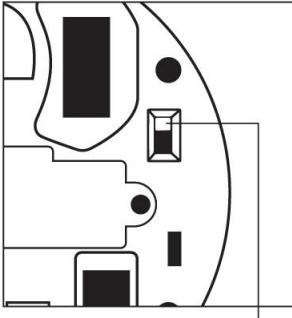
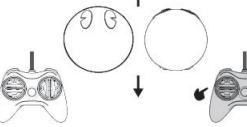
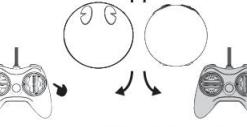
 
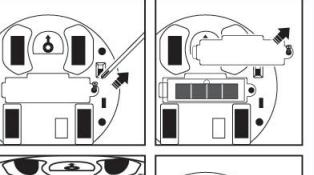
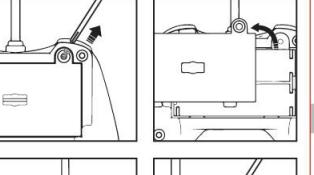


ET-0864 Remote Control PAC-MAN & BLINKY

Size : 420 x 110 mm

<p>AGES 8+</p> <p>PAC-MAN REMOTE CONTROL PAC-MAN & BLINKY</p> <p>Instruction Manual</p> <p>Thank you for purchasing the Remote Control PAC-MAN & BLINKY. This manual provides more information about Remote Control PAC-MAN & BLINKY, please read the instructions before using.</p> <p>PAC-MAN™ & ©Bandal Namco Entertainment Inc.</p> 	<p>Product Overview</p> 	<p>Package Contents</p> <p>1(One) Remote Control PAC-MAN 1(One) Remote Control BLINKY 1(One) Remote Controller for PAC-MAN 1(One) Remote Controller for BLINKY 1(One) Instruction Manual</p> <p>Specifications</p> <p>Frequency: Remote Control PAC-MAN: 40 MHz Remote Control BLINKY: 49 MHz</p> <p>Power Supply: Remote Control PAC-MAN and Remote Control BLINKY Power Supply: 4 x "AAA" 1.5V Batteries (Not Included) Remote Controller Power Supply: 2 x "AA" 1.5V Batteries (Not Included)</p> <p>Remote Controller</p> 	<p>Power On/Off</p>  <p>Power On/Off</p> <p>Slide the ON/OFF Switch to ON to turn on the Remote Control PAC-MAN and Remote Control BLINKY. Slide the ON/OFF Switch to OFF to turn off the Remote Control PAC-MAN and Remote Control BLINKY.</p>	<p>Standard Control</p> <p>Note: To avoid losing control, always pay attention when controlling the Remote Control PAC-MAN and Remote Control BLINKY.</p> <p>Forward and Backward</p>  <p>Press the forward button to control PAC-MAN or BLINKY move forward Press the backward button to control PAC-MAN or BLINKY move backward</p> <p>Left and Right</p>  <p>Press the left button to control PAC-MAN or BLINKY steering left Press the right button to control PAC-MAN or BLINKY steering right</p>	<p>How to Play</p> <p>BLINKY Chases PAC-MAN : BLINKY Chasing Time starts after the power on. PAC-MAN lights up in Yellow and BLINKY lights up in Red. Player 1 controls PAC-MAN to escape. Player 2 controls BLINKY to chase PAC-MAN.</p>  <p>Player 1 PAC-MAN (Yellow Light) Player 2 BLINKY (Red Light)</p> <p>BLINKY will change to be TURN-TO-BLUE (Blue Light) after 15 seconds or if it successfully catches PAC-MAN. PAC-MAN keeps in Yellow light.</p> <p>PAC-MAN Chases Turn-to-Blue : PAC-MAN Chasing Time starts after BLINKY changes to be TURN-TO-BLUE in Blue flashing light and PAC-MAN keeps in Yellow light. Player 1 controls PAC-MAN to chase TURN-TO-BLUE. Player 2 controls TURN-TO-BLUE to escape.</p>  <p>Player 2 TURN-TO-BLUE (Blue Light) Player 1 PAC-MAN (Yellow Light)</p> <p>After 15 seconds or if caught by PAC-MAN , TURN-TO-BLUE will revert to BLINKY (Red Light). Then go to next chasing game and loop the game flow.</p>
<p>Batteries Installation For Remote Control PAC-MAN & BLINKY</p>  <p>To install batteries into the Remote Control PAC-MAN and Remote Control BLINKY, unscrew the screw on the battery box cover to open the cover. Insert 4 (Four) X AAA 1.5V Alkaline Batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw.</p> <p>Notice: When inserting the batteries, you must insert according to the correct polarity. Remote Control PAC-MAN Remote Control BLINKY won't function if batteries are reversed.</p>	<p>Batteries Installation For Remote Controller</p>  <p>To install batteries into the Remote Controller, unscrew the screw on the battery box cover to open the battery compartment. Insert 2 x "AA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Put back in place the battery box cover and tighten the screw.</p> <p>Notice: When placing the batteries, you must insert according to the correct polarity, the Remote Controller won't function if batteries are reversed.</p>	<p>Performance Tips</p> <ol style="list-style-type: none"> 1. Do not drive the Remote Control PAC-MAN and Remote Control BLINKY on grass, sand or go through water. 2. Do not drive the Remote Control PAC-MAN and Remote Control BLINKY in windy or rainy weather. 3. Do not drive the Remote Control PAC-MAN and Remote Control BLINKY into any sharp object. 4. Keep fingers, hair and loose clothing away from Remote Control PAC-MAN and Remote Control BLINKY. <p>Care and Maintenance</p> <p>Always use dry and soft cloth to clean this product. Avoid this product from being exposed to sunlight or heat. Avoid immersing these toys in water, otherwise, the electronic parts may be damaged. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition.</p>	<p>IMPORTANT: BATTERY INFORMATION</p> <p>For AA Batteries</p> <p>WARNING: TO AVOID BATTERY LEAKAGE</p> <ol style="list-style-type: none"> 1) Be sure to insert the batteries correctly, and always follow the toy/game and battery manufacturers' instructions. 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. 3) Always remove weak or dead batteries from the product. 4) Remove the battery if the product is left unused for a long period of time. <p>For AAA Batteries</p> <p>WARNING: TO AVOID BATTERY LEAKAGE</p> <ol style="list-style-type: none"> 1) The batteries used with this product are small parts and should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the child phone American Association of Poison Control Centers 1-800-222-1222. 2) Always purchase the correct size and grade of battery most suitable for intended use. 3) Do not mix old and new batteries, alkaline, standard (Carbon - Zinc) or rechargeable (Nickel-Cadmium) batteries. 4) Clean the battery contacts and those of the device prior to battery installation. 5) Ensure the batteries are installed correctly with the regard to polarity (+ and -). 6) Always remove batteries if consumed or if product is to be left unused for a long time. 	<p>Warning</p> <p>This product is suitable for individuals with operating experience in remote toys or those aged 8 years old and above. Please do not put the product in your mouth to prevent choking hazards from small parts. Avoid inserting your fingers into available interspaces. Do not engage in rough play with the product, such as throwing, crashing, or twisting it. Store smaller-sized product accessories in places that are out of reach of children to prevent accidents. Avoid placing batteries in areas with high temperatures or exposing them to heat. When young children are operating the product, it is essential to ensure that adults are guiding them and maintaining visual control of the toy for convenient control. When the product is not in use, please switch off the power supply and remove the batteries. Please note that we cannot be held responsible for any injuries, property damage, or loss resulting from incorrect operation during the assembly or use of this product. Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.</p>	<p>FCC Statement</p> <p>This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or experienced radio/TV technician for help.</p> <p>RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>
<p>Notice: When inserting the batteries, you must insert according to the correct polarity. Remote Control PAC-MAN Remote Control BLINKY won't function if batteries are reversed.</p>	<p>Notice: When placing the batteries, you must insert according to the correct polarity, the Remote Controller won't function if batteries are reversed.</p>			<p>FCC ID: 2ADMS-ET-0815-40 FCC ID: 2ADMS-ET-0864-49</p> <p>Item# ET-0864</p> <p>Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106</p> <p>Made in Shantou, China</p> <p>Keep all relevant information for future reference</p>	