


Size : 420 x 110 mm

底面印刷

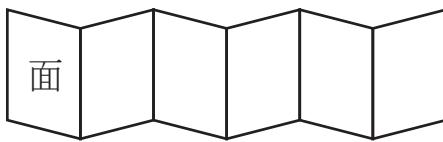

AGES 8+	Product Overview	Package Contents	Standard Control	Standard Control	Standard Control
<p>Disney Stitch REMOTE CONTROL INFLATABLE STITCH Instruction Manual</p> <p>Thank you for purchasing the Remote Control Inflatable Stitch. This manual provides more information about this product, please read the instructions before using.</p> <p>Remote Control Inflatable Stitch</p> <p>Remote Control</p> <p>Instruction Manual</p> <p>Charging Cable</p>	<p>Remote Control Inflatable Stitch</p>	<p>Includes:</p> <ul style="list-style-type: none"> 1(One) RC Inflatable Stitch 1(One) Remote Control 1(One) Charging Cable 1(One) Instruction Manual <p>Specifications</p> <p>Frequency: 2.4 GHz FCC ID: 2ADM5-ET-0876V2LG RC Inflatable STITCH Power Supply: Rechargeable Li-ion Battery 1200 mAh 3.7V X2PCS (Included) Battery Charging Time: 5 hours Charging Cable Included Remote Control Power Supply: 2 x AA 1.5V Batteries (Not Included)</p> <p>Remote Control</p>	<p>Note: To avoid losing control, always pay attention when controlling the Remote Control Inflatable Stitch.</p> <p>Forward Button</p> <p>Control Remote Control Inflatable Stitch to move forward</p> <p>Left Button</p> <p>Control Remote Control Inflatable Stitch to turn left</p> <p>Backward Button</p> <p>Control Remote Control Inflatable Stitch to move backward</p> <p>Right Button</p> <p>Control Remote Control Inflatable Stitch to turn right</p>	<p>Inflate Button</p> <p>Deflate Button</p> <p>Control Remote Control Inflatable Stitch to Inflate / Deflate (When Remote Control Inflatable Stitch turn on, it will inflate automatically)</p>	

Power On/Off	Remote Control Stitch Battery Charging	Battery Installation For Remote Control Stitch	IMPORTANT: BATTERY INFORMATION	Performance Tips	FCC Statement
<p>Base Extension</p> <p>• Press the button to unlock and extend the base for better stability.</p> <p>底</p>	<p>Remote Control Stitch Battery Charging</p> <p>• Make sure switch off the Remote Control Inflatable Stitch before charging. • Unscrew the screw on the battery box cover to open the cover. • Unplug and take out the rechargeable li-ion battery. • Connect the Rechargeable Li-ion Battery to the charging cable and plug on a USB power adapter for charging. • The LED indicator on the charging cable will turn red while charging and will turn green once fully charged.</p> <p>• For your safety, please always use appropriate 5V output charger/Adapter to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product.</p> <p>NOTE: • You must select a qualified charger from a regular manufacturer.</p>	<p>Battery Installation For Remote Control Stitch</p> <p>• To install battery into the Remote Control Inflatable Stitch, unscrew the screw on the battery box cover to open the cover. • Connect the rechargeable li-ion battery to the Remote Control Inflatable Stitch. • Insert the rechargeable li-ion battery into the battery box. • Replace the battery box cover and tighten the screw.</p> <p>Batteries Installation For Remote Control</p> <p>• To install batteries into the Remote Control, unscrew the screw on the battery box cover to open the cover. • Insert 2 x "AA" 1.5V batteries (Not Included) into the battery box. • Batteries should be placed as shown on the diagram. • Replace the battery box cover and tighten the screw.</p> <p>Notice: When inserting the batteries, you must insert according to the correct polarity, the Remote Control won't function if batteries are reversed.</p>	<p>WARNING: DROWNING HAZARD This is not a life-saving Device. Do not use in water.</p> <p>Li-ion battery charging warning statement The input to the product is 5V 2A. In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product. Only charge the product at ambient temperatures between 10 °C / 50 °F and 40 °C/104 °F. Do not heat above 70 °C/158 °F, eg. Do not expose to sunlight or throw into fire. Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.</p> <p>For AA Batteries</p> <p>WARNING: TO AVOID BATTERY LEAKAGE</p> <ol style="list-style-type: none"> 1) Be sure to insert the batteries correctly, and always follow the toy/game and battery manufacturers' instructions. 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. 3) Always remove weak or dead batteries from the product. 4) Remove the battery if the product is left unused for a long period of time. <p>Charging Cable Rating 5V/2A Max.</p> <p>CAUTION: The charging cable included with this item is intended for use with this product. Only use the included charging cable to charge this product.</p>	<p>Performance Tips</p> <p>1. Do not drive the Remote Control Inflatable Stitch on grass, sand or go through water. 2. Do not drive the Remote Control Inflatable Stitch in windy or rainy weather. 3. Do not drive the Remote Control Inflatable Stitch into any sharp object. 4. Keep fingers, hair and loose clothing away from Remote Control Inflatable Stitch.</p> <p>Care and Maintenance</p> <p>Always use dry and soft cloth to clean this product. Avoid this product from being exposed to sunlight or heat. Avoid immersing these toys in water, otherwise, the electronic parts may be damaged. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition.</p> <p>Warning</p> <p>This product is suitable for individuals with operating experience in remote toys or those aged 8 years old and above. Please do not put the product in your mouth to prevent choking hazards from small parts. Avoid inserting your fingers into available interspaces. Do not engage in rough play with the product, such as throwing, crashing, or twisting it. Store smaller-sized product accessories in places that are out of reach of children to prevent accidents. Avoid placing batteries in areas with high temperatures or exposing them to heat. When young children are operating the product, it is essential to ensure that adults are guiding them and maintaining visual control of the toy for convenient control. When the product is not in use, please switch off the power supply and remove the batteries. Please note that we cannot be held responsible for any injuries, property damage, or loss resulting from incorrect operation during the assembly or use of this product. Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.</p>	<p>This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or experienced radio/ TV technician for help.</p> <p>RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in public exposure condition without restriction.</p> <p>FCC ID: 2ADM5-ET-0876V2LG</p> <p>FC</p> <p>Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106</p> <p>Made in Shantou, China</p> <p>Keep All Relevant Information for Future Reference</p>