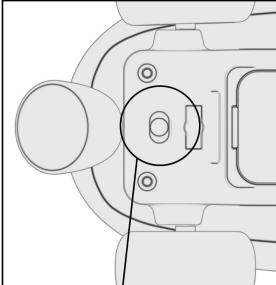
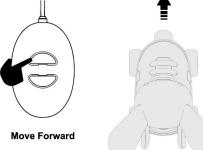
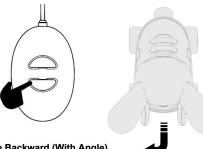
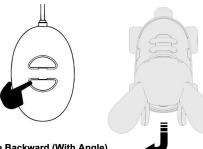
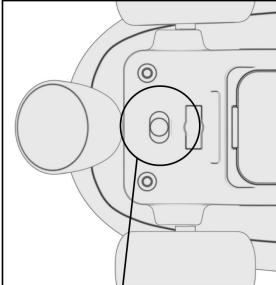
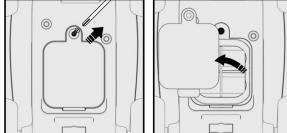
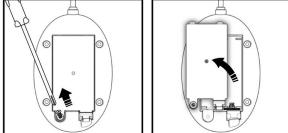
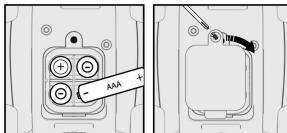
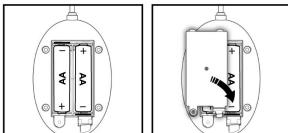


ET-0879 Cinnamonroll_IM

Size : 350 x 110 mm

雙面印刷

May 7 24

AGES 8+	Product Overview	Package Contents	Standard Control	Power On/Off
 cinnamoroll™ REMOTE CONTROL CINNAMOROLL Instruction Manual Thank you for purchasing the Remote Control Cinnamoroll. This manual provides more information about this product, please read the instructions before using.	 Remote Control Cinnamoroll	Includes: 1(One) x Remote Control Cinnamoroll 1(One) x Remote Control 1(One) x Instruction Manual	Note: To avoid losing control, always pay attention when controlling the Remote Control Cinnamoroll.	 On/Off Switch
  	 	Specifications Frequency: 49 MHz FCC ID: 2A0M5-ET-0879 Remote Control Cinnamoroll Power Supply: 4 x AAA 1.5V Batteries (Not Included) Remote Control Power Supply: 2 x AA 1.5V Batteries (Not Included)	 Move Forward  Move Backward (With Angle)  Control Remote Control Cinnamoroll to move backward (with angle)	 On/Off Switch
 	 	Performance Tips 1. Do not drive the Remote Control Cinnamoroll on grass, sand or go through water. 2. Do not drive the Remote Control Cinnamoroll in windy or rainy weather. 3. Do not drive the Remote Control Cinnamoroll into any sharp object. 4. Keep fingers, hair and loose clothing away from Remote Control Cinnamoroll.	For AA Batteries WARNING: TO AVOID BATTERY LEAKAGE 1) Be sure to insert batteries correctly. Follow the markings and battery manufacturers' instructions. 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. 3) Always remove weak or dead batteries from the product. 4) Remove the battery if the product is left unused for a long period of time.	FCC Statement This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Notice: When inserting the batteries, you must insert according to the correct polarity. The Remote Control Cinnamoroll won't function if batteries are reversed.	Notice: When inserting the batteries, you must insert according to the correct polarity. The Remote Controller won't function if batteries are reversed.	Care and Maintenance Always use dry and soft cloth to clean this product. Avoid this product from being exposed to sunlight or heat. Avoid immersing these toys in water; otherwise, the electronic parts may be damaged. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition.	Warning This product is suitable for individuals with operating experience in remote toys or those aged 8 years old and above. Please do not put the product in your mouth to prevent choking hazards from small parts. Avoid inserting your fingers into available interspaces. Do not engage in rough play with the product, such as throwing, crashing, or twisting it. Store smaller-sized product accessories in places that are out of reach of children to prevent accidents. Avoid placing batteries in areas with high temperatures or exposing them to heat. When young children are operating the product, it is essential to ensure that adults are guiding them and maintaining visual control of the toy for convenient control. When the product is not in use, please switch off the power supply and remove the batteries. Please note that we cannot be held responsible for any injuries, property damage, or loss resulting from incorrect operation during the assembly or use of this product.	RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
		IMPORTANT: BATTERY INFORMATION For AAA Batteries WARNING: TO AVOID BATTERY LEAKAGE 1) The batteries used with this product are small parts and should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone American Association of Poison Control Centers (1-800-222-1222). 2) Always purchase the correct size and grade of battery most suitable for intended use. 3) Do not mix old and new batteries, alkaline, standard (Carbon - Zinc) or rechargeable (Nickel-cadmium) batteries. 4) Clean the battery contacts and those of the device prior to inserting batteries. 5) Ensure the batteries are installed correctly with the regard to polarity (+ and -). 6) Always remove batteries if consumed or if product is to be left unused for a long time.	 FCC ID: 2A0M5-ET-0879 Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 SL-306 © 2020 1616 CO., LTD. * and ® denote U.S. Trademarks Used Under License. www.dario.com Made In Shantou, China Keep All Relevant Information for Future Reference	Item# ET-0879