 
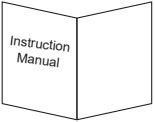 
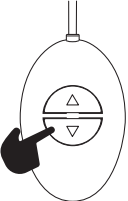 
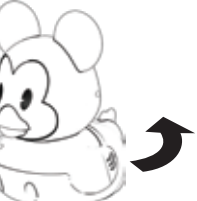 
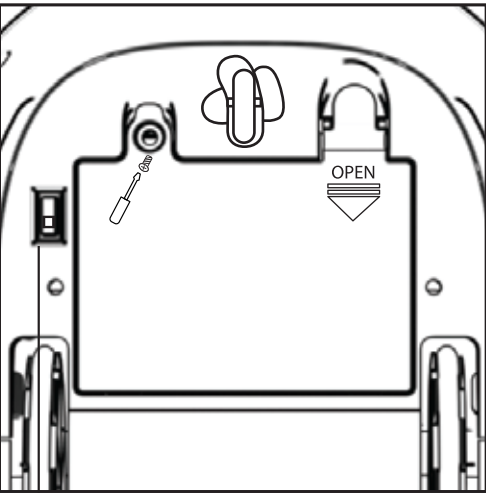 
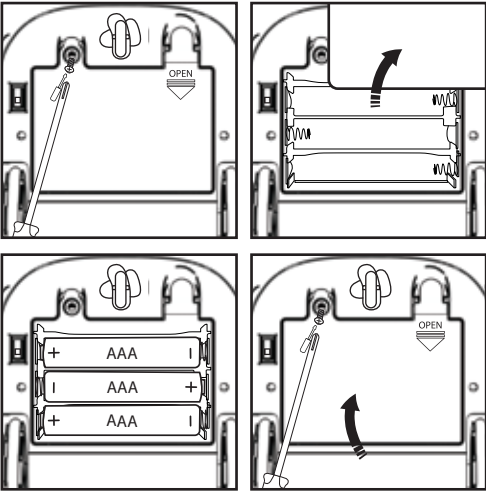 
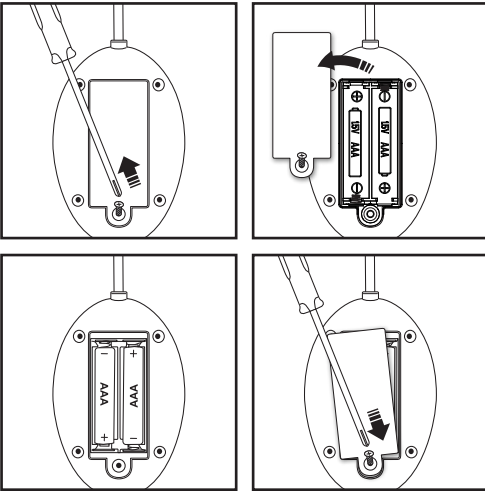 


Size : 350 x 110 mm

AGES 8+ Disney MICKEY AND FRIENDS Remote Control Duck Instruction Manual Thank you for purchasing the Remote Control Duck. This manual provides more information about this RC Toy, please read the instructions before using. 	Product Overview  Mickey Remote Control Duck  Remote Controller  Instruction Manual	Package Contents Includes: 1(One) Mickey Remote Control Duck 1(One) Remote Controller 1(One) Instruction Manual Specifications Mickey Remote Control Duck: Requires 3 (Three) x AAA 1.5V Alkaline Batteries (Not Included) Remote Controller: Requires 2 (Two) x AAA 1.5V Alkaline Batteries (Not Included). Frequency: 27 MHz ⚠CAUTION: Toys operating on the same frequency can interfere each other. Remote Controller  Forward Button Backward-right Button	Standard Control Note: To avoid losing control, always pay attention when controlling the Remote Control Duck.  Forward Button  Control Remote Control Duck to move forward  Backward-left Button  Control Remote Control Duck to move backward-right	Power On/Off  Power On/Off Slide the ON/OFF Switch to ON to turn on the Remote Control Duck. Slide the ON/OFF Switch to OFF to turn off the Remote Control Duck.
Batteries Installation (Remote Control Duck)  To install batteries into the Remote Control Duck, unscrew the screw on the battery box cover to open the cover. Insert 3 x AAA 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw. Notice: When inserting the batteries, you must insert according to the correct polarity, the Remote Control Duck won't function if batteries are reversed.	Batteries Installation (Remote Controller)  To install batteries into the Remote Controller, unscrew the screw on the battery box cover to open the cover. Insert 2(Two) X AAA 1.5V Alkaline Batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw. Notice: When inserting the batteries, you must insert according to the correct polarity, the Remote Controller won't function if batteries are reversed.	Performance Tips 1. Do not drive the Remote Control Duck on grass, sand or go through water. 2. Do not drive the Remote Control Duck in windy or rainy weather. 3. Do not drive the Remote Control Duck into any sharp object. 4. Keep fingers, hair and loose clothing away from Remote Control Duck. Care and Maintenance Always use dry and soft cloth to clean this product. Avoid this product from being exposed to sunlight or heat. Avoid immersing these toys in water, otherwise, the electronic parts may be damaged. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition. IMPORTANT: BATTERY INFORMATION For AAA Batteries ⚠WARNING: TO AVOID BATTERY LEAKAGE 1) The batteries used with this product are small parts and should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone American Association of Poison Control Centers (1-800-222-1222). 2) Always purchase the correct size and grade of battery most suitable for intended use. 3) Do not mix old and new batteries, alkaline, standard (Carbon - Zinc) or rechargeable (Nickel-cadmium) batteries. 4) Clean the battery contacts and those of the device prior to battery installation. 5) Ensure the batteries are installed correctly with the regard to polarity (+ and -). 6) Always remove batteries if consumed or if product is to be left unused for a long time.	Warning This product is suitable for individuals with operating experience in remote toys or those aged 8 years old and above. Please do not put the product in your mouth to prevent choking hazards from small parts. Avoid inserting your fingers into available interspaces. Do not engage in rough play with the product, such as throwing, crashing or twisting it. Store smaller-sized product accessories in places that are out of reach of children to prevent accidents. Avoid placing batteries in areas with high temperatures or exposing them to heat. When young children are operating the product, it is essential to ensure that adults are guiding them and maintaining visual control of the toy for convenient control. When the product is not in use, please switch off the power supply and remove the batteries. Please note that we cannot be held responsible for any injuries, property damage, or loss resulting from incorrect operation during the assembly or use of this product. Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.	FCC Statement This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or experienced radio/ TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. FC FCC ID: 2ADM5-ET-0903-27 Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made in Shenzhen, China Keep All Relevant Information for Future Reference ©Disney Item# ET-0903-MICKEY www.disney.com 