

KM-0002 Karaoke Speaker Manual

Size: H: 200mm x W: 258mm

13 Jun 2024



Bluetooth®


DANCING LIGHT SHOW  
KARAOKE SPEAKER

Instruction Manual

Thank you for purchasing the Dancing Light Show Karaoke Speaker. This manual provides more information about this Karaoke Speaker, please read the instructions before using.



Product Overview

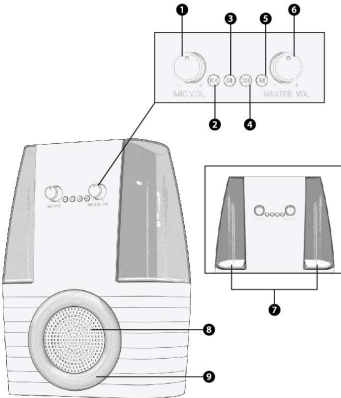

1 Microphone Volume Control

2 Previous Button

3 Play/Pause Button

4 Next Button


5 Mode Button (BT/AUX In/FM Mode)

6 Master Volume Control

7 Fountains with Color Changing LED

8 Speaker

9 Color Changing LED

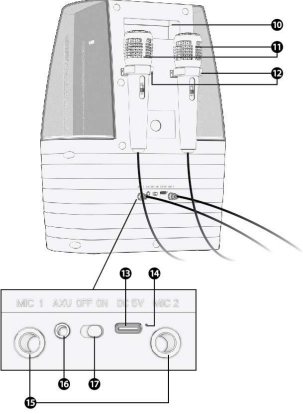

10 Handle

11 Microphones

12 Microphone Holders

13 USB Type-C Power Port

14 LED Indicator

15 Microphone Ports

16 AUX In

17 On/Off Switch

Package Contents

1(One) Dancing Light Show Karaoke Speaker 10.6in. x 14.2in. x 7.1in. (27cm x 36cm x 18cm)

2(Two) Wired Microphones 72in. (183cm)

1(One) USB Type-C Power Cable 19.7in. (50cm)

1(One) Instruction Manual

Technical Specification

Driver Diameter : 78 mm

Impedance : 4 Ohms

Bluetooth Range : 32 feet

Bluetooth Version : 5.3

Power Supply : DC 5V2A

Mic Aux-in Port : 6.5 mm x 2

Wired Mic Cable Length : 6 feet

USB Type-C Power Cable Included

Filled with precision oil and not water.

⚠ Warning: The liquid is flammable. Risk of explosion by shock, fire or other source of ignition. Irritating to skin.

Power On/Off

1. Use the USB Type-C Power Cable provided with this Karaoke Speaker.

2. Connect the USB plug to a USB port on a wall adapter, then connect the USB Type-C plug to the USB Type-C Power Port on the Karaoke Speaker.

Power on

Slide the ON/OFF switch to the "ON" position on the speaker.

Power off

Slide the ON/OFF switch to the "OFF" position on the speaker.

NOTE:

You must select a qualified wall adapter from a regular manufacturer.



USB Type-C Power Cable rating 5V/2A Max.

⚠ CAUTION: The USB Type-C power cable included with this item is intended for use with this product. Only use the included USB Type-C power cable to charge this product.

Pair Karaoke Speaker with your mobile device

1. Keep the distance between your Karaoke Speaker and mobile phone (or other devices) within 32.8 Feet.

2. Power on the Karaoke Speaker.

3. Activate the Bluetooth function on your phone within range and select "KM-0002" from the list shown.

4. You will hear a beep sound when pairing is successful.

Reconnect Karaoke Speaker to your mobile device

When powered on, the Karaoke Speaker will automatically connect with the last successfully paired device.

Function

**Karaoke/ Bluetooth Mode**

Play/Pause: Press the Play/Pause Button Once.

Next Track: Press the Next Button once.

Previous Track: Press the Previous Button once.

Accompaniment Mode On/Off: Press and hold the Mode Button.

Disconnect / Reconnect Bluetooth device:

Press and hold the Play/Pause Button.

**FM Radio Mode**

Switch to FM Mode: Press the Mode Button once.

Auto Scan: Press and hold the Play/Pause Button will start scan all available channels.

Next Channel: Press the Next Button once.

Previous Channel: Press the Previous Button once.

Mute/Unmute: Press the Play/Pause Button once.

**Aux-In Mode**

Plug-in 3.5mm audio cable will automatically switch to Aux-in mode.

Note: 3.5mm audio cable not included.

How To Use The Microphones



On/ Off Switch

1. Plug in the microphone jet to the microphone in port on the speaker.

2. Turn on the On/Off switch on the microphone (up: on/ down: off).

3. Use the microphone volume control to adjust the volume.

Caution: Please turn off the microphone before put into the microphone holder. Otherwise may cause loud squealing or damage the product.

• If the Karaoke Speaker cannot be paired with your device, please try the following:

Ensure that your speaker is in pairing mode or reconnection mode.

Ensure that Bluetooth search function of your mobile device is activated.

• If the Karaoke Speaker cannot be powered on:

Ensure that the power adapter is connected securely and the outlet works.

⚠ Safety instructions

- The input voltage to the product is DC 5V 2A.

- In order to operate the product in safe manner and reliable conditions, please only adopt certified appropriate adapter for operating the product.

- Only operate the product at ambient temperatures between 10°C/ 50°F and 40°C/ 104°F.

- Do not heat above 70°C/ 158°F, eg. Do not expose to sunlight or throw into fire.

- Switch off the product after use.

- Please note that we won't take any responsibility for any wrong operation (eg: Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.

FCC Statement

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or experienced radio/ TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FC

FCC ID: 2ADM5-KM-0002

Class 1 LED product

Item# KM-0002

Distributed by 1616 Holdings, Inc.

701 Market Street, Suite 200

Philadelphia, PA 19106

Made in China

Keep All Relevant Information for Future Reference