

Size: H: 200mm x W: 258mm



BASS JAZZ 

KARAOKE SPEAKER

WITH WIRELESS MICROPHONES

Instruction Manual

Thank you for purchasing the Karaoke Speaker. This manual provides more information about this Karaoke Speaker, please read the instructions before using.


Product Overview



Karaoke Speaker



Wireless Microphones x2

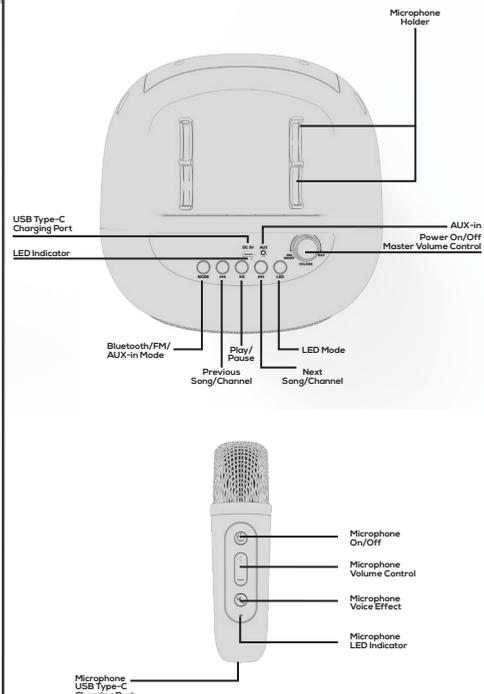

Microphone Holder

USB Type-C Charging Port

LED Indicator

Bluetooth/FM/AUX-in Mode

Play/Pause

Previous Song/Channel

Next Song/Channel

LED Mode

AUX-in

Power On/Off

Master Volume Control

Microphone On/Off

Microphone Volume Control

Microphone Voice Effect

Microphone LED Indicator

Microphone USB Type-C Charging Port

Package Contents

- 1(One) Karaoke Speaker
- 1(One) USB Type-C Charging Cable
- 1(One) Instruction Manual
- 2(Two) Wireless Microphones

Technical Specification

Driver Diameter: 165 mm
 Impedance: 4 Ohms
 Power Supply: DC 5V1A Li-ion Battery 3.7V 2000 mAh
 Microphone Battery Capacity: 300 mAh
 Playtime: 5-6 Hours
 Charging Time: 4 Hours
 Bluetooth Range: 32.8 Feet
 Bluetooth Version: 5.3
 USB Type-C Charging Cable Included
 USB Type-C Charging Cable rating 5V/1A Max.

Power On/Off

Power on
 Speaker: Rotate the On/Off Knob clockwise.
 Microphone: Press and hold the On/Off button for 3 seconds.

Power off
 Speaker: Rotate the On/Off Knob counter-clockwise until a click sound from the knob.
 Microphone: Press and hold the On/Off button for 3 seconds.

Pair Karaoke Speaker with your mobile device

1. Keep the distance between your Karaoke Speaker and mobile phone (or other devices) within 32.8 Feet.
2. Power on the Karaoke Speaker.
3. Activate the Bluetooth function on your phone within range and select "KM-0008" from the list shown.
4. You will hear a prompt sound when pairing is successful.

Reconnect Karaoke Speaker to your mobile device

When powered on, the Karaoke Speaker will automatically connect with the last successfully paired device.


Function

Karaoke/Bluetooth Mode
 Play/Pause: Press the Play/ Pause Button Once.
 Next Track: Press the Next Button once.
 Previous Track: Press the Previous Button once.

FM Radio Mode
 Switch to FM Mode:
 Press the Mode Button once
 Auto Scan:
 Press and hold the Play/Pause Button will start scan all available channels.
 Next Channel: Press the Next Button once.
 Previous Channel: Press the Previous Button once.
 Mute/Unmute: Press the Play/Pause Button once.

Aux-In Mode
 Plug-in 3.5mm audio cable will automatically switch to Aux-In mode.
 Note: 3.5mm audio cable not included.

How To Use The Microphones

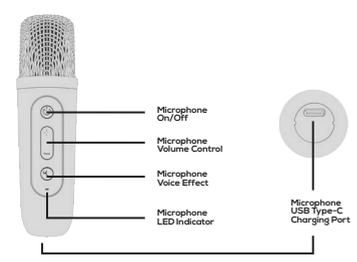

1. Turn on the Microphone with the on/off button, it will automatically connect to the Karaoke Speaker.
2. Use the microphone volume control (+/-) to adjust the volume.
3. Long-press (+) to increase microphone reverb volume.
4. Long-press (-) to decrease microphone reverb volume.
5. To mute/unmute the microphone, short-press the on/off button. Karaoke Speaker will play a short tone as a confirmation.
6. Short-press the Voice Effect button to toggle between voice effects: Original (no effect)/ Male (deep voice)/ Female (goddess voice)/ Child (baby voice)/ Monster (distorted voice)
7. When the battery is low, the Microphone LED Indicator will flash rapidly in every five seconds. Please charge the battery immediately.

Caution: Please turn off the microphone before put into the microphone holder. Otherwise may cause loud squealing or damage the product.

Charging your Karaoke Speaker and Microphones

1. Use the USB Type-C charging cable provided with this Karaoke Speaker.
2. Connect the USB plug to a USB port on a computer or wall adapter, then connect the USB Type-C plug to USB Type-C charging port on the speaker or microphones to begin charging.
3. The LED Indicator will turn red while charging and will turn off once fully charged.

NOTE:

- Please fully charge the speaker and the microphones before use.
- You must select a qualified charger from a regular manufacturer.
- You must charge the Karaoke Speaker if it has been not used for more than 6 months.



CAUTION: The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.

FAQ

- **If the Karaoke Speaker cannot be paired with your device, please try the following:**
 Ensure that your speaker is in pairing mode or reconnection mode.
 Ensure that Bluetooth search function of your mobile device is activated.
- **If the Karaoke Speaker cannot be recharged:**
 If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.

 Safety instructions for the lithium battery and charging the product

- The input voltage to the product is DC 5V 1A.
- In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product.
- Only charge the product at ambient temperatures between 10°C/ 50°F and 40°C/ 104°F.
- Do not heat above 70°C/ 158°F, eg. Do not expose to sunlight or throw into fire.
- Switch off the product after use.
- Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.
- In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference.
 (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
 The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.

 Item# KM-0008

FCC ID: 2ADM5-KM-0008-SPK
 FCC ID: 2ADM5-KM-0008-MIC

Keep All Relevant Information for Future Reference

Distributed by 1616 Holdings, Inc.
 701 Market Street, Suite 200
 Philadelphia, PA 19106