



Date: 09 DEC 2024 Product: SP-0263 IM	SKU:	ZEEVA INT LTD
--	------	-------------------------


SP-0263 IM
Size: 322.5(w) x 100(h) mm



 

WITH CORD HANDLE
Instruction Manual

Thank you for purchasing the Reverb Wireless Speaker.
This manual provides more information about this wireless speaker,
please read the instructions before using.





Product Overview



1. USB Type-C Charging Port
2. LED Indicator
3. Volume Up/Next Song Button
4. Power/Bluetooth/FM Radio Mode Button
5. Volume Down/Previous Song Button

Package Contents

Includes: 1(One) Reverb Wireless Speaker
1(One) Charging Cable / 1(One) Instruction Manual

Power On/Off

Power on: Press and hold 2 second on the Power Button.
Power off: Press and hold 3 second on the Power Button.
Note: Always power off the speaker when not in use.

Pair Wireless speaker with your mobile device

1. Keep the distance between your wireless speaker and mobile phone (or other devices) within 32.8 Feet.
2. Power on the wireless speaker.
3. Activate the Bluetooth function on your phone within range and select "SP-0263 SPK" from the list shown.
4. You will hear a beep sound when pairing is successful.

Reconnect Wireless speaker to your mobile device

When powered on, the wireless speaker will automatically connect with the last successfully paired device.



Charging your Wireless speaker

⚠ For your safety, please always use appropriate 5V output charger/Adapter to charge the product. **DO NOT USE** Quick Charging USB Adapter to charge the product, as it might damage the product.

1. Use the USB Type-C charging cable provided with this wireless speaker.
2. Open the water resistant cover, connect the USB plug to a USB port on wall adapter, then connect the USB Type-C plug to USB Type-C charging port on the speaker to begin charging.
3. The LED Indicator will turn red while charging and will turn off once fully charged.

NOTE:

- You must select a qualified charger from a regular manufacturer.
- You must charge the Wireless speaker if it has been not used for more than 6 months.



⚠ CAUTION: The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.

USB Type-C Charging Cable rating 5V/1A Max.

Bluetooth Speaker Mode

Play/Pause: Short press the Power Button once.
Next Track: Short press the "+" Button
Previous Track: Short press the "-" Button
Volume Up: Long press the "+" Button
Volume Down: Long press the "-" Button

FM Radio Mode

Switch to FM Radio Mode: Short press the Power Button 2 times.
Short press the Power Button 2 times again will back to Bluetooth Speaker mode.
Auto Scan: Short press the Power Button.
Next Channel: Short press the "+" Button
Previous Channel: Short press the "-" Button
Volume Up: Long press the "+" Button
Volume Down: Long press the "-" Button
NOTE: Plug in the USB Type-C charging cable will enhance the FM Radio's sensitivity.

<p>True Wireless Stereo (TWS) Mode</p> <p>(2pcs Reverb Wireless Speakers are needed for TWS mode)</p> <div><p>1. Turn On both wireless speakers. 2. Disconnect both wireless speakers from any Bluetooth device. 3. Keep both wireless speakers side by side. 4. Triple Press the Power Button on ONE of the wireless speakers. And then it will have an alert sound. 5. The wireless speakers will paired in few seconds. When successfully paired, the speaker will have another alert sound. 6. Now you can follow the "Pair Wireless speaker with your mobile device" to pair with the mobile device. 7. To disable the TWS mode, triple press Power Button on ONE of the wireless speakers. The speaker will have an alert sound and then unpaired. NOTE: TWS mode is not supported in FM mode.</p></div>	<p>FAQ</p> <div><p>• If the Wireless speaker cannot be paired with your device, please try the following: Ensure that your speaker is in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated.</p><p>• If the Wireless speaker cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works.</p></div> <p>⚠ Safety instructions for the lithium battery and charging the product</p> <div><p>-The input voltage to the product is DC 5V 1A. -In order to charge the product in safe manner and reliable conditions, please only adopt certified charger/adapter for charging the product. -Only charge the product at ambient temperatures between 10°C/50°F and 40°C/104 °F. -Do not heat above 70°C/158°F, eg. Do not expose to sunlight or throw into fire. -Switch off the product after use. -Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. -In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.</p></div>
--	---

Approval:

Date: