

**SP-0267 IM**  
Size: 193.5(w) x 100(h) mm

**Disney STITCH LED WIRELESS SPEAKER**

**Instruction Manual**


Thank you for purchasing the Stitch LED Wireless Speaker. This manual provides more information about this wireless speaker, please read the instructions before using.





www.disney.com

**Product Overview**

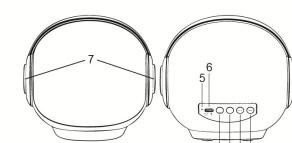

1. Power / FM Mode / LED On/Off Button  
2. Play / Pause / TWS / FM Scan Button  
3. Volume Up / Next Song / Next Channel Button  
4. Volume Down / Previous Song / Previous Channel Button  
5. LED Indicator  
6. USB Type-C Charging Port  
7. Color changing LED

**Charging Your Wireless Speaker**

For your safety, please always use appropriate 5V output charger/Adapter to charge the product. **DO NOT USE** Quick Charging USB Adapter to charge the product, as it might damage the product.

- Use the USB Type-C charging cable provided with this wireless speaker.
- Open the wall mount cover, connect the USB plug to a USB port on wall adapter, then connect the USB Type-C plug to USB Type-C charging port on the speaker to begin charging.
- The LED Indicator will turn while charging and will turn off once fully charged.

**NOTE:**

- You must select a qualified charger from a regular manufacturer.
- You must charge the Wireless speaker if it has been not used for more than 6 months.

**CAUTION:** You USB Type-C charging cable included in this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.

**USB Type-C Charging Cable rating 5V/500mA Max.**

**Bluetooth Speaker Mode**

Play/Pause: Short press the Play/Pause Button once.  
Next Track: Long press the "+" Button  
Previous Track: Long press the "-" Button  
Volume Up: Short press the "+" Button  
Volume Down: Short press the "-" Button

**FM Radio Mode**

Note: Please plug in USB Type-C charging cable to increase FM sensitivity.  
Switch to FM Radio Mode: Short press the On/Off Button.  
Short press On/Off Button again will back to Bluetooth Speaker mode.  
Auto Scan: Long press the "+" or "-" Button.  
Long press the "+" or "-" Button again to stop scan.  
Next Channel: Long press the "+" Button  
Previous Channel: Long press the "-" Button  
Volume Up: Short press the "+" Button  
Volume Down: Short press the "-" Button  
Multi-Volume: Short press the Play/Pause Button

**True Wireless Stereo (TWS) Mode**

Connect Two Round Character LED Wireless Speakers, Series SP-0267 for TWS mode.

- Turn On both speakers.
- Disconnect both wireless speakers from any Bluetooth device.
- Keep both wireless speakers side by side.
- Double press the Play Button on ONE of the wireless speakers.
- The wireless speaker will connect with the other wireless speaker in few seconds. When successfully connected, both wireless speakers will have another alert sound.
- Now you will follow the "Pair Wireless speaker with your mobile device" to pair with the mobile device.
- To disable the TWS mode, double press the Play Button on ONE of the wireless speakers.

The speaker will have a prompt sound and then disconnected.  
NOTE: TWS mode is not supported in FM mode.

**LED Lighting On/Off**

Double press the Power Button to Turn On or Off the LED Lighting.

**Technical Specification**

Specifications:

- Driver Diameter: 52 mm
- Impedance: 3.5 Ohms
- Power Supply: Li-ion Battery 3.7V 300 mAh
- Playtime: 4 Hours
- Charging Time: 2-3 Hours
- Bluetooth Range: 32 Feet
- Bluetooth Version: 5.3
- FM Radio Mode
- TWS Mode

USB Type-C Charging Cable Included

**Reconnect Wireless Speaker To Your Mobile Device**

When powered on, the wireless speaker will automatically connect with the last successfully paired device.

**FAQ**

If the Wireless speaker cannot be paired with your device, please try the following:  
Ensure that your speaker is in pairing mode or reconnection mode.  
Ensure that Bluetooth search function of your mobile device is activated.

If the Wireless speaker cannot be recharged:  
If you use a power outlet, ensure that the power supply is connected securely and the outlet works.

**Safety instructions for the lithium battery and charging the product**

- The input voltage to the product is DC 5V 500mA.
- In order to charge the product in safe manner and reliable conditions, please only use a certified appropriate charger/adapter for charging the product.
- Only charge the product at ambient temperatures between 10°C/50°F and 40°C/104°F.
- Do not heat above 70°C/158°F, eg. Do not expose to sunlight or throw into fire.
- Switch off the product after use.
- Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.
- In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.

**FCC STATEMENT**

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cautions: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to other equipment. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio / TV technician for help.

**RF warning statement:**  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.

**ITEM# SP-0267**  
FCC ID: 2ADMS-SP-0267  
Distriuted by 1616 Holdings, Inc.  
701 Market Street, Suite 200  
Philadelphia, PA 19106  
Keep All Relevant Information  
For Future Reference  
Made in China

Approval:

Date: