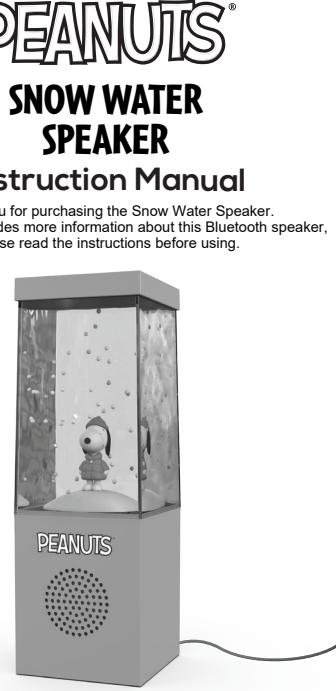
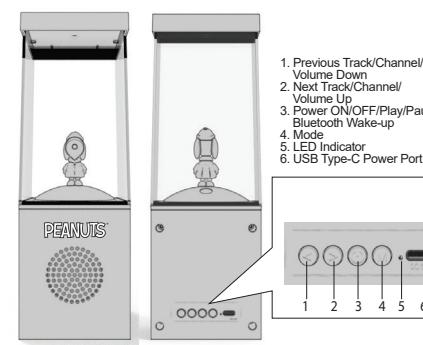
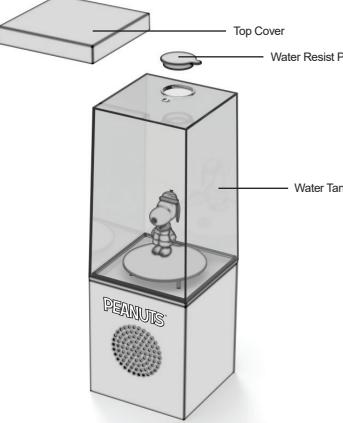


SP-0771 SNOW WATER SPEAKER IM
Size: 258(w) x 200(h) mm

 <p>PEANUTS® SNOW WATER SPEAKER Instruction Manual</p> <p>Thank you for purchasing the Snow Water Speaker. This manual provides more information about this Bluetooth speaker, please read the instructions before using.</p>	<p>Product Overview</p> <p>Front Back</p>  <p>1. Previous Track/Channel/ Volume Down 2. Next Track/Channel/ Volume Up 3. Power ON/OFF/Play/Pause/ Bluetooth Wake-up 4. Mode 5. LED Indicator 6. USB Type-C Power Port</p> <p>Package Contents</p> <p>1(One) Peanuts Snow Water Speaker 1(One) USB Type-C Power Cable 1(One) Instruction Manual 1(One) Pack Decoration Beads</p> <p>Specification</p> <p>Driver Diameter: 52 mm Impedance: 4 Ohms Power Supply: 5V/1A Bluetooth Range: 32 Feet</p> <p>Bluetooth Version: 5.3 FM Radio Mode USB Type-C Power Cable Included</p> <p>USB Type-C Power Cable rating 5V/1A Max.</p> <p>CAUTION: The USB Type-C power cable included with this item is intended for use with this product. Only use the included USB Type-C power cable to operate this product.</p>	<p>Installation</p>  <p>1. Remove the Top Cover and Water Resist Plug. 2. Fill up the water tank with distilled water to 80% full. (It is recommended to use distilled or filtered water, instead of tap water.) (mixed with 2% dish soap will increase the smoothness of the snow effect) 3. Install the Water Resist Plug and Top Cover, dry the surface of the speaker. 4. Run the speaker for 3-5 minutes to release the air bubbles from the water pump. (refer to "Power On/Off" section) 5. Remove the USB Power Cable and pour the Decoration Beads to the Water Tank. 6. Fill up the water tank if needed. 7. Install the Water Resist Plug and Top Cover, dry the surface of the speaker. 8. Change water occasionally when dirty.</p> <p>Note: Do not immerse the speaker in water. Completely dry the speaker's surface before plug-in the USB Power Cable. Do not operate the speaker when there is any water leakage. When the product was accidentally fell down, immediately remove the power source in safe condition and pick up the product.</p>	<p>Power On/Off</p> <p>Power on Connect the Snow Water Speaker to a 5V/1A USB Adapter (not included) with supplied USB Type-C Power Cable. Long press ON/OFF switch for 3 second for "ON".</p> <p>Power off Long press 3 second for "OFF".</p> <p>Note: If the Bluetooth function is in sleep mode, the Power off will not function.</p> <p>Bluetooth Speaker Mode</p> <p>Play/Pause: Short press the ON/OFF Button once. Next Track: Short press the ">" Button Previous Track: Short press the "<" Button Volume Up: Long press the ">" Button Volume Down: Long press the "<" Button</p> <p>Note: The Bluetooth function will go to sleep mode when it was not connect for 5 minutes. Short press the ON/OFF button once will wake-up the Bluetooth function.</p> <p>FM Radio Mode</p> <p>Switch to FM Radio Mode: Short press the "M" Button once. Short press the "M" Button again will back to Bluetooth Speaker mode. Auto Scan: Long press the "M" Button. Next Channel: Short press the ">" Button Previous Channel: Short press the "<" Button Volume Up: Long press the ">" Button Volume Down: Long press the "<" Button Mute/Unmute: Short press the ON/OFF Button</p> <p>Pair Bluetooth Speaker With Your Mobile Device</p> <p>1. Keep the distance between your Bluetooth speaker and mobile phone (or other Bluetooth devices) within 32 Feet. 2. Power on the Bluetooth speaker. 3. Activate the Bluetooth function on your phone within range and select "SP-0771 SPK" from the list shown. 4. You will hear a beep sound when pairing is successful.</p> <p>Reconnect Bluetooth Speaker to Your Mobile Device</p> <p>When powered on, the Bluetooth speaker will automatically connect with the last successfully paired device.</p>
<p>Snow Moving Effect</p> <p>Double Press the ON/OFF Button to start or stop the Snow Moving Effect.</p> <p>True Wireless Stereo (TWS) Mode</p> <p>NOTE: Please purchase two pieces of Snow Water Speakers to perform TWS Mode. TWS mode is not supported in FM Radio mode.</p> <p>1. Turn On both Bluetooth speakers. 2. Disconnect both Bluetooth speakers from any Bluetooth device. 3. Keep both Bluetooth speakers side by side. 4. Double press the "M" Button on ONE of the Bluetooth speakers. 5. The Bluetooth speaker will connect with the other Bluetooth speaker in few seconds. When successfully connected, both Bluetooth speakers will have another alert sound. 6. Now you can follow the "Pair Bluetooth speaker with your mobile device" to pair with the mobile device. 7. To disable the TWS mode, power off and on both Bluetooth speakers. Or, double press the "M" Button on ONE of the Bluetooth speakers. They will have an alert sound and then disconnected.</p>	<p>FAQ</p> <p>♦ If the Bluetooth speaker cannot be paired with your device, please try the following: Ensure that your speaker is in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated.</p> <p>♦ If the Bluetooth speaker cannot be powered on: Ensure that the power adapter is connected securely and the outlet works.</p> <p>⚠ Safety Instructions</p> <p>- The input voltage to the product is DC 5V 1A. - In order to operate the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for operating the product. - Switch off the product after use. - Please note that we won't take any responsibility for any wrong operation (e.g. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.</p> <p>FCC STATEMENT</p> <p>1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.</p> <p>2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.</p> <p>RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p>The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.</p> <p>FCC</p> <p>FCC ID: 2ADM5-SP-0771 Item# SP-0771</p> <p>Keep All Relevant Information for Future Reference</p> <p>Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106</p>		

Approval:

Date: