



Size: 322(w) x 100(h) mm

<div><div><div><div><div><div>SINGER</div><div>LED WIRELESS MICROPHONE SPEAKER</div><div>Instruction Manual</div></div></div><div><div>Thank you for purchasing the Singer LED Wireless Microphone Speaker. This manual provides more information about this product, please read the instructions before using.</div></div></div></div></div>		<div><div><div><div>Product Overview</div><div><div><div><div>Front</div><div>Back</div></div><div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div></div><div><div><div>Detachable Disco Ball</div><div>Bottom</div></div></div></div><div><div><div>5.Vocal effects / Light Control</div><div>6.Mic / Echo Control</div><div>7.USB Type-C Charging Port</div><div>8.Disco Ball connect port</div></div><div><div>Note: The port is only for Disco Ball only. Do not plug-in any other device.</div></div></div></div></div></div></div></div></div>		<div><div><div><div>Power On/Off</div><div><div><div>Power on</div><div>Press and hold the Power Button.</div></div><div><div>Power off</div><div>Press and hold the Power Button.</div></div></div><div><div>Note: Always power off the karaoke microphone when not in use.</div></div></div></div><div><div><div><div>Pair Wireless Microphone Speaker with your mobile device</div><div><div><div>1. Keep the distance between your wireless microphone speaker and mobile phone (or other devices) within 32.8 Feet.</div><div>2. Power on the wireless microphone speaker.</div><div>3. Activate the Bluetooth function on your phone within range and select "SP-1023" from the list shown.</div><div>4. You will hear a beep sound when pairing is successful.</div></div></div></div></div><div><div><div><div>Reconnect Wireless Microphone Speaker to your mobile device</div><div><div><div>When powered on, the wireless karaoke microphone will automatically connect with the last successfully paired device.</div></div></div></div></div><div><div><div><div>How to use</div><div><div><div>1. Switch on your microphone</div><div>2. Connect the microphone to any audio device by Bluetooth in order to listen to music.</div><div>3. Play your music track and adjust volume by your audio device or speaker volume button.</div></div></div></div></div><div><div><div><div>FM Radio Mode</div><div><div><div>Long press the Mode Button to change to FM Radio mode.</div><div>Short press the Mode Button to mute/unmute.</div><div>Short press the Power Button to scan channels.</div><div>Short press the Volume Up or Down Buttons to switch to next or previous channel.</div><div>Long press the Volume Up or Down Buttons to tune the volume.</div><div>Long press the Mode Button again to change to Bluetooth mode.</div></div></div></div></div><div><div><div><div>Light Mode</div><div><div><div>Long press the Vocal effects / light Control Button to switch between different light effect.</div></div></div></div></div><div><div><div><div>Vocal effects Mode</div><div><div><div>Short press the Vocal effects / light Control Button to switch between different vocal effect.</div></div></div></div></div><div><div><div><div>Echo effects Mode</div><div><div><div>Long press the Mic / Echo Control Button to switch between different echo level.</div></div></div></div></div><div><div><div><div>Mic effects Mode</div><div><div><div>Short press the Mic / Echo Control Button to turn on/off the microphone function.</div></div></div></div></div></div></div></div></div></div></div></div></div></div>	<div><div><div><div>Charging Your Wireless Microphone Speaker</div><div><div><div><div>1. Use the USB Type-C charging cable provided with this wireless speaker.</div><div>2. Connect the USB Type-C plug to USB Type-C charging port on the speaker, then connect the USB plug to a USB port on a computer or wall adapter to begin charging.</div><div>3. The LED Indicator will turn red while charging and will turn off once fully charged.</div></div></div><div><div><div>NOTE:</div><div><div>You must select a qualified charger from a regular manufacturer.</div><div>You must charge the Wireless speaker if it has been not used for more than 6 months.</div></div></div><div><div><div><div>USB Plug</div><div>USB Type-C Charging Plug</div></div><div><div>USB Type-C Charging Cable rating 5V/1A Max.</div><div><div>CAUTION: The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.</div></div></div></div></div></div><div><div><div><div>FAQ</div><div><div><div><div>♦ If the wireless karaoke microphone cannot be paired with your device, please try the following:</div><div><div>Ensure that your microphone is in pairing mode or reconnection mode.</div><div>Ensure that Bluetooth search function of your mobile device is activated.</div></div></div><div><div><div>♦ If the wireless karaoke microphone cannot be recharged:</div><div><div>If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.</div></div></div></div><div><div><div>⚠ Safety instructions for the lithium battery and charging the product</div><div><div><div>-The input voltage to the product is DC 5V 1A.</div><div>-In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product.</div><div>-Only charge the product at ambient temperatures between 10°C/ 50°F and 40°C/104°F.</div><div>- Do not heat above 70°C/158°F, eg. Do not expose to sunlight or throw into fire.</div><div>-Switch off the product after use.</div><div>-Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.</div><div>-In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.</div></div></div></div></div></div></div></div></div></div></div></div></div></div>	<div><div><div><div>FCC STATEMENT</div><div><div><div>1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:</div><div><div>(1) This device may not cause harmful interference.</div><div>(2) This device must accept any interference received, including interference that may cause undesired operation.</div></div></div><div><div>2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</div></div></div></div><div><div><div>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</div><div><div>- Reorient or relocate the receiving antenna.</div><div>- Increase the separation between the equipment and receiver.</div><div>- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</div><div>- Consult the dealer or an experienced radio/TV technician for help.</div></div></div></div><div><div><div><div>RF warning statement:</div><div><div><div>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</div></div></div></div></div><div><div><div><div>The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.</div></div></div><div><div><div><div>FCC</div><div>FCC ID: 2ADMS-SP-1023</div></div></div><div><div><div><div>Class 1 LED product</div></div></div><div><div><div><div>Keep All Relevant Information For Future Reference</div><div>Made in China ITEM# SP-1023</div></div></div></div></div></div></div></div></div></div>
---	--	--	--	---	---	---

Approval:

Date: