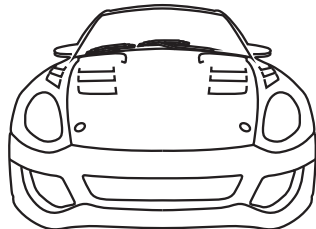
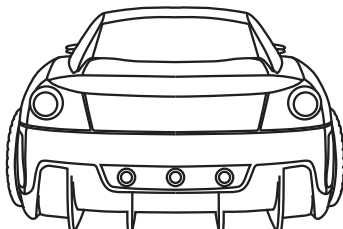
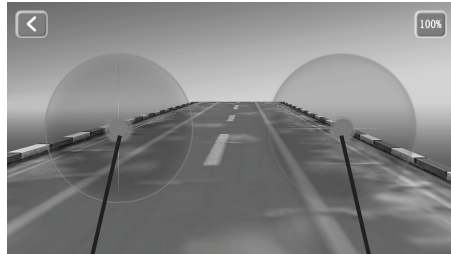
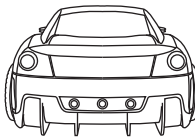
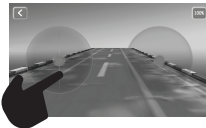
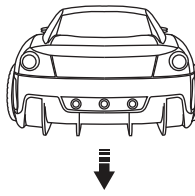
 
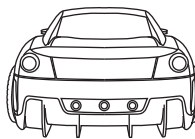
 
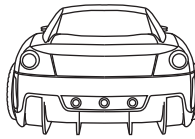
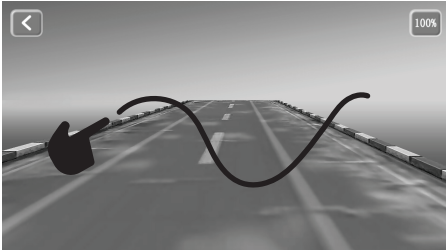
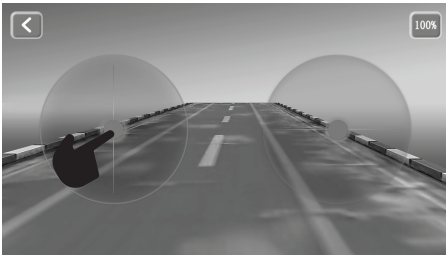
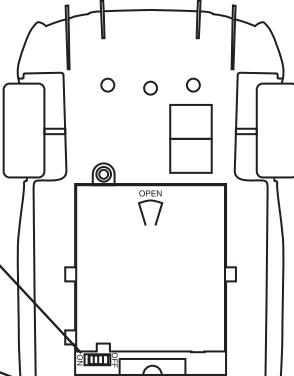
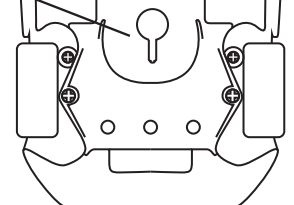
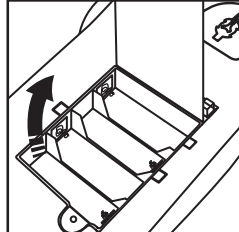
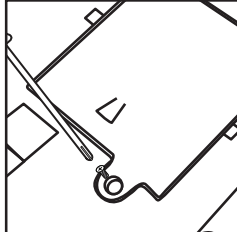
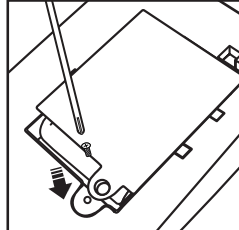
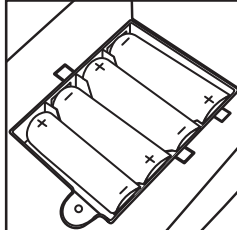


10+ WIRELESS RC CAR Instruction Manual Thank you for purchasing the Wireless RC Car. This manual provides more information about this RC Car, please read the instructions before using. 	Product Overview  Front  Back Package Contents Wireless RC Car x 1 Instruction Manual x 1	Specifications Power supply: 4 x "AA" 1.5V Batteries (Not Included) Smartphone App Download  Method 1: Scan the QR Code for quick download Method 2: Visit the following website for download http://120.77.216.242/2code2lxhl/lxhlbletolecarnew2.php Method 3: Search "Wireless RC Car" in the app store As the app download limitations are not the same in all the countries. Please noted that the method of download maybe different, but you can try all the three methods provided for you above. Compatible With: iOS & Android	Smartphone App Connection  Open the app and press the search button on the left, it will show the Wireless RC Car nearby, select the RC car and it will connect with the app automatically.	Standard Control  Forward / Backward  Left / Right Use the left controller to move the Wireless RC Car Forward / Backward. Use the right controller to turn the Wireless RC Car Left / Right. Operation Method Note: To avoid losing control, always pay attention when controlling the Wireless RC Car.  Forward Button  Control Wireless RC Car to move forward	 Backward Button  Control Wireless RC Car to move backward  Left Button  Control Wireless RC Car to move left  Right Button  Control Wireless RC Car to move right
	Hand Strokes  Draw a line on the screen and the Wireless RC Car will automatically follow the path to start moving. Gravity Sensor  Use the left controller to move the Wireless RC Car Forward / Backward. Turn your smartphone left or right to use the sensor for Left / Right control.	Power On/Off & Front Axle Control  Power On / Off  Front Axle Control Power On/Off Slide the ON/OFF Switch to the left to turn on the Wireless RC Car. Slide the ON/OFF Switch to the right to turn off the Wireless RC Car. Front Axle Control Slide the Front Axle Control Switch to adjust front axle alignment.	Wireless RC Car Batteries Installation   To install batteries into the Wireless RC Car, unscrew the screw on the battery box cover to open the cover. Insert 4 x "AA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Notice: When inserting the batteries, you must insert according to the correct polarity, the Wireless RC Car wont function if batteries are reversed.	Performance Tips 1. Do not drive the Wireless RC Car on grass, sand or go through water. 2. Do not drive the Wireless RC Car in windy or rainy weather. 3. Do not drive the Wireless RC Car into any hard object. 4. Keep fingers, hair and loose clothing away from Wireless RC Car. Care and Maintenance Always use dry and soft cloth to clean this product. Avoid this product from being exposed to sunlight or heat. Avoid immersing these toys in water, otherwise, the electronic parts may be damaged. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition. IMPORTANT: BATTERY INFORMATION ⚠ CAUTION: 1. TO AVOID BATTERY LEAKAGE a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings. b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries. c. Remove exhausted or dead batteries from the product. d. Remove batteries if product is not to be played with for a long time. e. Do not short-circuit the supply terminals. 2. Should this product cause, or be affected by local electrical interference, move it away from other electrical equipment.Reset (switching ON&OFF again or removing and re-inserting batteries) if necessary.	Warning This product is suitable to be used by people who has operating experience in rc car model or aged no less than 10 years old. Please do not put the product in your mouth to prevent choking hazard of small parts. Please do not put the finger into available interspaces. Please do not play the product in a brutal way such as throwing, crashing or twisting it. Please store the smaller-sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents. Avoid placing the batteries in places in high temperatures and avoid exposure to heat. When young children are operating the product, it shall be ensured that the adults are guiding and making sure the product control is within the viewing range of the controller (or instructor) so that it makes the control of the rc car more convenient. When the product is not in use, please switch off the power supplies of the Wireless RC Car and the remote control, and remove the batteries from the product. Please note that we won't take any responsibility for any wrong operation as this may result in severe injury or loss of property, and we cannot control the operating process during the time when the user assembles or uses this product. Once this product is sold, we won't be responsible for any safety responsibility during the time the user operates or uses controls this products.