

Product introduction - TS006BA



This wireless equipment has a possibility of mixing electric waves and cannot provide the services on life and safety

Thank you for purchasing TSST's Portable Bluetooth Speaker. This product supports Bluetooth 2.1 and easy to hand carry, to provide high quality sound by simplified control. From your Bluetooth devices, you can play your music library to the product without connecting wires also by AUX cable. This product is targeting home-use (class B) electromagnetic wave instrument and can be used in any place.

Specifications

Name of Product	Portable Bluetooth Speaker
Model	TS006BA
Input Power	5V-1.0A(Max), MicroUSB
Size(without Cover)	124 X 68 X 25 mm (W X D X H)
Internal Battery	3.7V DC / 750 mAh Li-ion (play 10 hours)
AMP Power	3W x 2ch
Connection	Micro USB (charging) / AUX Input (3.5mm)
Bluetooth	Bluetooth V2.1 + EDR
Used Frequency	2,402 ~ 2,480 MHz
Proper Temperature	0 ~ 45 °C


The life time of battery may decrease slowly by repeating charging and discharging cycles. Play time is based on 1/2 volume.

Compositon of product

Contents

- Speaker
- User Manual
- Micro USB Cable for charging
- The USB Cable is not for telecommunication.
- AUX cable and power adaptor are not provided.

Front

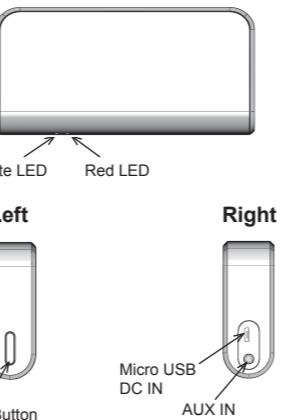

Troubleshooting

Q: The Product is not turned on.

A: Make sure built-in battery is fully charged.
Check that the USB cable is not damaged and USB port of adaptor or PC is normal.

Q: The Product is not charged.

A: Make sure the USB cable, plug is not damaged.
Check the USB cable is connected to PC or adaptor USB port properly.

Q: No sound or sound is very low.

A: Make sure the Bluetooth wireless connection is correct and playback has been successfully started.
Make sure the volume on your Bluetooth device is turned up.

Q: Paired device can not reconnect to the Product.

A: A re-connection may fail due to the pairing information has been deleted from your Bluetooth device.
Delete "Handy" from the list on your Bluetooth device.
Repeat the pairing procedures again.

Before you begin

This Product can provide you a music enjoyment by wireless stream audio contents from your mobile devices such as smartphone, MP3 player tablet or PC. You can roam around the house, office or outdoor to listen great music since the product has a rechargeable battery inside. Also, you can directly connect the devices using AUX line out. The device shall support Bluetooth higher than ver.2.1.

Connecting Power and Charging

To charge battery, connect supplied USB cable to USB port of PC or DC adaptor with USB Port and the other end to Micro USB Port of the right hand side of the Product. From the connection, the internal battery will start to be charged.

 The internal battery may not be fully charged when you first open the Product. Please full charge the battery before use. Please use safety approved power adaptor.

Safety instructions

As with general electronic product, precautions should be observed during handling and use.

- Read this instruction carefully and keep it. Heed all warnings and follow the instruction.
- Do not use the Product near water.
- Clean only with dry cloth.
- Do not block front or rear grilles.
- Do not install near any heat sources such as stoves.
- Protect the power (USB) cable from pressing by heavy substances or pulled by excessive power.
- Only use on horizontal and flat place.
- Unplug the Product during lightning storms or when unused for long periods of time.
- Contact a designated AS center when the power (USB) cable damaged, spilling liquid on Product, exposing Product to rain for long time, serious damage on Product by dropping it.
- Keep away magnetic recording devices from the Product as there may be a small amount of magnetic flux leakage.
- Only use under 50°C of environment to prevent any damage to built-in battery.

Operation and indication

- Power On : Press power button.
 - With audio signal, white LED starts blinking slowly.
- Power Off : Double click the power button.
 - With audio signal, white LED is turned off.
- Volume Control : Control volume on your Bluetooth devices, as there's no volume control on this product.
- Enter Bluetooth Pairing Mode : When the Product is powered on, press and hold the power button for 3 sec.
 - With audio signal, white LED starts blinking rapidly.
- Bluetooth Pairing : Activate the Bluetooth wireless mode on your device and let the device enter search mode. Choose "Handy" from the list on your device where you can complete the pairing operation.
 - White LED turns solid with audio signal.
- Un-pairing Bluetooth : Power off the product or deactivate Bluetooth wireless mode on your device.
- Bluetooth re-connecting : When powered on, the Product is automatically paired to the most recently connected Bluetooth device.

 The product label is located on the inside of flip cover on the rear of product.