 
 


1 Fitness Board / Fitness Board

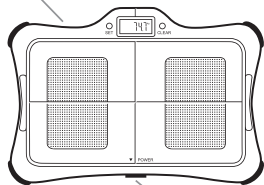

 
POWER Button
POWER-Schalter

2 Battery compartment / Batteriefach

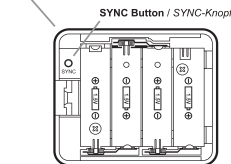

SYNC Button / SYNC-Knopf

3 LCD Display / LCD-Anzeige

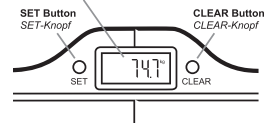

SET Button
SET-Knopf

CLEAR Button
CLEAR-Knopf

Table of content

- Important Safety Instructions
- Important Health Information
- Introduction
 - Thank you very much!
- Specifications
- Installation
- Operating Instructions
- Troubleshooting
- Cleaning Instructions
- Contact and Support
- Terms of Guarantee
- Disposal of this product at the end of its life
- Further products of the snakebyte range

Important safety instructions

- Before using your snakebyte Premium Fitness Board please read this manual thoroughly. If you comply with all instructions and tips, using the Premium Fitness Board is easy and comfortable. Please retain this manual for future reference.

- If you don't want to lose your warranty, please refrain from disassembling the Premium Fitness Board – there are no user serviceable parts inside anyway. Inappropriate handling does invalidate the warranty and leads to malfunctions of the device.

- Keep your Premium Fitness Board away from liquids and liquid containers such as vases, bottles, hot baths, jacuzzi tubs, etc. Any damage occurring from liquids invalidates the warranty.

Important Health Information

The following people should refrain from using the Premium Fitness Board or consult a doctor prior to exercising:

- People who have consumed alcohol or other substances or medicines that potentially affect their sense of balance
- Pregnant women or women who may possibly be pregnant
- People who suffer from heart or orthopaedic problems, high blood pressure and/or problems with their circulatory systems
- People with medical conditions in any general way
- People who are unaccustomed to physical exercise

Introduction

Thank you very much!

Congratulations for purchasing the snakebyte Premium Fitness Board. We really appreciate your trust in our fine products. This product was thoroughly produced under constant quality inspection and according to international quality and safety standards. Have fun with this product. If you follow this manual, set up, operation, and basic maintenance of the Premium Fitness Board is cakewalk. In case you encounter any problems exceeding this manual please contact your dealer or our friendly customer support under:

customersupport@snakebyte-usa.com

You can also contact us at

www.snakebyte-usa.com/contact_us.php

Specifications

- Premium Fitness Board for use with Nintendo Wii
- Wireless connection through advanced Bluetooth technology
- Super sleek and elegant design
- Pressure-sensitive weighing scale with four sensors
- Measures your weight and body's balance
- Solid craftsmanship for a maximum weight limit of 180 Kg
- Built-in electronic scale with LCD Display, weighs your body regardless of the Wii console
- Activity indicator lights are illuminated once pressure is applied to the board
- Compatible with Wii Fit and Balance Board

Technical data is subject to change without notice.

Installation

Included in delivery

Within the package of the snakebyte Premium Fitness Board you should find the following items:

- 1x Premium Fitness Board
- 1x this manual

If any part is missing or obviously broken please contact your dealer immediately. If there are more than the mentioned items included – congratulations!

Operating Instructions

Your Premium Fitness Board needs four AA batteries to operate. It is highly recommended to use quality Alkaline batteries for maximum operating time. (You may also use rechargeable NiMH batteries though the actual operating time of the Premium Fitness Board will be heavily shortened).

Please pay attention to the correct placement of any batteries in the Premium Fitness Board. Incorrect polarisation leads to defects which void your product guarantee, render the Premium Fitness Board inoperable, and on top may cause a horrible acidic mess.

Further more do not mix worn-out old batteries with fresh new ones or batteries of different types. Batteries should not be left in the Premium Fitness Board for extended periods of non-use in order to avoid leakage (again: horrible acidic mess, you should keep that in mind...).

Please also pay attention to the appropriate disposal of drained batteries to protect our valuable environment.

How to install batteries in your Premium Fitness Board

- Remove the battery cover
- Insert the batteries into the battery compartment, ensuring the correct placement and polarisation
- Close the battery cover

Synchronisation of the Premium Fitness Board

In order to use the snakebyte Premium Fitness Board with your Nintendo Wii it needs to be synchronised with the console. The Premium Fitness Board can only be synced with the Wii console in Standard Mode. Further more it can only be synchronised in a game, unlike a standard Remote which can be synchronised at any time.

How to sync in Standard Mode:

- Activate your Wii console
- Start a Balance Board compatible game software
- **In the game you will be prompted to synchronise your Fitness Board. Depending on the games in use this prompt may appear at different stages early in the game, for example in the options menu.**
- Press the "POWER" button on the front of your Premium Fitness Board until the Power LED lights up.
- Press the "SYNC" button inside the battery compartment of the Premium Fitness Board once. Now press and release the "SYNC" button on the console (red button behind the cover on the console's front).
- Your Premium Fitness Board's front LED will light constantly, indicating a successful hardware-handshake of Board and console.
- Only one Premium Fitness Board can be synchronised with your console at a time. It will be connected to P4.

a Wii Remote that might have been registered as P4 before will be disconnected.

- Press the "Clear" button in order to calibrate the weighing scale.

For further information regarding synchronisation please refer to your Wii console manual or the manual of your Wii Balance Board compatible software.

Calibration of the electronic scale

Your Premium Fitness Board features an electronic scale. Use the "SET" button in order to switch between two different measuring units (Kglbs). Pushing "SET" once more activates the Premium Fitness Board's timer function, which measures your current exercise session's duration. The timer will reset automatically after every session.

Use the "CLEAR" button to reset and calibrate the scale.

Troubleshooting

If you encounter any problems using the snakebyte Premium Fitness Board please read this section carefully before contacting our customer support or your dealer.

1. My Premium Fitness Board does not work correctly at all.

- Make sure your Premium Fitness Board is equipped with four new AA batteries.
- Turn off your Wii console, disconnect the AC adaptor for ten seconds and restart your Wii console. Make sure your Premium Fitness Board is synced in permanent (STANDARD) mode to the console. Please refer to the installation instructions above.
- Make sure the game you intend to play is compatible with the Nintendo Balance Board.
- You should also make sure that there are no interferences between the Premium Fitness Board's wireless Bluetooth connection and other wireless devices operating in the 2.4 GHz wave band such as WiFi routers. Ideally no devices operating in the same room as the Wii console and Premium Fitness Board should emit radio waves that could potentially interfere with the signal transfer.
- Use the Premium Fitness Board from the optimal operating distance of three metres.

2. My Premium Fitness Board's precision and reliability seem to decrease.

- Place the Premium Fitness Board on a flat indoor surface. Make sure the Board is not placed on a carpet.

3. The digital scale is imprecise and not calibrated correctly.

- Press the "CLEAR" button on the Premium Fitness Board in order to reset the scale.

4. The Premium Fitness Board is approved for a weight of up to 180 kg, but my game allows only 150 kg maximum weight.

- The Premium Fitness Board's maximum weight of 180 kg only refers to the product's mechanical construction. Game software's weight limit of 150 kg is subject to licensing restrictions by Nintendo and is not the responsibility of snakebyte Europe.

Cleaning the snakebyte Premium Fitness Board

- Clean the Premium Fitness Board with a damp cloth.
- Avoid aggressive cleaning agents, which could damage the plastic housing of the Board
- Wipe the Premium Fitness Board off with a dry cloth, making sure not to leave any water on the Board since this may lead to injuries and slipping.

Contact and support

If you still encounter problems that can not be solved by reading the section „troubleshooting“, please contact us:

Sunflex USA LLC
5632 Van Nuys Blvd., #5
Van Nuys, CA 91401

customersupport@snakebyte-usa.com

www.snakebyte-usa.com/contact_us.php

Terms of guarantee

We issue a guarantee of two years after purchase of the snakebyte Premium Fitness Board. Therefore, please preserve your invoice, e.g. together with this manual,

In order not to invalidate the warranty and to protect your health never try to repair and/or disassemble the device. There are no user serviceable parts inside anyway. On top, the danger of electric shock or even fire is reduced considerably.

The guarantee is limited to defective parts or faulty assembly of the Board exclusively, i.e. it only covers manufacturing defects.

Amongst others the following defects can not be asserted:

- basically all defects resulting from violation of this manual
- defects resulting from improper use or cleaning
- mechanical and optical flaws (e.g. scratches, broken casing caused by brute force or carelessness)
- defects caused by force majeure
- any defects caused by components that are not themselves parts of or the Board itself

Disposal of this product at the end of its life

Do not dispose of this product in your household waste. Please return it to a licensed recycling plant to ensure that its components will be recovered in compliance with the requirements of the WEEE directive (2002/96/EC).

Certifications

- ROHS
- WEEE
- CE

FCC ID :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Statement

FCC RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept

any interference received, including interference that may cause undesired operation.