


Wireless Lighting Control ZDS-200NA Dimming Switch Module (Dual mode)


USER MANUAL

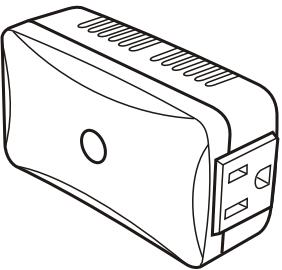

2. Plug the lamp into the ZDS-200 Z-Wave outlet. Ensure that the loading is not exceeding 330 Watts Incandescent.



3. Plug the ZDS-200 into a wall AC outlet.

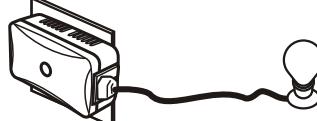


4. Press the button to turn the light ON/OFF. (This button is a toggle switch - press the button once to turn the light ON if the device is OFF and vice-versa)

5. Pressing and holding the button will control the brightness. Release the button when the desired brightness is attained. (This is also a toggle function - press and hold the button to increase the brightness. To decrease the brightness, press and hold the button again.)



6. Unplug the ZDS-200 from wall AC outlet.

 7. Switch to SWITCH mode.



5

Introduction:

Thank you for choosing the ZDS-200 (Dimming Switch Mini Module) Z-Wave control product! ZDS-200 enabled product allows users to remotely control lighting, home appliance, and make home control easy with low installation and maintenance costs. You may begin with a few Z-Wave enabled devices as well as some of our products to build up a complete home automation system. The ZDS-200 is a Z-Wave enabled device and is fully compatible with any Z-Wave enabled network. It can be configured as either a "DIMMER" or a "SWITCH" device. It allows remote Dimming or ON/OFF control of specified lamps. Each module is designed to act as a repeater, which will re-transmit a radio frequency (RF) signal by routing the signal around obstacles and radio dead spots to ensure that the signal is received at its intended destination.

Glossary

Device / Light / Node	Devices, lights and nodes are all terms to describe an individual Z-Wave device. These terms are all interchangeable when setting up your Z-Wave network.
Z-Wave Network	A collection of Z-Wave devices are controlled by primary and secondary controllers operating on the same system. A Z-Wave network has its own unique ID code so that controllers not in the network cannot control the system.
Inclusion	Add a Z-Wave device to the network.
Exclusion	Delete a Z-Wave device from the network.
Network Wide Inclusion (NWI)	Network Wide Inclusion (NWI) enables both end-user friendly, Plug and Play like Z-Wave network installation as well as professional installation scenario where the inclusion process in terms of time will be reduced significantly. NWI is a feature supported by a new frame type named Explorer which enables the Z-Wave protocol to implement Adaptive Source Routing.
Association	Association is used to organize nodes into different groups allowing the device to identify the nodes with a group identifier. These groups can also be copied to other devices.
Scene	A scene is a collection of Z-Wave devices configured to turn to a specific level, setting, mode, or perform an operation. Scenes are usually activated by a controller, timed event, or a specific condition.


1

Key Features:

- Supports Dual mode (DIMMER and SWITCH)
- Remote ON/OFF/DIM control via the Z-Wave controller
- Manual ON/OFF/DIM control with the front panel push button
- Support Scene control
- Support Association Group and Auto Report switch status
- Supports Network Wide Inclusion (NWI) and Explore Frames
- High output power in DIMMER and SWITCH mode
- Over temperature protection
- Grounded 3-wire power connection for safety
- Does not block lower outlet when plugged into upper outlet of a duplex wall receptacle

Product Overview:

A Status LED
B ON/OFF/DIMMER/PROG Push button
C Z-Wave controlled outlet
D AC plug
E Selective switch (SWITCH or DIMMER Mode)

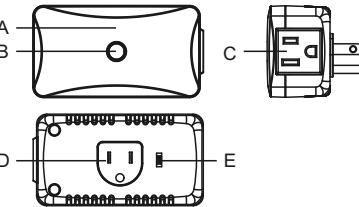


2

Installation and Warning

The incandescent light plugged into the Z-Wave controlled outlet on this module must not exceed 330 watts. DO NOT connect fluorescent light. Plugging a non-resistive load such as fluorescent light or a device with a motor into the Z-Wave controlled outlet may result in damage to the ZDS-200 Dimming Switch Module and will void the warranty.

ZDS-200 will not block the lower outlet when plugged into upper outlet of a duplex wall receptacle. Possible configurations are illustrated below.

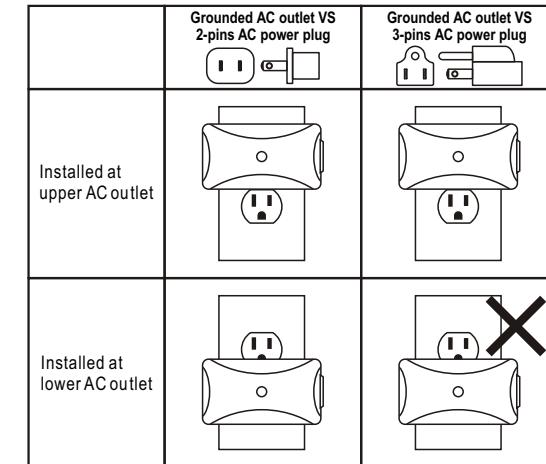

3

Basic Operation


ZDS-200 can be configured as either a "DIMMER" or a "SWITCH" device, and it will detect the operation mode using the position of the slide switch when powering on.

Warning:

- **SWITCH** Mode is required for inductive and capacitive devices unsuitable for dimming, (e.g. fluorescent lamps, motors etc.). The dimming function will be disabled in this mode.
- It could damage the ZDS-200 if connected to non-dimmable load and perform dimming function in DIMMER mode!


The connected device can be turned ON in two ways:

1. Manual control with the push button on the ZDS-200.
2. Z-Wave remote controller.

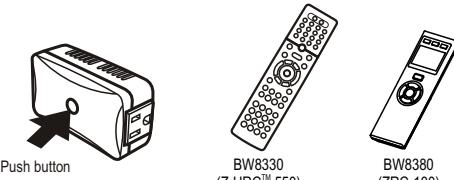

Manual ON/OFF/DIM function

 1. Switch to DIMMER mode.



4

8. Plug the lamp into the ZDS-200 Z-Wave outlet. Ensure that the loading does not exceed 330 Watts Incandescent or 500 Watts Resistive Load.


8. Plug the lamp into the ZDS-200 Z-Wave outlet. Ensure that the loading does not exceed 330 Watts Incandescent or 500 Watts Resistive Load.
9. Plug the ZDS-200 into a wall AC outlet.
10. Press the button to turn the light ON/OFF. (This button is a toggle switch - press the button once to turn the light ON if the device is OFF and vice-versa)

Z-Wave setup and operations

ZDS-200 can be configured as either a "DIMMER" or a "SWITCH" device, and it will detect the operation mode using the position of the slide switch when powering on. The ZDS-200 will stay in the selected operation mode after inclusion process, and it will not respond to the slide switch selection after removing and re-adding power. If the user needs to change the operation mode, the user must first perform an exclusion process. The user will then switch to the target operation mode (Dimmer or Switch), and re-include the ZDS-200 afterwards.

Warning:


- **SWITCH** Mode is required for inductive and capacitive devices unsuitable for dimming, (e.g. fluorescent lamps, motors etc.). The dimming function will be disabled in this mode.
- It could damage the ZDS-200 if connected to non-dimmable load and perform dimming function in DIMMER mode!

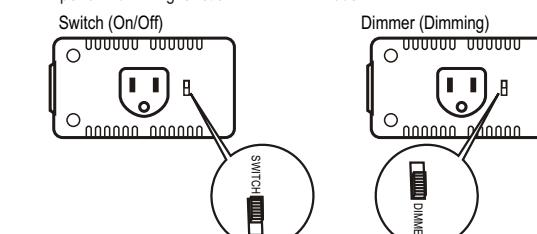

5

6. Unplug the ZDS-200 from wall AC outlet.

 7. Switch to SWITCH mode.



6

Z-Wave Remote Control

Include or exclude the ZDS-200 from the existing Z-Wave home control network with your primary controller.

- Refer to your primary controller instructions to process the inclusion / exclusion setup procedure.
- When prompted by your primary controller, triple click the PROG button within 1 second. (The unit will enter classical inclusion/exclusion first, then jump to NWI, and after 5 seconds, it will finally exit NWI mode automatically if there is no inclusion/exclusion request.)
- The primary controller should indicate that the action was successful. If the controller indicates the action was unsuccessful, please repeat the procedure.
- Once the unit is part of the network, the same basic procedure is used to add the same unit to a group or scene. Refer to the primary controller's instructions for more details for adding/removing the unit to/from the scene/association.

All configuration parameter values will keep no changes after excluding the unit from the network, except for the parameter number 1 and Association information.

Z-Wave Configuration Parameters

Different user has different preferred settings of their thermostat, you may use the below configuration parameters to change settings of corresponding functionality.

Definitions:	Activate/Deactivate units to ALLON/OFF
Parameter No.:	1 (0x01)
Parameter value:	0 (0x00) - ALL ON is not active, ALL OFF is not active 1 (0x01) - ALL ON is not active, ALL OFF active 2 (0x02) - ALL ON is active, ALL OFF is not active 255 (0xFF) - ALL ON is active, ALL OFF is active
Default Value:	255 (0xFF)
Dimmer Mode:	Supported
Switch Mode:	Supported

7

Definitions:	Switch returns to the last position saved before power failure
Parameter No.:	5 (0x05)
Parameter value:	0 (0x00) - Switch does not save the state after power failure, device returns to "off" position 1 (0x01) - Switch saves its state before power failure
Default Value:	1 (0x01)
Dimmer Mode:	Supported
Switch Mode:	Supported

Definitions:	Double click option (set to max. brightness)
Parameter No.:	13 (0xD)
Parameter value:	0 (0x00) - Double click function disabled 1 (0x01) - Double click function enabled
Default Value:	1 (0x01)
Dimmer Mode:	Supported
Switch Mode:	-


Definitions:	Time of moving the Dimmer from 0% to max. dimming values.
(The ZDS-200 will implement the dimming duration if received this parameter value from controller/gateway. Otherwise, the ZDS-200 will implement the local parameter value)	
Parameter No.:	17 (0x11)
Parameter value:	Dimmer Mode From 0 to 5 seconds Step size = 1 second
Default Value:	3 (0x03)
Dimmer Mode:	Supported
Switch Mode:	-

8

Definitions:	Maximum Dimmer level control (refer to Figure 1 and Notes)
Parameter No.:	18 (0x12)
Parameter value:	2 (0x02) to 99 (0x63) %
Default Value:	99 (0x63)
Dimmer Mode:	Supported
Switch Mode:	-

Definitions:	Minimum Dimmer level control (refer to Figure 1 and Notes)
(Below is the recommendation for different loads.	
AC motors:	
Parameter no. 18 max. = 99%	
Parameter no. 19 min. >= 60%	
Fluorescent lamps, fluorescent tubes, non-dimmable LED:	
Parameter no. 18 max. = 99%	
Parameter no. 19 min. = 98%	
Remark:	
1) The maximum level must not be lower than the minimum level.	
2) Parameter no. 17 MUST set to 0]	
Parameter No.:	19 (0x13)
Parameter value:	1 (0x01) to 98 (0x62) %
Default Value:	13 (0x0D)
Dimmer Mode:	Supported
Switch Mode:	-

9

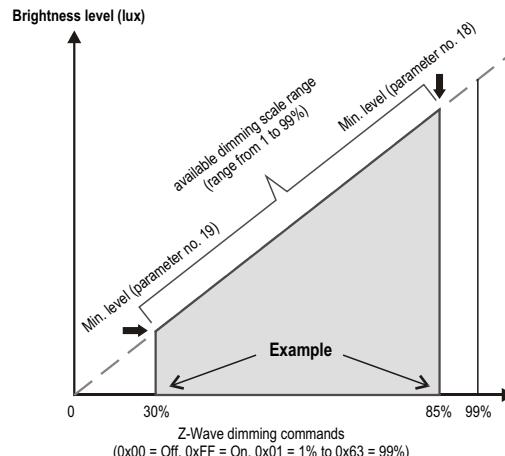

Notes:
In order to avoid flickering and to support non-dimmable devices, the ZDS-200 provides parameter no. 18 and 19 (max. and min. dimmer level control). If there is flickering, the user can re-configure the max. and min. level for the dimmer to skip the flickering at min. or max. level.

Example Procedure:
Step-1: Set the maximum value to 99 (99%) - parameter no. 18.
Step-2: Set the minimum value to 1 (1%) - parameter no. 19.
Step-3: Go back to normal operation mode for dimming.

10

Step-4: User is required to distinguish the flickering points by adjusting the dimming level on controller, such as gateway or ZRC-100. User can adjust the brightness level upwards/downwards from 50% until the flickering point is distinguished.

Step-5: Set the maximum value to 85 (e.g. 85%) for parameter no. 18 (Max).
Step-6: Set the minimum value to 30 (e.g. 30%) for parameter no. 19 (Min).
Step-7: Keep this setting as the new default. This way, user will avoid flickering as a result from low or high outputs from this dimmer.

ZDS-200 also can act as a "Switch" with parameter no. 17, 18 and 19. The "Switch" function is required for inductive and capacitive devices unsuitable for dimming (e.g. fluorescent lamps, motors etc.).

Support for Association Groups

ZDS-200 supports 2 association groups. A maximum of 1+4 node ID's (non-multi-channel devices) can be assigned to these association groups.

Association group_1:

- Association group_1 is used to report status changes such as AUTO report to gateway. (Max. 1 node ID can be assigned to this association group)

ZDS-200 will trigger AUTO report function if the Dimmer or Switch status had been changed.


Association group_2:

- Dimmer mode: After receiving a dimming command from a local switch or gateway (e.g. 50%), the ZDS-200 will automatically send out a related basic set command (e.g. 50%) to its associated group.
- Switch mode: After receiving a basic set command from a local switch or gateway, On (0xFF) or Off (0x00), the ZDS-200 will automatically send out a related basic set command, On (0xFF) or Off (0x00) to its associated group. (Max. 4 node ID's can be assigned to this association group)

Please refer to your controller's instructions for information on whether or not it supports the Association function.

11

Operation diagram for Association Groups:

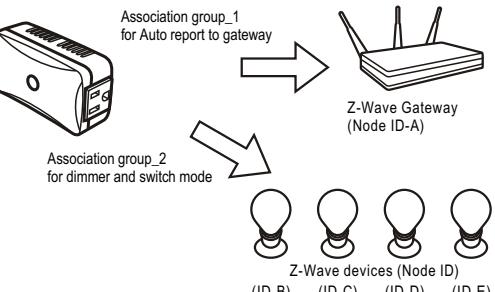

No. of Node ID in Association Group_1: 1 max. (AUTO report)
No. of Node ID in Association Group_2: 4 max.

User can assign 0 to 4 node ID's (from node ID-B to ID-E) to its association group_2.

Function example: ZDS-200 will send out a control command to Association group_2 devices when ZDS-200 status had been changed.

ALL ON/OFF functions

Depending upon your primary controller, the ZDS-200 can be set to respond to ALL ON and ALL OFF commands up to four different ways. Some controllers may not be able to change the response from its default setting. Please refer to your controller's instructions manual for information on whether or not it supports the configuration function and if so, how to change these settings.

12

The four possible responses are:

- It will respond to ALL ON and the ALLOFF commands (default).
- It will not respond to ALL ON and ALL OFF commands.
- It will respond to the ALL OFF command but will not respond to the ALL ON command.
- It will respond to the ALL ON command but will not respond to the ALL OFF command.

LED Indication Status

Operations	LED Indication Status
Device load turned on	LED turns on.
Device load turned off	LED turns off.
Device load dimming	LED keep in previous stage.
Device not currently paired into a Z-Wave network	LED will continuously flash two times per second.
Learning / NWI mode: Triple click on PROG button	If the device already existing in the network, LED will flash slowly for 2 seconds, and then return to previous ON or OFF stage. If the device does not exist in the network, LED will keep flash slowly and waiting for Network Wide Inclusion (NWI). (The device will exit NWI mode automatically after 5 seconds)
Receive command / Send command or data	LED will flash 2 times, and then return to previous ON or OFF stage.
Configure command error	LED will rapidly flash 6 times, and then return to previous ON or OFF stage.

13

Restoring Factory Defaults

All Configuration Parameter values and Association information will be restored to factory default settings and excluded from the network.

Step	Setup Key	LED Indication Status
1	Press and keep holding the PROG button for no less than 10 seconds.	- LED state will toggle for first 5 seconds of being pressed. - LED state will toggle again after the remaining 5 seconds.
2	Release the PROG button then triple click the PROG button within 2 seconds of step 1.	- LED will stay in previous ON or OFF stage.

Wireless Information

Wireless range:

This device has an open-air line-of-sight transmission distance of 30m, which is compliant with the Z-Wave standards. Performance can vary depending on the type of obstacles, such as walls and furniture, between the Z-Wave devices. Every Z-Wave device set up in your network will act as a signal repeater, allowing them to talk to each other and to find alternate routes in the case of reception dead spots caused by these obstacles.

Radio Frequency Limitations:

1. Each wall or object (i.e.: refrigerator, bookshelf, large TV, etc) can reduce the maximum range by up to 20-30%. Plasterboard and wooden walls will have less effect on the signal than concrete, brick, or tile.
2. Wall mounted Z-Wave devices will also suffer a loss of range if they are housed in metal junction boxes, which could reduce the range by up to 20-30%.

Maintenance

1. Do not expose your unit to dust, strong sunlight, humidity, high temperatures or mechanical shocks.
2. Do not use corrosive or abrasive cleansers on your unit.
3. Keep the unit dust free by wiping it with a soft, dry cloth.
4. Do not disassemble your unit; it contains no user-serviceable parts.

14

Technical Specifications

Model no.	BW8130US (ZDS-200NA)
RF frequency	908.42MHz
Input voltage / frequency	120Vac / 60Hz
RF operating distance	up to 30m (line of sight between the Wireless Controller and the closest Z-Wave receiver module at open area)
Max. output power	DIMMER: Max Incandescent load 330W 2.75A SWITCH: Max Incandescent Load 330W 2.75A Max Resistive Load 500W 4.16A
Over Temperature protection	Detected internal temperature, and cut off output once OTP triggered. (Remark: Under over loading or temperature situation, it will fail to start up).
Dimension (L x W x T)	100 x 54 x 39mm
Weight	125g
Storage Temperature	-10~60 °C
Operation Temperature	0~40 °C
Relative Humidity:	5~95%
Environment	Indoor use only

Note: Specifications subject to change without notice due to continuing product improvement.

Certifications

UL Listed:

This power unit is intended to be correctly orientated in a vertical or floor mount position.

FCC Information

FCC ID : 2ADPEDA011

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with RSS-310 of Industry Canada. Operation is subject to the condition that this device does not cause harmful interference

IC information
IC : 12524A-DA011
This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with RSS-310 of Industry Canada. Operation is subject to the condition that this device does not cause harmful interference

Warnings

- To avoid the risk of electric shock, the input prong comes with a round grounding plug. The switch module can only be plugged in to the power inlet with the grounding plug. Please contact a qualified electrician to replace the power inlet if it has no grounding inlet. Do not change the plug of this unit in any way.
- Do not modify the unit in any way.
- Risk of fire.
- Risk of electrical shock.
- Risk of burns.
- This unit never got qualified certificate to supply power for medical instrument or any life support equipment.
- Do not dispose of electrical appliances and unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available.
- There are no user serviceable parts in this unit.

REMOTE shall not be liable for:

- Damages caused by defective devices for indirect, incidental, special, consequential or punitive damages, including, inter alia, loss of profits, savings, data, loss of benefits, claims by third parties and any property damage or personal injuries arising from or related to the use of the device.
- Service trips to provide instruction on product use.
- Shipping costs for replacement products.

Warranty

ONE-YEAR LIMITED WARRANTY: Remotec warrants this product to be free from defects in materials and workmanship under normal use and service for a period of one year from the original date of purchase from the distributor or dealer.

This warranty is limited to the repair or replacement of this product only, if the purchase date cannot be substantiated, the warranty period will begin on the date of manufacture as indicated on this product. All warranty claims must be made to Remotec appointed distributors or dealers during the applicable warranty period. This warranty gives you specific legal right and you may also have other rights which vary in each country. Please contact Customer Service at:

Remotec Technology Limited
E-mail: rtsales@remotec.com.hk
http://www.remotec.com.hk

15

16

17

Printed in China

18

F820-8130-0000

19